

# FineIn Tag

## User Manual



FineIn Tag User Manual

### Index

- 01 Getting Started
- 02 Add Your FineIn Tag
- 03 Locate Your FineIn Tag
- 04 Notifications
- 05 When Your FineIn Tag Is Lost
- 06 Resetting FineIn Tag
- 07 Extras
- 08 The Fine Print

## 01 Getting Started

### 01.1 Power On / Off:

- Press the FineIn Tag Function Button once to turn it on. It should beep once to indicate that it is powered on.
- To power off, hold the same button for at least three seconds. You will hear two beeps to indicate that your FineIn Tag is powered off.

### 01.2 Check For Updates:

- To use the Find My app to locate this FineIn Tag, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find Items app on Apple Watch® requires the latest version of watchOS®.

FineIn Tag User Manual

## 02 Add Your FineIn Tag

### 02.1 Start The App

- Open Find My™ app on your supported iPhone or iPad.

### 02.2 Connect Your FineIn Tag

- Press the function button once to power on your FineIn Tag.
- Tap+, then "Add Other Item".
- Once your FineIn Tag is located, tap "Connect".
- Enter a name and choose an emoji for your and tap "Continue".
- Find My™ will ask for confirmation to add your FineIn Tag to your Apple ID. Tap "Agree".
- Tap "Finish" and your FineIn Tag will be set up and ready to be used.

FineIn Tag User Manual

## 03 Locate Your FineIn Tag

### 03.1 Find FineIn Tag When It's Nearby:

- Open Find My™ app and select the "Items" tab or open the Find Items app on your Apple Watch.
- Tap on your FineIn Tag from the list.
- Tap "Play Sound" to make your FineIn Tag beep.
- Tap "Stop Sound" to stop the beeps once you find.

### 03.2 Find FineIn Tag's Location:

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.
- Tap on your FineIn Tag from the list.
- Your FineIn Tag's location will appear on the map with a time stamp of when the item was located.
- To navigate to the FineIn Tag's location, tap "Directions" to open Apple Maps.

FineIn Tag User Manual

## 04 Notifications

### 04.1 Enabling "Notify When Left Behind":

- Open Find My™ app and select the "Items" tab or open the Find Items app on your Apple Watch.
- Tap on your FineIn Tag from the list.
- Under "Notifications" enable the "Notify When Left Behind" toggle.
- You will receive a notification when you leave your FineIn Tag behind and it's no longer in range of your device.
- You will receive a notification when you leave your FineIn Tag behind and it's no longer in range of your device.

### 04.2 Enabling "Notify When Found":

- Under "Notifications", enable the "Notify When Found" toggle.
- When your FineIn Tag is seen by another Find My network device, you will receive a notification of its location.
- Note: "Notify When Found" can only be activated when your FineIn Tag is out of range.

FineIn Tag User Manual

## 05 When Your FineIn Tag Lost

### 05.1 Enabling "Lost Mode":

- Open Find My™ app and select the "Items" tab or open the Find Items app on your Apple Watch.
- Tap on your FineIn Tag from the list.
- Under "Lost Mode" tap "Enable".
- A screen detailing Lost Mode will pop up, tap "Continue".
- Enter your phone number or email address and tap "Next".

- You may enter a message that will be shared with the person that finds your item.
- Tap "Activate" to enable "Lost Mode".
- Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled.
- Note: When "Lost Mode" is enabled your FineIn Tag is locked and cannot be paired to a new device.

FineIn Tag User Manual

## 06 Reset FineIn Tag

### 06.1 Remove The FineIn Tag From Find My™ App:

- Open Find My™ app and select the "Items" tab.
- Tap on your FineIn Tag from the list.
- Please ensure "Lost Mode" is disabled.
- Scroll to the bottom of the screen and tap "Remove Item".
- A summary will open, tap "Remove" to confirm.

### 06.2 Factory Reset Your FineIn Tag:

- After successfully removing the FineIn Tag from Find My™ app, press the iTag's function button four times rapidly and then hold it a fifth time until you hear a ringing chime.
- The FineIn Tag is now reset and ready to be paired to a new Apple ID.

FineIn Tag User Manual

## 07 Extras

### 07.1 Replace The Battery:

- Slide the opening slider on the back of your FineIn Tag to carefully open the shell.
- Replace the battery with a new CR2016 battery placing it positive side up (text facing up).
- Carefully close the iTag by aligning the top hole on both sides.

### 07.2 Unwanted tracking:

- If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:

- If you have an iPhone, iPad, or iPod touch, Find My will send a notification to your device to let you know it's available (iOS 14.5 or later).
- If you don't have an iOS device or a smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.

These features were created specifically to discourage people from trying to track you without your knowledge.

FineIn Tag User Manual

## 08 The Fine Print

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: Unintended modifications or changes to this equipment may void the user's authority to operate this device. The device complies with general RF exposure requirements. The device can be used in portable equipment. The device complies with FCC Radiation Exposure Statement. Power is so low that no RF exposure calculation is needed.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Use of the Works with Apple badge means that a product has been designed to work specifically with Apple Find My network products. The Works with Apple badge is used by the product manufacturer to meet Apple Find My network product specifications and requirements. The Works with Apple badge does not mean that the product or its compliance with safety and regulatory standards. Use of the Works with Apple badge means that a product has been designed to work specifically with Apple Find My network products. The Works with Apple badge is used by the product manufacturer to meet Apple Find My network product specifications and requirements. The Works with Apple badge does not mean that the product or its compliance with safety and regulatory standards. Apple Find My, Apple Watch, Find My, iPhone, iPad, iPod touch, iPod, Mac, macOS and watchOS are trademarks of Apple Inc. iOS is a trademark of Cisco and is used under license.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
--Reorient or relocate the receiving antenna.  
--Increase the separation between the device and receiver.  
--Connect the device into an outlet on a circuit different from that to which the receiver is connected.  
--Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

## Anti-lost Device

Model No.: ST17H6X-F01

Power Input: DC3V , 0.15A

FCC ID: 2BD4U-FINEIN

Shen Zhen Zhi Tong World Electronics Co., Ltd.

