


Label and Location

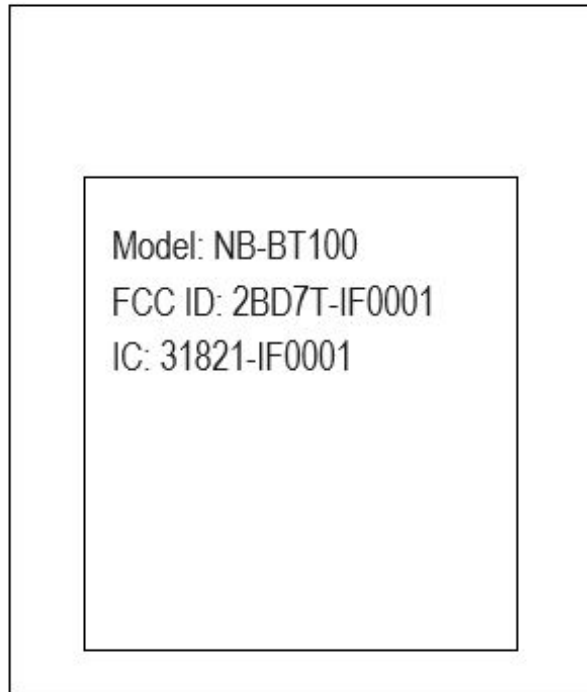

Note: The label location is on the shielding cover. Please refer to EUT External Photograph for details.