

 OUTDOOR TECH.

RANGE

# XL RUGGED SPEAKER

Hi

 
Good call on picking up the Outdoor Tech®  
The Range wireless speaker.  
Your experience of the universe will soon be  
enhanced powerfully. This manual exists to  
help make sure that you use them correctly,  
so you're definitely going to want to relax  
for a hot second and look through this.

Kisses,

 OUTDOOR TECH.




## ANATOMY

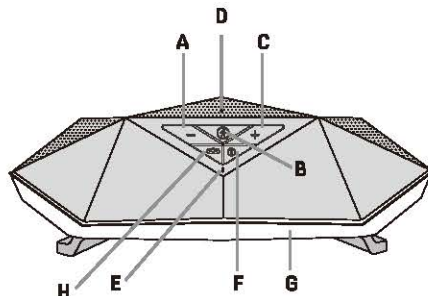

- A. Volume Down / Skip Back
- B. Power On / Power Off Multifunction Button (MFB)
- C. Volume Up / Skip Forward
- D. Microphone
- E. LED Indicator
- F. Lantern Button/EQ swift
- G. Lantern Lamp Base
- H. TWS Pairing Button

## ANATOMY (CONTINUED)

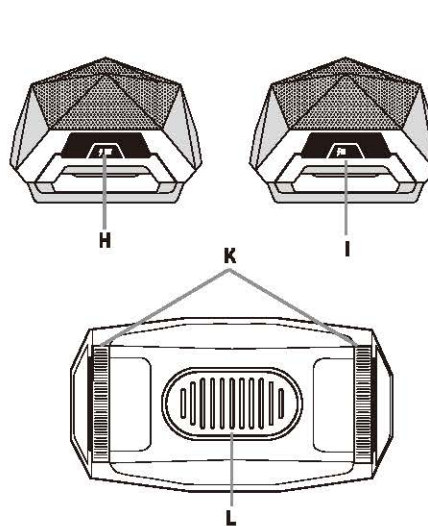 

- H. USB-C Output
- I. USB-C Input
- K. Grab Handles / Mounting Bars
- L. Passive Bass Port

## POWER UP



### TO CHARGE

For best results, fully charge your Range before use!

1. Connect the included USB-C cord to a power source and the charging port on the Range
2. The red LED stays solid until charged, then shuts off. (Full charge time is about 4 hours.)

### Battery Notifications

Voice prompts:

 
Notification	Voice Prompt	Indicator Light
Charge Me (critically low)	"charge me" 1x	Red LED Flashes every 2 sec
Low Battery	"low battery" 1x	No Light
Battery High	"battery high" 1x	No Light

## BUTTON FUNCTIONS



FUNCTION	BUTTON	ACTION
Power on		Press & hold 2 sec
Power off		Press & hold 2 sec
TWS Pairing		Short Press 1x
hi-jack mode		Press & hold simultaneously for 2 sec
Play/Pause		Short press once
Volume up		Short press once
Volume down		Short press once
Skip forward		Press & hold for 2 sec
Skip backward		Press & hold for 2 sec
answer call/end call/reject call		Short press once
Siri/voice activation		Short press 2 times
Lantern on/change mode		Short press once
EQ swift Outdoor/Indoor		Long press once

## PAIRING TO DEVICE

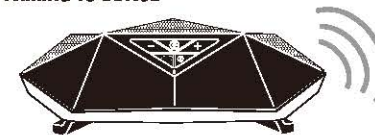

### Enter Pairing Mode (Automatic)

When powered on the blue LED light will flash every second, this indicates that the speaker is in pairing mode. Then it will shut off when connected. Voice Prompt: "Pairing".

### Pairing The Range to Device

Open the Bluetooth settings on your device. If you have put your Range into pairing mode, it should be listed as "ODT Range" as an available device to pair. Connect with the Range. The voice prompt will state "Paired" when the "ODT Range" and your device are connected.

 
### Hi-Jack Mode

Press the Plus and Minus buttons at the same time, (press and hold for 2 seconds) voice prompt: "pairing". Blue LED flashes every 1 second. LED Light will shut off when connected.

### Connection Lost


When speaker loses connection, voice prompt: "disconnected". Blue LED stays on until auto connection or auto shut down occurs.

## SPEAKER TO SPEAKER PAIRING

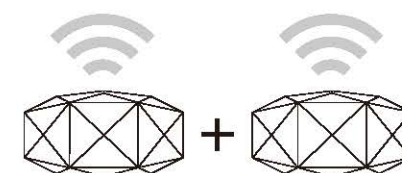

The Range #1

 The Range #2

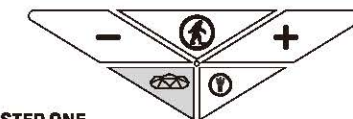

### STEP ONE

#### Power On

Hold the Power Button for 2 seconds blue LED light will be solid then shuts off. The voice prompt states "Power on".

 
### STEP TWO

#### Pairing to another speaker

Press the Pairing button (short press 1x). Blue LED flashes 2x, pauses 1 sec, then repeats. LED Light will shut off when connected.

After a few seconds both speakers will state "Paired."

## POWER BANK FEATURES

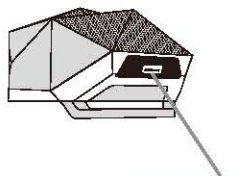

USB-C OUTPUT  
CHARGING PORT  
(5V/1A)

## TO CHARGE YOUR DEVICES

1. Connect the USB-C cable to the Range's output port.
2. Connect the other port to your device.
3. Your device should automatically start charging.
4. When the your device is fully charged, disconnect the Range

## LISTEN



 
The Range is built to go anywhere, but for optimal sound quality follow the steps below:

- Make sure the Range is resting on its base and facing upwards.
- When connected wirelessly via Bluetooth, it's best to turn the volume on your phone/device fully up and when you use the volume control (-/+ ) on the Range

## MUSIC FUNCTION



Music/Device Controls

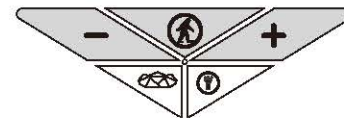

FUNCTION	BUTTON	ACTION
Play / Pause		Short press once
Volume up		Short press once
Volume down		Short press once
Skip forward		Press & hold for 2 sec
Skip backward		Press & hold for 2 sec

When user reaches max volume by pressing the Volume Up (+) button, voice prompt will state "maximum volume".

(Volume increments 0-15)

## PHONE FUNCTIONS



Microphone

 


Phone/Device Controls



FUNCTION	BUTTON	ACTION
Answer an incoming call		Short press once
Reject an incoming call		Long press once
End call		Short press once
Siri/Voice activation		Short press 2x

## LIGHT FEATURE

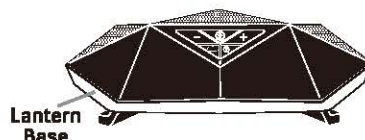

- LANTERN BASE FEATURE:**
- Short Press 1x ON/ Solid white
  - Short Press 1x brighter solid white
  - Short Press 1x solid red
  - Short Press 1x solid blue
  - Short Press 1x solid green
  - Short Press 1x multicolor beating
  - Short Press 1x OFF/no light
  - Long Press 1x to change EQ mode

## SPECS



- Waterproof Rating: IPX7
- Bluetooth Version: 5.3
- True wireless - pair up to 2 speaker
- Play time: 8 hrs (mid volume)
- Standby Time: up to 700hrs
- Charging Time: approx. 4 hrs
- Speaker size: 70mm
- Speaker sensitivity: 78 +/-3dB
- Speaker Impedance: 6Ω
- Speaker Max Output Power: 30W
- Speaker Frequency Range: 100Hz-20Hz
- Operating Temperature:  
Charging: 0°C~40°C, 80±25%R.H.;  
Discharging: -20°C~60°C 60±25%R.H.\*
- Storage Temperature: -20°C~25°C 60±25%R.H.
- Charge Input: USB-C 5V/2A
- Charge Output (power bank only): USB-C 5V/1A
- Battery Info: Li-ion 7.4V 4000mah, 28.6Wh
- Pairing code or PIN: 0000 if requested by the phone
- Product Features: Answer call, end call, reject call, volume control, track control, Play/pause music, Siri/Voice activation, TWS

## TROUBLESHOOTING

- Distortion**
- Lower the volume on your Range and/or phone/device.
- Make sure its charged up. Check for low battery, then charge if necessary.
- Not Loud Enough**
- Turn up the volume on your phone/device or your Range
  - Make sure it's charged up.
- Unable to Pair**
- Confirm your phone/device is Bluetooth compatible.
  - Re-pair: Follow pairing instructions in this guide.

## Signal Loss or Dropouts via Bluetooth

- Move Range closer to your phone/device.
- Make sure it's charged up.
- Turn off your Range and phone/device, then power up and reconnect.

## DON'T BE SO ANTISOCIAL



Facebook.com/outdoortechology  
Twitter & Instagram: @outdoortech

Questions, comments, complaints, secret desires, or just to say what's up: email info@outdoortech.com

K bye.



www.outdoortech.com

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.