

128.00 mm



WIRELESS NOISE CANCELLING HEADPHONE



 
Good call on picking up the Outdoor Tech Orbit Wireless Noise Cancelling Headset. Your experience of the universe will soon be enhanced wirelessly. This manual exists to help make sure that you use it correctly, so you're definitely going to want to relax for a hot second and look through this manual.



Adjustable Slider


Folding Bracket

Feedforward Mic

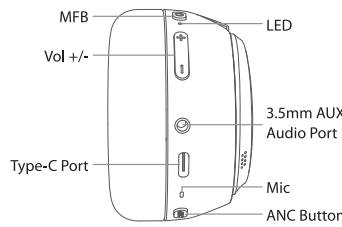


Above pictures are for reference only yet practical product may vary

 
Power on headphones and they will automatically be in pairing mode. On your phone, search ODT Orbit in your Bluetooth menu and tap connect. Orbit will automatically reconnect to the last device in its connectivity record. If you need to put them in pairing mode again, power them down and press and hold the multi-function button for 4 seconds.

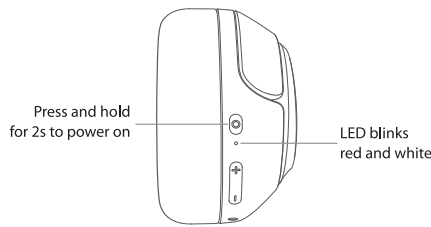

 
Connect the Orbit Headphones to Device A and then turn off the Bluetooth on Device A. Orbit will automatically go back into pairing mode (LED blinks red and blue). On Device B search for ODT Orbit in the Bluetooth menu and tap to connect. Now turn Bluetooth back on for Device A and connect to the headphones once more.

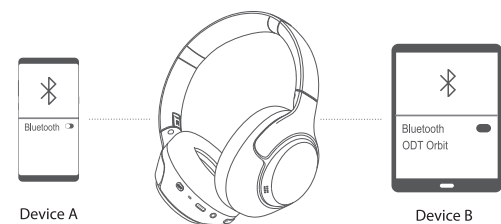

   
Power on headphones, press and hold both volume + and – for 10 seconds or until LED blinks red 3 times to reset to factory settings. Orbit will then automatically go into pairing mode.

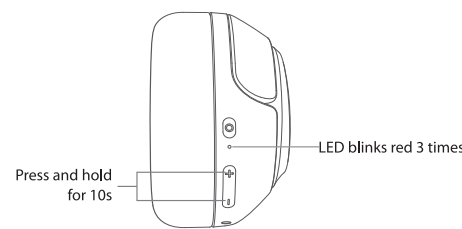



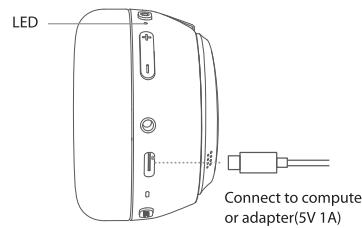



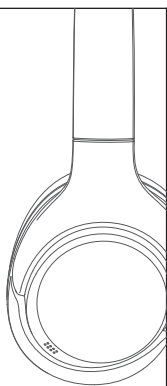





Connected: LED blinks white every 10s
Charging: LED glows solid red
Top-up: LED glows solid white



A diagram of the back of the Sony WH-1000XM4 headphones. Labels on the left point to specific controls on the right side of the headband: 'MFB' (Microphone Flip Button) at the top, 'Volume +/-' (Volume Up/Down buttons) below it, '3.5mm AUX Audio Port' (a circular port) below that, and 'ANC Button' (a small square button) at the bottom.



-  Power-on: Hold MFB for 2s
-  Power-off: Hold MFB for 4s
-  Answer/end call: Press MFB
-  Ignore call: Hold MFB for 1.5s
-  Skip track backward: Hold Volume+ for 1s
-  Skip track forward: Hold Volume+ for 1s
-  Volume up: Press Volume+
-  Volume down: Press Volume-
-  Voice assistant: Triple press MFB
-  Playback/pause: Press MFB
-  Gaming mode: Double press MFB
-  Switch mode: Press ANC Button to switch among ANC ON, ANC OFF and Transparency.
In ANC ON, double press ANC Button to turn on/off ANC Adaptive.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cet appareil contient licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS(s)/Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes :

- (1) Cet appareil ne doit pas causer d'interférences.
- (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

1. Before using the headphones, please read the manual carefully and keep for future reference.
2. It is best to fully charge the headphones prior to first time use.
3. If headphones are left unused for two weeks or more, please fully recharge before using.
4. Please only use chargers made by qualified manufacturer.
5. If the headphones are not found by your phone, please put them back into pairing mode, and toggle Bluetooth off and then on again and retry.
6. To protect the headphones from basic wear and tear, please fold them carefully and store them in the provided hardshell case.

1. Never disassemble or modify your headphones for any reason.
2. Do not store headphones in extreme temperatures (under 0°C or over 45°C).
3. Do not use headphones during thunderstorms to avoid malfunction or risk of electric shock.
4. Do not use harsh chemicals or strong detergents to clean headphones.

Note: Extended use of over-ear headphones can cause damage to hearing.

Download our Sound Adapt App in the App store for iPhone and Google Play Store for Android

<https://www.outdoortechnology.com/pages/user-manuals>

<https://www.outdoortechnology.com/pages/user-manuals>

<https://www.outdoortechnology.com/pages/user-manuals>

80x128mm 80g哑粉过哑油 风琴折 正背印刷