

SWITCH WIRELESS CONTROLLER

Getting Started

- Make sure you read this guide, before using the Wireless controller.
- Reading this guide will help you learn to use the controller properly.

 


1. Pack Contents

- 1 x Switch controller
- 1 x 1.2 M Charging Cable
- 1 x User Manual


2. Products Features

- Wireless Controller for Switch.
- Includes 4 LED indicators to indicate the connection port(player number) and the battery low power status.
- Sleep Function, automatic POWER OFF.
- 600mAh rechargeable battery pack, it is charged using the type-c plug in the controller.
- Wide range: up to 8m approx.

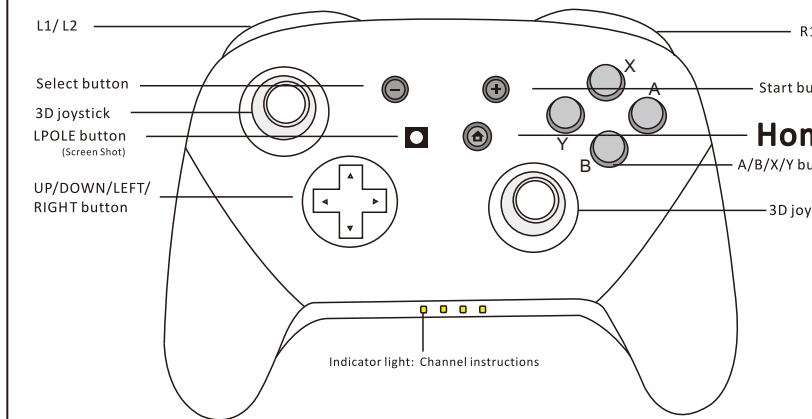

3. How to complete the first connection

 - At the first time of connecting this controller to Switch, you have two Options.
- Option 1 : Via Type-C cable
 - 1) Connect this controller to the dock by a type-c cable, wait till one channel light keep on
 - 2) Plug out the type-c cable , controller channel light will flash (waiting to pair), wait till one channel light keep on, then connection succeed.

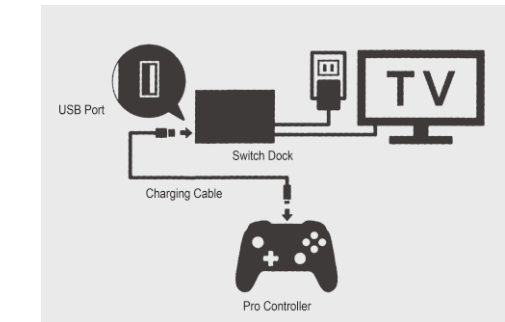

- Option 2: Wireless connection
 - 1) Please operate your console as following: System Settings -----> Controllers and Sensors -----> Change Grip/Order.
 - 2) Long press controller Home button for 5 seconds channel light will flash (waiting to pair). wait till one channel light keep on, then connection succeed.

4. TROUBLE SHOOTING for first connection

- Solution 1: When your controller has been connected, please just press [A Button] **one time** to confirm.
- If you press two times A button, controller connected will be disconnected.
- **[Change Grip/Order]** means disconnect all the controllers that has been connected.

5. How to wake up your controller

- when controller is in the status of powering off, you should wake up your controller with short press Home , LED channel light 1-4 will blink

6. Automatic Power off & Sleep Function

Status	Operation
When connecting the switch for the first time	If the first connection can't be completed, after 60 seconds, controller will automatic shutdown
When the controller is connected	Long Press HOME on controller for 5 seconds to shutdown the controller
When the controller is connected	Within 5 minutes without any operation controller will automatic shutdown

7. Battery Warnings

- This controller works ONLY with the battery pack LI-ON 3.7V/600mAh built-in.
- Do not use the product if it appears to be damaged or leaking, showing discoloration, shape or any other changes.
- If battery leakage occurs avoid contact with skin, cloths, and wipe off any deposit. If contact occurs, immediately wash thoroughly and check with a doctor.
- Make sure you keep the controller, clean and dry, away from liquids, dust and dirt. Do not expose it to extreme weather conditions (heat and cold) or extreme fluctuations in air moisture.
- This product is ONLY for HOME use only. Recycle it accordingly, not into domestic waste.

8. Reset function

- * When the controller is out of order, which can be reset by poking the reset key at the back of it



9. Charging Indicator

Status	Changing	Fully charged
When inserting adapter, with controller connecting with switch	Corresponding channel light blink	Corresponding channel light is always on
When inserting adapter, with controller disconnected from switch	LED 1-4 Blink	LED 1-4 go off

10. Specification

Battery	Built-in polymer lithium battery
Battery capacity	1300mAh
Battery using time	About 20 hours
Charging time	About 2 hours
Charging method	USB DC 5V
Charging current	< 400mA
External dimensions (width x height x depth)	Approx. 157 x 110 x 57mm
Mass	Approx. 200g
Charging port	Type C
vibration function	Supports double motor

11. How to upgrade your switch controller

- When Nintendo updates the system in the future, in order to prevent mismatch between system and controller . We'll also provide upgrading programmes
- Note: If your controller work well with NS Switch, DO NOT update your controller, which maybe cause controller's system confusion
- We'll upload the programme and data to the website as below
Website: www.haihonggames.com

Nintendo and Switch are registered trademark or a trademark of Nintendo Inc. in the Japan and/or other countries. This product is not designed, manufactured, approved, sponsored or endorsed by Nintendo. All trademarks belong to their respective owners.



MADE IN CHINA

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.