

6+

OPERATING INSTRUCTIONS

Contents

1 Slideways Racer 1 Remote Control 1 USB-C Cable

Battery Charging or Installation

CAUTION:

 
If the rechargeable battery leaks fluid, dispose of the stunt vehicle immediately. Do not allow fluid to come in contact with skin or eyes.

Vehicle:

1. Make sure the power switch located on the top of the vehicle is turned to the off position.
2. Insert the USB-C charging cable into the port located at the bottom of the vehicle.
3. Connect the other end of the USB-C charging cable into your charging source.
4. Note: The average charging time is approximately 80 minutes (via 5.0V/2A USB wall charger). The red LED on the car will light up while charging and will turn off when fully charged.

Remote control:

1. Use a tool to press and hold the battery cover release.
2. Slide down the battery cover and remove it.
3. Insert 2 AAA 1.5V batteries (not included) as indicated in the diagram.
4. Slide the battery cover back into place securely.

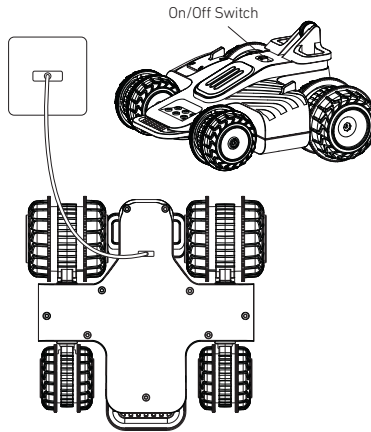

To power on the vehicle, switch vehicle button to 'On' position, to power on the remote control, press the power button for approximately 1 second until the power LED lights up.

Note: After 5 minutes, the remote control will go to sleep to reserve battery. To wake, turn off the vehicle and remote control then turn them on again.

Pairing:

 
 
The vehicle and remote control must be paired before driving.

1. Turn on the vehicle – its lights will light up.
2. Turn on remote control – its status light will flash.
3. The lights on the remote control will stop flashing when they are paired.



If you have more than one vehicle and remote control, you must pair one first, and then you may pair others.

For best performance and enjoyment, it's recommended to play on hard wood floors or smooth surfaces.



Reverse

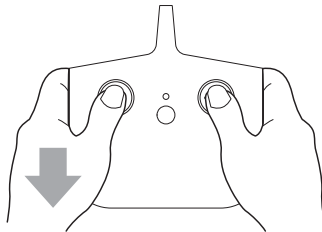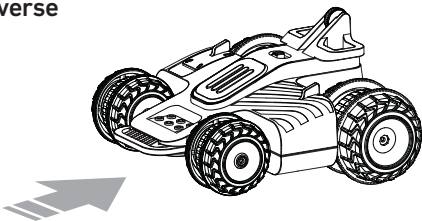



Forward

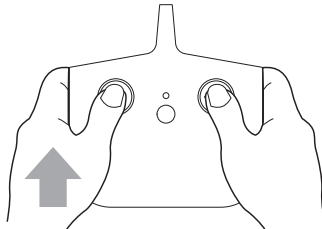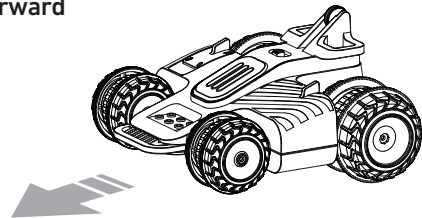  



Drift Left

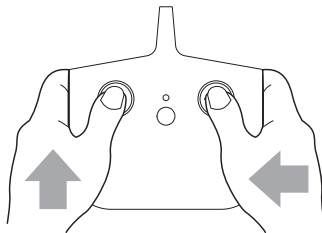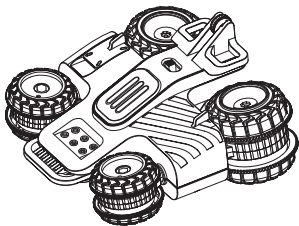  

Drift Right

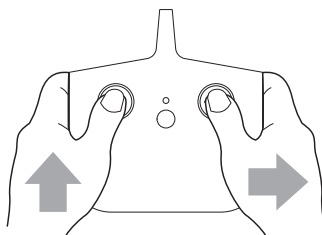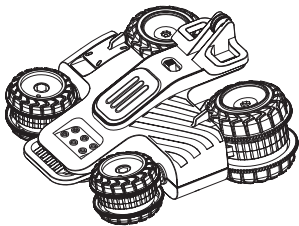  


Rotate Wheels Left/Right

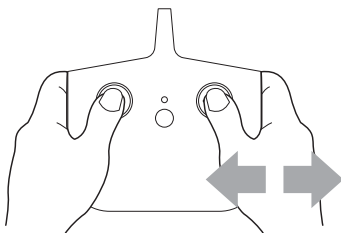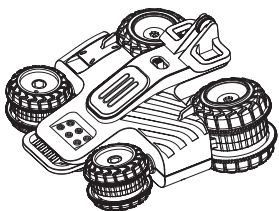  

Stand Up

 When the vehicle is under normal running style, if it moves quickly backward and then move forward, the vehicle could stand up.

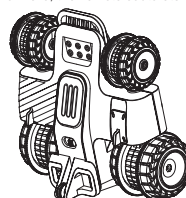

SAFETY PRECAUTIONS

- Do not sit, step, stand, or place objects on the vehicle. It is not designed to support extra weight.
- Adult supervision is recommended when operating the vehicle.
- Always drive responsibly and make sure driving paths are clear. Never drive towards or in close proximity to people or animals.
- Never submerge the vehicle in water and avoid driving the vehicle through water. The vehicle can handle minor splashes of mud and moisture, but it is not waterproof.
- Keep fingers, hair, and loose clothing away from tires and all moving parts while the vehicle is in motion.
- Do not expose to extreme temperatures.
- Do not leave vehicle or remote control near sources of heat or under direct sunlight for long periods of time.
- Thoroughly inspect products before every use. If the product appears worn, frayed, splintered, cracked, or broken in any manner, discontinue use and discard immediately.

BATTERY WARNINGS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire: batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

RECHARGEABLE BATTERY WARNINGS

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult Supervision of the battery while it is charging is required.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts, and in the event of such damage, they must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displaced, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notices on this package is not permitted.

Sharper Image® name and logos (including the 77 logo) are trademarks or registered trademarks. Distributed by and © 2023 MerchSource, LLC. Irvine, CA 92618. All rights reserved.



Model No.: 1018378

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.

Printed in China

**FOR CUSTOMER SUPPORT,
PLEASE CALL**

1-800-374-2744