

2.1CH SOUNDBAR WITH WIRELESS SUBWOOFER

USER MANUAL

Model:PG-026WS

Important Notice:
Please retain original packaging for Warranty purposes.
Please return with ALL supplied accessories.
Supplier reserves the right to make changes at any time without prior notice.

Dear Customer,

Please read the instruction manual carefully before use and keep it in a safe place for future reference.

IMPORTANT SAFEGUARDS

- ★ Before use, ensure that the mains voltage corresponds to the rating of the unit.
- ★ Place the unit in a cool, dry and clean place, free from vibrations. Do not place any objects such as vases full of liquid, on top of the unit.
- ★ If liquid or a foreign object enters the unit, stop using it immediately, turn it off and remove the plug from the mains supply.
- ★ Keep the unit away from direct sunlight.
- ★ Handle the unit with care.
- ★ Warning: There is uninsulated "dangerous high voltage" in the unit. To prevent electric shock, do not remove the cover or the rear plate yourself.
- ★ Do not open the housing or try to repair the unit yourself otherwise the warranty will become invalid. Repairs or other operations must be conducted by a professional.
- ★ When removing the plug from the mains supply or connecting or disconnecting the cable, do not pull on the power cable, rather grasp the plug/connector firmly.
- ★ Make sure the power is off before connecting or disconnecting.
- ★ When the unit is off, please remove the plug from the mains supply.
- ★ Only use a soft, dry cloth to clean the unit. In extreme cases, mild detergents poured onto the soft cloth can be used to remove stubborn dirt. Never use volatile chemicals such as benzine or paint thinners as these will damage the unit.
- ★ This unit can only be used in environments under elevation of 2000m, otherwise there may be potential safety hazards.
- ★ Do not use the unit in tropical climates. otherwise there may be a safety risk.
- ★ Do not block the vents otherwise the unit may overheat.

TECHNICAL PARAMETERS

- ★ Output power: 120W
- ★ Speaker unit: 2.25"×4 (main unit), 6.5 "×1(subwoofer)
- ★ Sensitivity: > 60dB
- ★ Frequency range: 50Hz~16KHz
- ★ SNR: > 80dB

TROUBLESHOOTING

Troubles	Troubleshooting
No power supply	Check whether the small plug of the power source adapter is connected to the main unit or whether power source plug is connected
No sound	Check whether the volume is turned to the minimum
	Check whether the Mute key is turned on
Remote control does not work	Check whether the battery power is low; if yes, replace the battery
	Check whether the remote control receiver on the main unit is sheltered
No sound when Bluetooth is connected for the first time	Check whether Bluetooth is paired with the unit

If the problem still cannot be resolved after going through the above checks, please contact a qualified technician.

FEATURES

- Remote control
- Bluetooth
- Optical audio input
- USB, FM
- 3.5mm Audio input
- HDMI(ARC) input

ACCESSORIES

 
- Remote control
- Power source adapter
- Wall-mounting rubber column
- User manual
- Audio cable
- Wall-mounting screw

OPERATING INSTRUCTIONS

LED Indicator


Indicator	Status
white	AUX
white	OPTICAL
white	BLUETOOTH
white	HDMI(ARC)
white	USB
white	FM

Remote Control

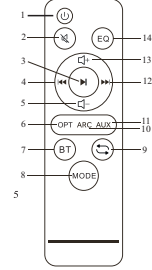

- 1.ON/OFF
- 2.MUTE
- 3.PLAY/PAUSE
- 4.PREV
- 5.DECREASE VOLUME
- 6.OPT
- 7.BT
- 8.MODE
- 9.REPEAT
- 10.ARC
- 11.AUX
- 12.NEXT
- 13.INCREASE VOLUME
- 14.EQ

 Battery Installation



1. Open the battery cover as shown in the above figure.
2. Insert a new battery.
3. Replace the cover.

 
Please note:

Check that a battery has been inserted before using the remote control.

If the remote control does not work, check if the battery is dead then replace if necessary. If it still doesn't work after you have replaced the battery, then please take it to the authorized service agent for examination.


When using the soundbar, please point the remote control directly at the remote control sensor on the main unit and keep the control within 8m and at angle of 30 degrees to the unit.

Rear Panel

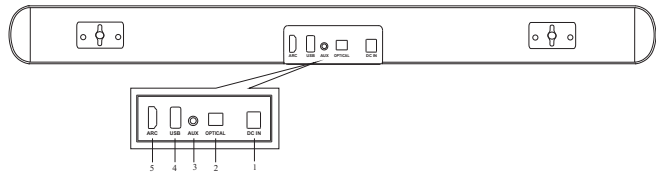


- ① DC 24V power source input interface
- ② Optical digital audio input interface
- ③ AUX input interface
- ④ IG-32G USB input interface
- ⑤ HDMI(ARC) input interface

 Front Panel

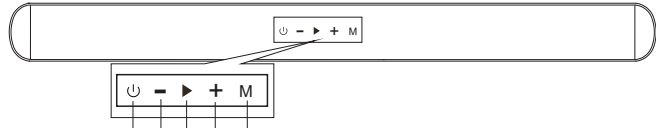

1. On/Off
2. Prev/Decrease Volume
3. Play/Pause/FM Radio Channel
4. Next/Increase Volume
5. Mode

 Rear Panel - Wiring Diagram

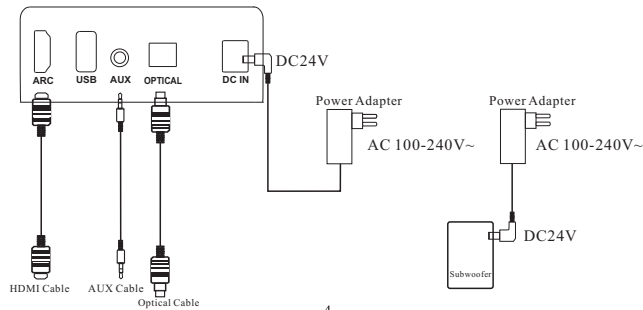

Optical Input

An optical audio connecting cable is required(not included in the list of accessories).

1. Connect one end of the optical audio connecting cable to the optical output interface, and the other end to the optical input interface of the unit.
2. Press Mode button repeatedly or the Optical key on the remote control to switch to Optical mode, after which the white indicator will light up or show **OPT**.

USB

1. Insert a USB memory device to the USB port
2. Press Mode button repeatedly or the Mode key on the remote control to switch to USB mode.
3. Ensure that your USB is stored with MP3 audio.
4. Use the controls on the unit or remote control to make adjustments. : Pause/Play
5. Repeat:Repeat single track by pressing Repeat key once or all tracks by pressing Repeat key twice.

HDMI(ARC) Input

HDMI(ARC) audio connecting cable is required (not included in the list of accessories).

1. Connect one end of the HDMI(ARC) audio connecting cable to the HDMI output interface,and the other end to the HDMI input interface of the unit.
2. Press Mode button repeatedly or the HDMI(ARC) key on the remote control to switch to HDMI mode, after which the white indicator will light up or show **Arc**.
3. Make sure the audio setting of the sound source is set to HDMI.

FM Radio

1. Press and hold the Pause/Mute button to automatically search for available FM channels.
2. Press the Prev/Next button to manually search for the available FM channels.

AUX In

A3.5mm audio connecting cable is required (incl uded in the list of accessories)

1. Connect one end of the 3.5mm audio connecting cable to the audio output interface and the other end to the 3.5mm AUX input interface of the unit.
2. Press the Mode button repeatedly or the AUX key on the remote control to switch to AUX mode after which the white indicator will light up or show **AUX**
3. Make sure that the audio setting of sound source is in "Connecting to Sound Equipment" status.

Bluetooth

1. Press MODE Button repeatedly, or the Bluetooth key on the remote control to switch to Bluetooth mode, after which the white indicator will blink **bt**.
2. Turn on the Bluetooth on your device and search for PG-026WS. Once found, click on it to pair. If the pairing is successful, the unit will make a sound.
3. Please note that the unit will automatically connect to this device (after one successful connection) in the future as long as the Bluetooth setting is turned on on both the unit and the device.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation i s subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party r esponsible for compliance could void the user's authority to operate the equip ment.

NOTE: This equipment has been te sted and found to comply with t he limits for a Class B digital device, pursuant to Par t 15 of the FCC Rules. These lim its are designed to provide reasonable protection against harmful interference in a residen tial installation. This equipment generates use s and can radiate r adio frequency energy and, if not installed and used in accordance with the in structions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If th is equipment does cause harmful interference to radio or television reception, which c an be determined by turning the eq uipment off and on, the user is encouraged to try to co rrect the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with F CC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed an d operated with minimum distance 20cm betw een the radiator & your body.