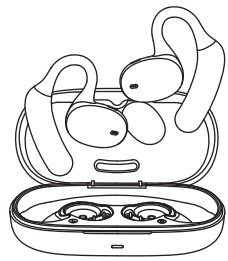
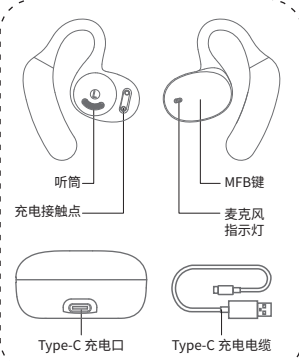



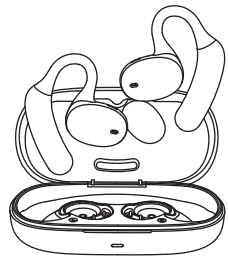
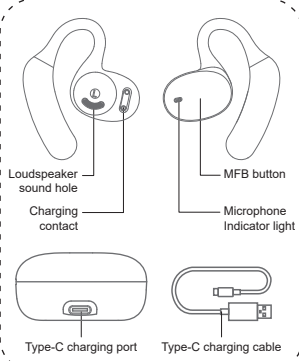

hi96

中英文说明书，风琴折，单黑折好后成品尺寸：50*70mm

材质：80g双胶纸

印刷的时候去掉成品线

<p>使用说明</p>  <p>使用前请仔细阅读本指南并保留备用</p>	<p>产品概述和包装清单</p>  <p>包装中包含真无线耳机及充电盒、充电电缆、使用说明书。</p>	<p>规格参数</p> <ul style="list-style-type: none">传输距离: ≥10米耳机电池容量: 90mAh充电仓电池容量: 600mAh音乐时间: 10H通话时间: 8H待机时间: ≥90H充电时间: 1.5H充电方式: Type-C 5V <p>按键操作</p> <ul style="list-style-type: none">开机: 1. 关机状态下, 长按 MFB 键约 3 秒开机。2. 从充电仓取出耳机, 耳机自动开机。关机: 1. 开机状态下, 长按 MFB 键约 5 秒关机。2. 将耳机放入充电仓中充电, 耳机自动关机。3. 蓝牙无任何连接状态, 待机 5 分钟自动关机。接听、挂断电话: 来电时任意双击左右 MFB 键接听电话; 通话中任意双击左右 MFB 键挂断电话。拒接来电: 任意长按左右 MFB 键约 2 秒拒接来电。播放、暂停音乐: 连接成功后, 双击 MFB 键, 播放音乐; 在播放音乐中, 双击 MFB 键, 暂停音乐。上下曲: 播放音乐时, 快速 3 击 L 耳 MFB 键上一曲, 快速 3 击 R 耳 MFB 键下一曲。音量 +/-: 单击 R 耳 MFB 键增加音量; 单击 L 耳 MFB 键减小音量。语音助手: 连接状态下长按左右耳 MFB 键约 2 秒, 启动语音助手。	<ul style="list-style-type: none">游戏模式、音乐模式: 连接状态下, 任意快速 4 击左右 MFB 键, 进入游戏模式; 游戏模式下, 任意快速 4 击左右 MFB 键, 切换为音乐模式。语音语言提示切换: 开机状态下任意 5 连击左右 MFB 键切换语言。 <p>配对方式</p> <ul style="list-style-type: none">蓝牙配对: 耳机开机进入配对状态, 打开蓝牙设备的蓝牙界面, 搜索配对名, 点击配对名连接。(如果搜索不到蓝牙请关闭蓝牙设备的蓝牙重新连接。) 连接成功有语音提示。自动回连: 首次连接成功后, 开机默认连接最后配对的设备。 <p>双设备连接</p> <ul style="list-style-type: none">一拖二连接配对: 当耳机连接一台设备后, 若要连接第二台设备, 需关闭第一台设备蓝牙断开连接, 在第二台设备上连接上耳机, 此时打开第一台设备上的蓝牙, 耳机会自动连接第一台设备, 即可完成一个耳机连接两台设备。一拖二回连: 当耳机连接过第一台和第二台设备后, 将耳机和两个设备同时打开, 耳机会先回连有效范围内最后连接的设备, 再回连另一台设备。	<p>恢复出厂设置</p> <p>当出现左右耳不互联或者设备无法配对时, 可以按照以下方式操作:</p> <ol style="list-style-type: none">删除蓝牙设备里耳机的配对名;将左耳机开机到配对状态下 (右耳机是关机状态), 6 连击 MFB 键, 然后将右耳机开机到配对状态下 (左耳机是关机状态), 6 连击 MFB 键。耳机重置后, 请按照“蓝牙配对”重新连接。 <p>充电说明</p> <ul style="list-style-type: none">耳机充电 将耳机放入充电仓内充电, 耳机蓝灯常亮, 充电仓指示灯常亮。充满电后耳机灭灯, 充电仓灭灯。充电仓充电 将 type-C 线插入充电仓的 Type-C 接口给充电仓充电。充电中白灯慢闪, 充满电时白灯常亮。耳机低电量提醒: 当耳机处于低电量状态时, 耳机会语音提示电量不足, 请及时将耳机放入充电盒充电。充电仓低电量提醒: 当充电仓电量过低时, 白灯闪烁并灭灯, 请及时为充电仓充电。	<p>断开耳机与手机的连接</p> <p>要断开耳机与手机的连接 (例如: 将手机连接至其它蓝牙设备), 请采用以下任一方式:</p> <ol style="list-style-type: none">关闭耳机;关闭手机蓝牙;从手机历史配对名中删除耳机的配对名。 <p>疑难排除</p> <ul style="list-style-type: none">听到【蓝牙已断开】的声响 因蓝牙的协议距离是空旷地段, 无障碍情况下可以达到 10m 距离传输, 耳机与手机连接状态下, 离开有效通信范围时会断开连接, 5 分钟内重新进入有效通信范围时会自动回连手机。回连不成功, 耳机关机。耳机没有声音 请确保耳机已经启动并完全充电。手机与耳机连接不上 请确保耳机与手机已配对; 请确保手机的蓝牙装置已被启用; 请确保耳机位于手机 10 米范围之内, 而当中并没有任何障碍物, 例如墙壁或其它电子器材等。如以上步骤未能解决问题, 请尝试一下操作: 重新给耳机充电; 重启手机; 启动手机蓝牙功能并且删除以往所有配对历史记录, 将蓝牙耳机重新与手机进行配对。	<p>注意事项</p> <ul style="list-style-type: none">切勿使用具有腐蚀性的清洁剂清理本产品。切勿让本产品加热或靠近火源, 如煮食炉。切勿让本产品长时间受阳光直接照射。切勿将本产品弃置于火中, 避免发生爆炸。切勿尝试拆开本产品作出任何修改, 因为它并不包含任何维修组件。切勿在雨中使用本产品。为了更好的保护您的听力, 请勿把音量调得太大。当处于充电状态时, 请勿清洁本产品, 应先把耳机与充电器分开, 再进行清理。请勿让儿童玩耍本产品, 细小的零件可能令儿童有窒息的危险。如果长时期内不打算使用本产品, 请您将它储存在干燥的环境中, 并每月至少为耳机充电一次以延长寿命, 避免极端的温度和灰尘。 <p>⚠ 注意</p> <ul style="list-style-type: none">针对可拆卸电池的产品, 电池务必回收或妥善处理, 针对不可拆卸电池的产品, 禁止拆解。如果电池使用不当, 就有可能爆炸或泄漏, 从而造成烧伤和其它人身伤害; 如果电池泄漏, 应小心并根据当地的电池处理相关法律和规定要求立即弃置电池。	<p>产品中有害物质名称及含量</p> <table border="1"><thead><tr><th rowspan="2">部件名称</th><th colspan="6">有害物质</th></tr><tr><th>铅 Pb</th><th>汞 Hg</th><th>镉 Cd</th><th>六价铬 Cr(VI)</th><th>多溴联苯 PBB</th><th>多溴二苯醚 PBDE</th></tr></thead><tbody><tr><td>耳机</td><td>X</td><td>○</td><td>○</td><td>○</td><td>○</td><td>○</td></tr><tr><td>电池</td><td>X</td><td>○</td><td>○</td><td>○</td><td>○</td><td>○</td></tr><tr><td>充电线</td><td>X</td><td>○</td><td>○</td><td>○</td><td>○</td><td>○</td></tr></tbody></table> <p>本表格依据 SJ/T11364 的规定编制。</p> <p>○ 表示该有害物质在该部件所有均质材料中的含量均在 GB/T26572 规定的限量要求以下。</p> <p>X 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T26572 规定的限量要求, 且目前业界没有成熟的替代方案。</p>	部件名称	有害物质						铅 Pb	汞 Hg	镉 Cd	六价铬 Cr(VI)	多溴联苯 PBB	多溴二苯醚 PBDE	耳机	X	○	○	○	○	○	电池	X	○	○	○	○	○	充电线	X	○	○	○	○	○	
部件名称	有害物质																																									
	铅 Pb	汞 Hg	镉 Cd	六价铬 Cr(VI)	多溴联苯 PBB	多溴二苯醚 PBDE																																				
耳机	X	○	○	○	○	○																																				
电池	X	○	○	○	○	○																																				
充电线	X	○	○	○	○	○																																				

<p>Bluetooth headset USER MANUAL</p>  <p>Please read this guide carefully before use and keep it for future use</p>	<p>Product overview and package list</p>  <p>The box includes wireless earphones, charging case, charging cable, and instruction manual.</p>	<p>Specifications</p> <ul style="list-style-type: none">Transmission distance: ≥10mBattery capacity of earphone: 90mAhBattery capacity of case: 600mAhWorking time: 10HTalk time: 8HStandby time: ≥90HCharging time: 1.5HCharging port: Type-C <p>Function operation</p> <ul style="list-style-type: none">Power On: 1. Touch the MFB button about 3 seconds to turn on the earphone. 2. Take the earphone from the charging case, it will automatically turn on.Power off: 1. Touch the MFB button 5 seconds to turn off. 2. Put the earphone into the charging case to charge, it will turn off automatically. 3. The earphone will turn off automatically if there is no connection after being pairing status for 5 minutes.Answer / Hang up the call: Double touch the left or right MFB button to answer the call, double touch the left or right MFB button to hang up during the call.Reject calls: touch the left or right MFB button for 2 seconds to reject the call.Play / Pause music: Double touch the left or right MFB button to Play / Pause music.Previous / Next track: Triple touch the left MFB button to the previous track and triple touch the right MFB button to next track.Volume +/-: Touch the right MFB button to increase the volume; touch the left MFB button to reduce the volume.Voice Assistant: Press the left MFB button for 2 seconds to activate the voice assistant.	<p>to activate the voice assistant.</p> <ul style="list-style-type: none">Game mode / Music mode: 4 touch the right or left MFB button to enter game mode; In game mode, 4 touch the right or left MFB button to switch to music mode.Voice prompt language switching: 5 touch the left or right MFB button to switch language in pairing mode. <p>Pairing</p> <ul style="list-style-type: none">Pairing: Turn on the earphone to enter pairing mode; Turn on the Bluetooth interface of the device, search the pairing name and click to pairing. (If the pairing name can't be found, please turn off your device's Bluetooth and reconnect).Automatic pairing: After the first successful connection, the earphones will automatically pairing in next time. <p>Connect two phones</p> <ul style="list-style-type: none">Connect two phones: First connect the first phone, then turn off the bluetooth of the first phone, then connect the second phone, turn on the first phone bluetooth, the earphone automatically connect the first phone, so that one earphone can be connected to two phones.Reconnect two phones: When the earphone has been connected to two phones, turn on the two phones and the earphone at the same time, the earphone will connect back to the last connected phone, and then connect back to another phone.	<p>Restore factory setting</p> <p>When there is no interconnection between the left and right earphones or the device cannot be paired, you can operate as follows:</p> <ol style="list-style-type: none">Delete the pairing name of the earphone from list of pairing history on your Bluetooth device;Turn on the left earphone to the pairing state (the right earphone is off), and touch the MFB button 6 times, then turn on the right earphone to the pairing state (the left earphone is off), and touch the MFB button 6 times.After resetting the earphone, please reconnect it according to "Pairing". <p>Charging instructions</p> <ul style="list-style-type: none">Earphones charging Place the earphones in the charging case to charge, the earphones indicator light is steady blue, and the charging case indicator light is steady on. The earphone indicator light and charging case indicator light are off when fully charged.Charging case charging Plug the Type-C cable into the Type-C port of the charging case. The white light flashes slowly during charging, and the white light is always on when fully charged.There is no sound in the earphone. Make sure the earphone is powered on and fully charged.The device can't connect to the earphone.	<p>charge in time.</p> <ul style="list-style-type: none">Case low power reminder When the case is at low power, the white light flashes and off, please charge in time. <p>Disconnect</p> <p>To disconnect the earphone from your phone (for example, connecting the earphone to another Bluetooth device), use any of the following methods:</p> <ol style="list-style-type: none">Turn off earphone;turn off the Bluetooth of the phone;Delete the pairing name from list of pairing history on your phone . <p>Troubleshooting</p> <ul style="list-style-type: none">Hear the sound of "Disconnected" Since the protocol distance of Bluetooth is an open area, the transmission distance can reach 10m in barrier less conditions. When the earphone and the phone are connected, the connection will be disconnected when they leave the effective communication range, and the phone will be automatically connected when they re-enter the effective communication range within 5 minutes. If the reconnection is unsuccessful the earphones will turn off.There is no sound in the earphone. Make sure the earphone is powered on and fully charged.The device can't connect to the earphone.	<p>Make sure the earphone is paired with your device. Make sure your device's Bluetooth is enabled. Make sure that the earphone is located within 10 m of the device and there are no obstructions, such as walls or other electronic devices.</p> <ul style="list-style-type: none">If the above steps can't solve the problem, please try the following methods: Re-charge your earphone. Restart your phone. Delete your device past pairing history. Re-pair the earphone with your phone. <p>Matters needing attention</p> <ul style="list-style-type: none">Do not use corrosive cleaning agents to clean the product.Do not allow this product to heat or be near fire sources, such as cooking stoves.Do not expose this product to direct sunlight for a long time.Do not dispose of this product in fire to avoid explosion.Do not attempt to disassemble this product for any modification, as it does not contain any repair components.Do not use this product in the rain.In order to better protect your hearing, do not turn the volume too high.Do not clean the product while it is charging. Separate the earphone from the charger before cleaning it.	<ul style="list-style-type: none">Do not allow children to play with this product, small parts may cause choking hazards to children.If you do not intend to use this product for a long time, please store it in a dry environment and monthly Charge your headphones at least once to extend their life and avoid extreme temperatures and dust. <p>⚠ Warning</p> <ul style="list-style-type: none">Batteries may be recycled or properly disposed when the product Batteries could removable. Do not disassemble the battery when the product Batteries could not removable.If the battery is not used properly, it may explode or leak, causing burns and other injuries. If the battery leaks, be careful and dispose of the battery immediately in accordance with local laws and regulations on battery handling. <p>FCC</p> <ul style="list-style-type: none">This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.	<ul style="list-style-type: none">Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.	
--	---	---	---	--	---	--	---	--	---