

K 歌虚拟架子鼓
Virtual drum kit


说明书
Instruction

Made in China

产品图示

A. 空气鼓棒
A1. 电源键
长按: 开/关机
单击: 进行架子鼓的方向定位。(需用两指同时按压电源键)
A2. 指示灯
正常工作: 指示灯常亮;
电量充足: 指示灯闪烁;
电量不足: 红灯常亮/黄灯闪烁;
红灯熄灭/黄灯熄灭: 出厂校准模式。
A3. Type-C 充电口
A4. 充电指示灯
红灯长亮: 正在充电;
红灯熄灭: 充电完成。


B. 脚踏 (脚踏分为 HI-HAT、BASS DRUM)
B1. 电源键
长按: 开/关机
B2. 指示灯
红灯长亮: 正常工作;
红灯闪烁: 电量低;
红灯熄灭/黄灯熄灭: 出厂校准模式;
红灯常亮/黄灯常亮: 红灯常亮/黄灯常亮;
B3. Type-C 充电口

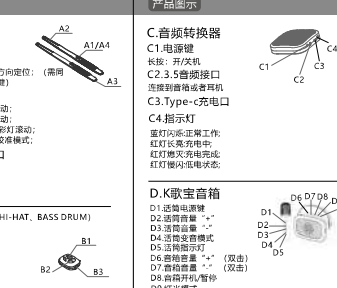

产品图示

C. 音频转换器
C1. 电源键
长按: 开/关机
C2. 3.5 音频接口
连接到音箱或者耳机
C3. Type-C 充电口
C4. 指示灯
蓝灯闪烁: 正常工作;
红灯长亮/黄灯闪烁: 红灯常亮/黄灯常亮;
红灯熄灭/黄灯熄灭: 出厂校准模式。

D. K歌宝音箱
D1. 麦克风开关
D2. 话筒音量 "+"
D3. 话筒音量 "-"
D4. 话筒音量模式
D5. 话筒指示灯
D6. 暂停音乐 "+" (双击)
D7. 播放音乐 "-" (双击)
D8. 暂停/开机/暂停
D9. 灯亮/熄灭
D10. 蓝牙/AUX模式切换 (连接架子鼓踏板切换到 AUX模式)

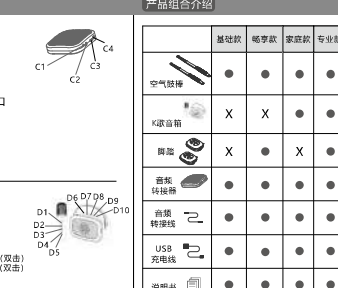

产品组合介绍


| | 基础款 | 畅享款 | 家庭款 | 专业款 |
|---------|-----|-----|-----|-----|
| 空气鼓棒 | • | • | • | • |
| K歌宝音箱 | X | X | • | • |
| 脚踏 | X | • | X | • |
| 音频转换器 | • | • | • | • |
| 音频转换器 | • | • | • | • |
| USB 充电线 | • | • | • | • |
| 说明书 | • | • | • | • |

• 表示包含在本套餐内, X 表示不包含, 具体配置以电商平台为准。

操作说明

一、开机互联


- 将 HI-HAT/BASS DRUM 脚踏分别固定在左右鞋子并长按电源键进行开机。(部分组合套餐不包含)



- 用音频线将音频转换器连接音箱或者其他外放设备上(需带AUX接口), 并开机; 如使用常规的水晶宝音箱进行音频传输, 请使用 3.5 音频线耳机线可直接插到音频转换器音频接口上。
- 手持脚踏调整到合适位置, 长按脚踏电源键进行开机, 进行了初始化设定。

操作说明

- 连接手机和琴 (可省略)
选择蓝牙 BT-Air Drum 连接, 播放音乐; 可以同时鼓打脚踏伴奏, 如有购买 K歌宝套餐, 可同时唱歌伴奏, 实现娱乐共享。
(备注: 以上设备的电源指示灯均为蓝色为待机显示正常工作, 如果红灯闪烁则表示电量低, 请及时进行充电)
2.4 频初始化完成, 鼓棒前 "∞" 符号为正常
- 设备校准
1. 敲击位置固定化时, 用同时单击鼓棒顶端, 避免区域 2 颜色灯闪烁, 连续一下鼓棒, 确定下鞋子处于自身方位的位置; 如果位置有变动, 请重复此步骤。
2. 传感器校准设备重置 (请谨慎操作)
当你重新自由鼓棒或发生变动后, 你需要通过鼓棒的电源键重新进行传感器的校准。当你发现校准不准确时, 需要按照其电源键重新校准。传感器初始化校准增加鼓棒灵敏度, 校准后鼓棒灵敏度会更高, 则需要校准鼓棒中传感器的灵敏度, 并能在出厂校准时校准鼓棒传感器的灵敏度。

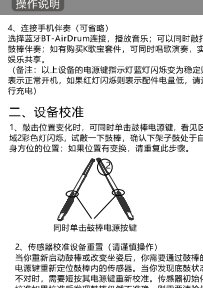


操作说明


如何进行鼓棒的传感器初始化校准:

- 快速连续鼓棒顶端, 直到鼓棒状态指示灯亮起。
- 将鼓棒平放在水平安静的桌面上, 确保没有任何震动干扰。直到鼓棒的指示灯从蓝色变为黄色为止。
- 拿起鼓棒, 在鼓棒 "∞" 字, 鼓棒传感器的指示灯由黄色变为青色灯亮表示校准成功。
- 完成初始化校准, 鼓棒前 "∞" 符号为正常。

鼓棒区域方位图:



- 踩脚踏和鼓棒需要用脚踏控制, 脚踏踩下为一次, 注意左右脚踏分别注意脚踏名称 (HI-HAT 为左脚, BASS DRUM 为右脚)

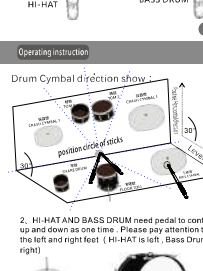


四、重要说明

- 不要将鼓棒打在地上, 避免损坏;
- 如果发现鼓棒位置不对, 请重新校准;
- 当发现鼓棒红灯闪烁, 请及时充电;
- 如出现一些异常现象, 请第一时间联系客服;
- 如果鼓棒或者脚踏一直红灯闪烁, 表示没有连接到音频设备或脚踏上, 请重新校准;
- 脚踏使用前也需要校准, 校准的位置请确认是否合适, 需要脚踏校准脚踏时也会脚踏上鼓棒上。

设备参数

| 鼓棒 | 电池容量 | 产品尺寸 |
|-------|---------|---------------|
| 鼓棒 | 260mah | 32*1.8cm |
| 脚踏 | 180mah | 6.1*3.3*1.4cm |
| 音频转换器 | 900mah | 8.2*9*1.1cm |
| K歌宝音箱 | 1200mah | 14.2*9*7.3cm |



Virtual drum kit


Instruction

Made in China

Product show

A. Air drum sticks
A1. Power switch
Long press: turn on/off
Click: fix the drum position (the power button of the two sticks)
A2. Indicated light
Working: the light rolling
Sufficient Charge: light flashing
red/yellow light flash alternately—factory mode calibration
A3. Type-C charger
A4. Charge indicate light
Red light on: charging
Red light off: charging finish


B. Pedal (HI-HAT, BASS DRUM)
B1. Power switch
long press: turn on /off
B2. indicate light
Blue light on: working
Blue light turn red: low battery
Red light off: charging finish
Red light flash slowly: low battery
Red light on: charging
B3. Type-C charger

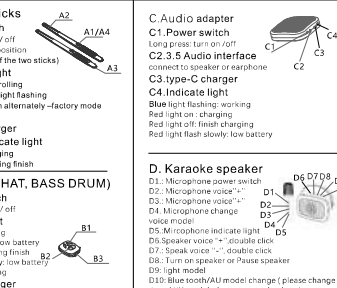

Product show

C. Audio adapter
C1. Power switch
Long press: turn on/off
C2. 3.5 Audio interface
connect to speaker or earphone
C3. type-C charger
C4. Indicate light
Blue light flashing: working
Red light on: charging
Red light off: finish charging
Red light flash slowly: low battery

D. Karaoke speaker
D1: Microphone power switch
D2: Microphone voice "+"
D3: Microphone voice "-"
D4: Microphone change voice mode
D5: Microphone led cate light
D6: Speaker voice "+" double click
D7: Speaker voice "-" double click
D8: Turn on speaker or Pause speaker
D9: light model
D10: Blue tooth/AU model change (please change into AUX model when connect the drum)

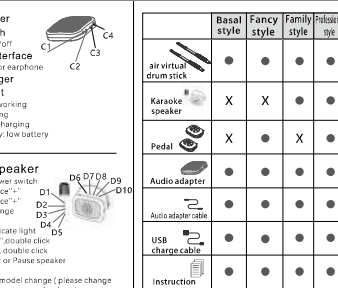

Product Portfolio Introduction


| | Basal style | Fancy style | Family style | Professional style |
|------------------------|-------------|-------------|--------------|--------------------|
| air virtual drum stick | • | • | • | • |
| Karaoke speaker | X | X | • | • |
| Pedal | X | • | X | • |
| Audio adapter | • | • | • | • |
| Audio adapter cable | • | • | • | • |
| USB charge cable | • | • | • | • |
| Instruction | • | • | • | • |

• means include this device. X means not include.

Operating instruction

一、Turn on for connection


- Please fix HI-HAT/BASS DRUM on the left/right shoes and press the power 3 seconds (some style don't have the pedal)

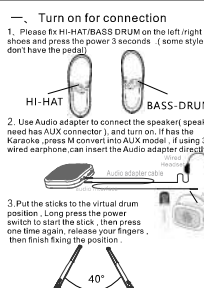

- Use Audio adapter to connect the speaker (speaker need has AUX connector), and turn on. If has the Karaoke, press M convert into AUX model. If using 3.5 wired earphone, can insert the Audio adapter directly.
- Put the sticks to the virtual drum position. Long press the power switch to start the stick, then press one time again, release your fingers, then finish fixing the position.

操作说明

- Ignore this! Connect blue tooth BT-Air drum. Play the music; play the drum sticks. If you have the Karaoke set, can sing, achieve entertainment sharing. Remark: All the above devices' blue lights from flashing to stabilization means turn on, if the red light flashing means the devices are low battery, please charging them.
- Device Calibration
1. When your position changed, please press the switch button of the sticks, see the No.2 area light flashing, try to drum the sticks to make sure the drum is on your position.
2. Sensor calibration device reset (please do it carefully) When you restart the sticks or change your position, you need to press the power button to track the sensor of the sticks. If you find the bottom drum status is not correct, need to press the power button shortly to recalibrate. If it is still not correct after Sensor initialization, need to clean the save date of the sensor and reset the sensor through factory calibration model.

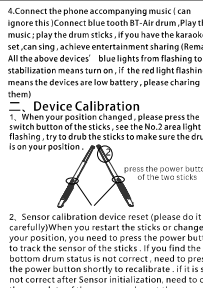


Operating instruction


How to initialize calibrate the sensor of the sticks

- Fast short press power button 6 times till the yellow light flashing
- Please put the sticks on a level quiet table, make sure no any other shake. till the indicate light from yellow to pink light flashing
- Take the sticks, draw in the air, indicator of stick from pink flashing light to cyan light steady on. (or blue light flashing)
- Finish the initialize calibration. Below is the reference picture of drawing "∞"

鼓棒区域方位图:



- HI-HAT AND BASS DRUM need pedal to control up and down as one time. Please pay attention to the left and right foot (HI-HAT is left, Bass Drum is right)



四、Important Notes

- Don't use the sticks to drum hard things.
- If the drum position is not correct, please reset the position
- When the red light flashing, please charge for the device.
- If has many device in one place, please match one by one, not mix.
- If the sticks or pedals' blue light flashing, it means it haven't connected to the speaker or Audio converter, please connect again.
- The pedals need to calibrate before using, please make sure fix them on the correct feet, the pedal will up or down according to you fee

Equipment parameters

| Item | Battery capacity | Size |
|--------------------|------------------|---------------|
| Virtual drum stick | 260mah | 32*1.8cm |
| Pedal | 180mah | 6.1*3.3*1.4cm |
| Audio adapter | 900mah | 8.2*9*1.1cm |
| Karaoke speaker | 1200mah | 14.2*9*7.3cm |

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.