 


# Swift Block 华容道

英文说明书文档

Product Requirement Document

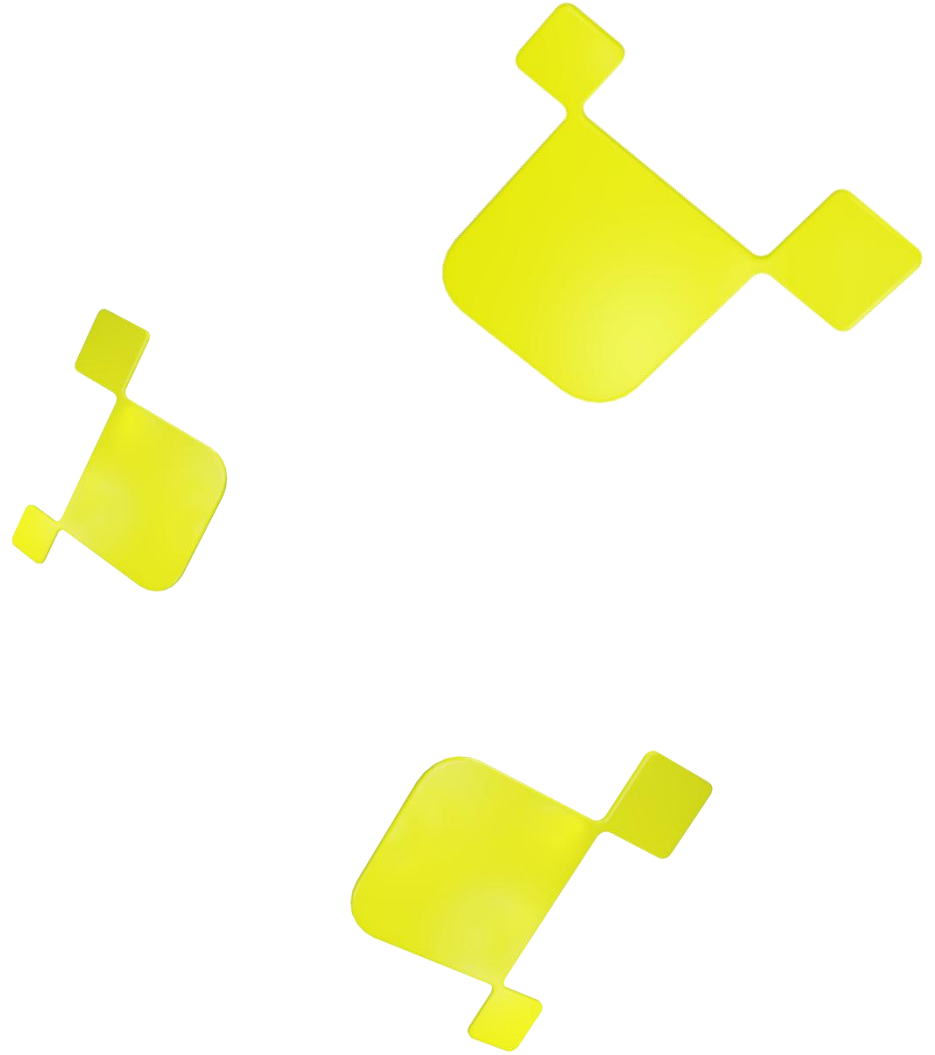

# Swift Warriors Quick Start Guide

## wiSlide Manual

 
In the cosmos exists a mysterious organization known as the "Swift Guardians" dedicated to safeguarding universal peace. Its members are called "Swift Warriors". Among them stands Blocky, renowned for extraordinary intellect and the ability to unravel any unsolved mysteries.

One day, Blocky receives an urgent mission from Earth: a mysterious force is invading the planet. It seeks to control humanity by sealing off various Earth nations. Bearing this heavy responsibility, Blocky must utilize his intelligence to unlock the sealing mechanisms on Earth one by one and rescue its people.

wiSlide is one of the mechanisms responsible for Earth's confinement, and solving this puzzle is Blocky's current top priority. Now, Blocky extends a formal invitation to you: please open this "Swift Warriors Quick Start Guide", join the Swift Guardians, and together with Blocky, let's save the world!

# Dear Swift Warrior

Thanks for accepting the Blocky's invitation to embark on the puzzle-solving journey of wiSlide.  
Please accept 3 puzzle challenges:

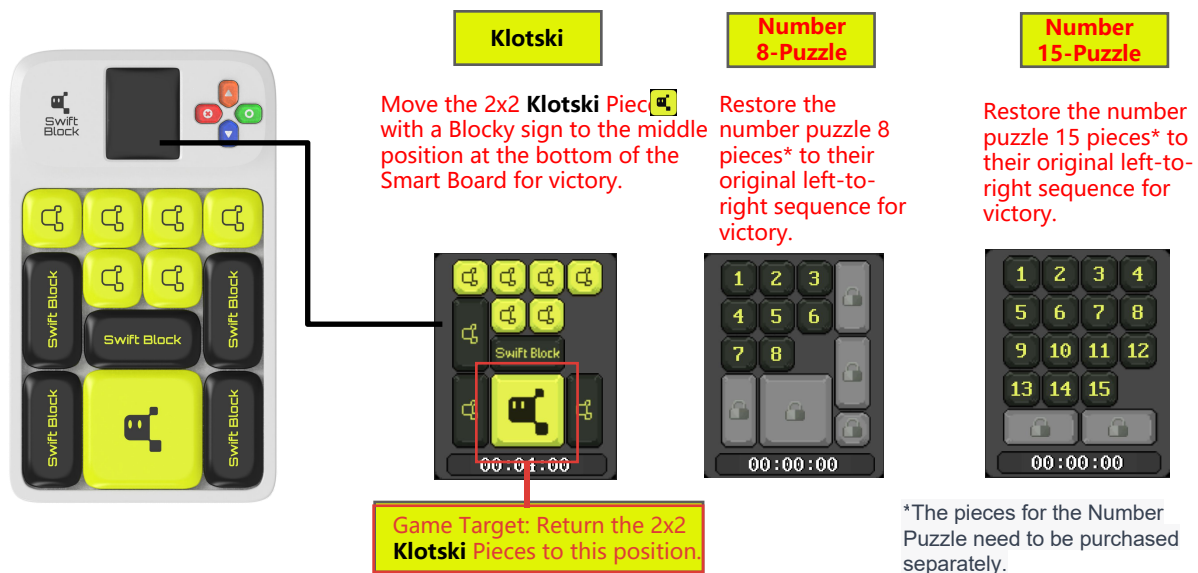

**Klotski**  
Move the 2x2 Klotski Piece with a Blocky sign to the middle position at the bottom of the Smart Board for victory.

**Number 8-Puzzle**  
Restore the number puzzle 8 pieces\* to their original left-to-right sequence for victory.


**Number 15-Puzzle**  
Restore the number puzzle 15 pieces\* to their original left-to-right sequence for victory.

**Game Target: Return the 2x2 Klotski Pieces to this position.**

 \*The pieces for the Number Puzzle need to be purchased separately.

## Mystery of the wiSlide & Kit

You should have received the following items in your wiSlide Kit

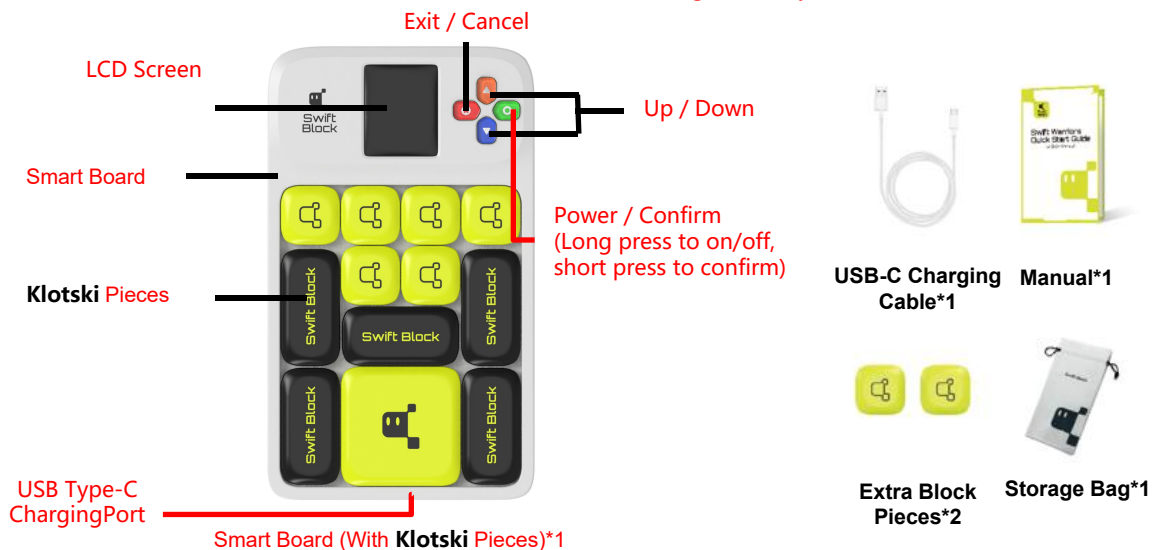

Exit / Cancel

Up / Down

LCD Screen

Smart Board

Klotski Pieces

Power / Confirm (Long press to on/off, short press to confirm)

USB Type-C ChargingPort

Smart Board (With Klotski Pieces)\*1

USB-C Charging Cable\*1

Manual\*1


Extra Block Pieces\*2

Storage Bag\*1

## Mystery of the Features

 More features are waiting for you to unlock!

### Main Features

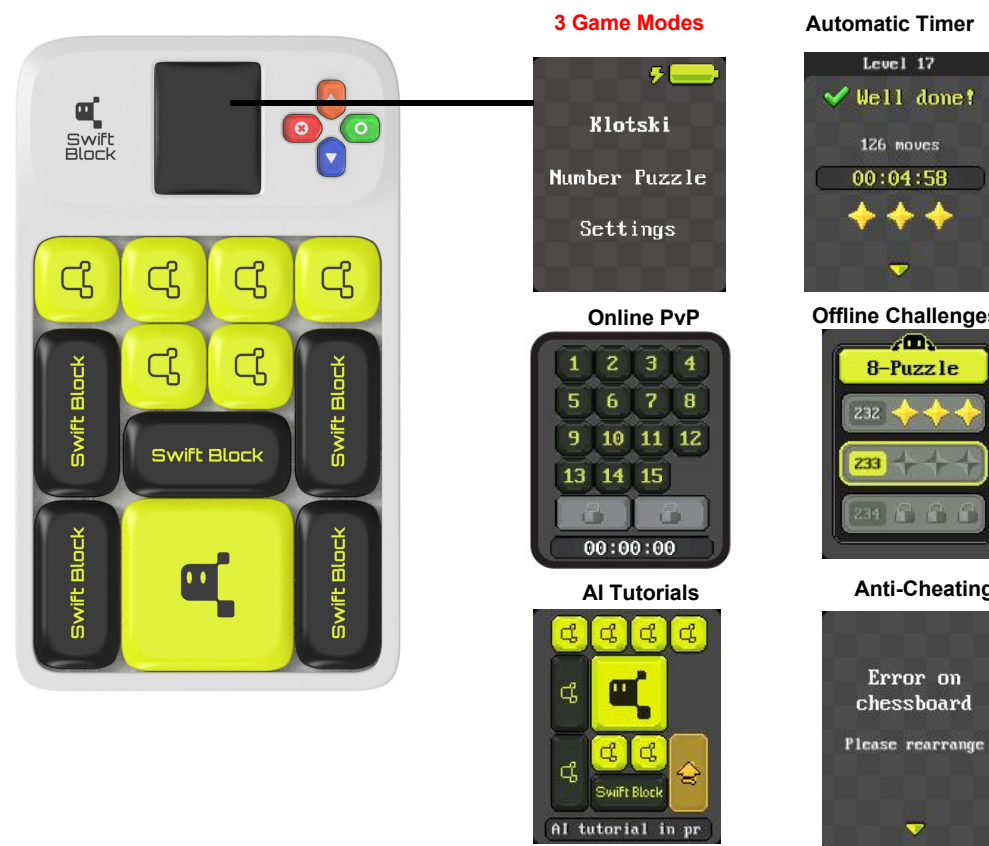

**3 Game Modes**

**Automatic Timer**

**Online PvP**

**Offline Challenges**

**AI Tutorials**

**Anti-Cheating**

 
### Additional Features

- Supports 6 languages: Chinese (Traditional & Simplified)/English/French/German/Spanish/Japanese
- 15 Levels of Brightness Adjustment
- 15 Levels of Volume Adjustment
- Remaining Battery Level Indicator

# Mystery of the Game Modes

Offline & Online, it's all up to you!

## 1. Offline Mode

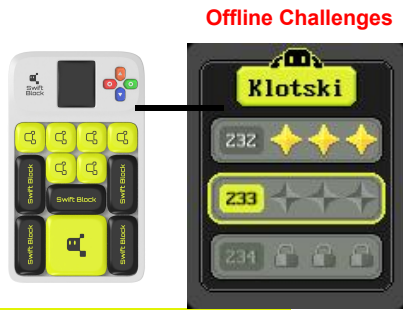

In offline mode, press the OK button and follow the instructions to get into the AI tutorials.

## 2. Online Mode



Slide Verse App




\*By connecting to the Slide Verse App, you can sync with the wiSlide in realtime.

**Slide Verse App:** Without connecting to the wiSlide device, you can still experience the challenge mode, socialize with friends, and enjoy some of the AI tutorials by simply opening the app.

## How to get online?

1. Scan the QR code on your phone to download and install the SlideVerse App, or search and install it from the App Store.

2. Press and hold the button  to power it on.

3. Find your Bluetooth device name in "Settings - Device Information".

4. Open the SlideVerse App, and click the "Connect" button in the upper right corner on the homepage. Search and connect to the device.



# Guide Tour of wiSlide

Ready? GO!

 
## Getting Started Guide

1. Choose your gamemode and level.



2. Follow the on-screen instructions to set up the Smart Board.

\*The klotski pieces size and placements must match the requirements of the screen to avoid errors that may stop the game from getting started.

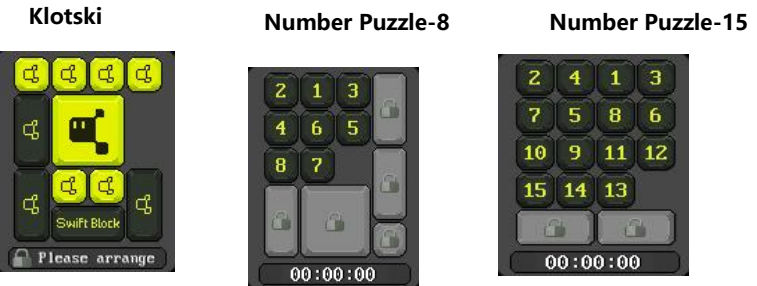

3. Press the OK button  to start the game, initiating the timer.



4. Victory.



Cations:

Auto-sleep after 1 minute of inactivity, auto-shutdown after 30 minutes of inactivity.

## Basic Battery Parameters:

|                         |         |                         |           |
|-------------------------|---------|-------------------------|-----------|
| <b>Battery Capacity</b> | 400mAh  | <b>Charging Current</b> | 500mA     |
| <b>Charging Time</b>    | 2 Hours | <b>Battery Life*</b>    | ≈15 Hours |

\*Actual battery life may vary depending on screen brightness and volume settings in different scenarios.

## Maintenance and Care

After each use of the product, please kindly use dry cleaning cloth to wipe away surface stains and dust before placing the klotski pieces and Smart Board back into the storage bag.

### FAQs:

1. Unable to power on. This may be due to a low battery power. Please connect the USB Type-C charging cable for recharging before use. If the device has not been used for an extended period, the battery may be depleted. In this case, connect the charging cable and wait several minutes for the screen to illuminate.
2. Unable to connect. Please ensure that the wiSlide is powered on. If it is already connected to another device, it must be disconnected before another device can detect it. For Android devices, please confirm that the location function is enabled and the app has been granted location permission.
3. "Error on Smart Board" alert. According to the rules of Klotski, klotski pieces must remain on the Smart Board throughout the game. If the system detects that a klotski piece has been off the board for more than 2 seconds, it will give an "Error on Smart Board" alert. In this case, please follow the on-screen prompts to reposition the klotski pieces, and press the ok/confirm button to resume the current game.
4. System error. When unable or unresponsive to power on/off. You can forcefully shut down the system by press the power button for more than 10 seconds, and then press the power button to turn-on again. The system will back to normal.

### WARNING:

CHOKING HAZARD-Small parts. Not for children under 3 years.  
Packaging contains crucial information. Please keep for reference.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.



Please scan the QR code to download and install the SlideVerse App.