

M9 Multifunctional Remote Control

User Manual




M9 Remote Control Teaching (Android)



M9 Remote Control Tutorial (Apple)

Product view

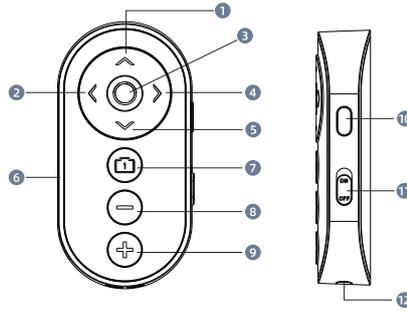

- 1 Up key: Click on the screen to swipe
- 2 Left button: Click the screen to swipe left, and press and hold to trigger the volume down
- 3 Medium button: Click pause, double-click like, long press to like continuously
- 4 Right button: Swipe right with a click on the screen and press and hold to trigger the volume plus
- 5 Next button: Click the screen to slide down
- 6 Type-C charging port
- 7 Shoot button 1: Click to take a photo, double click to take a photo twice
- 8 - Button: Click to decrease the focal length of the camera
- 9 + KEY: Click the camera to increase the focal length
- 10 Side button: Camera mode click to flip the camera
- 11 Power on/off key
- 12 Lanyard holes

Precautions for iOS system




1. Note: Apple users should scan the red code to watch the video tutorial before using it.
2. Open your phone's "Settings" - "Accessibility" - "Zoom" - "Turn on Zoom", the screen will become larger after the zoom function is turned on, and the screen will be restored with three fingers and double-tapped.



iPhone setup steps

Android connection tutorial

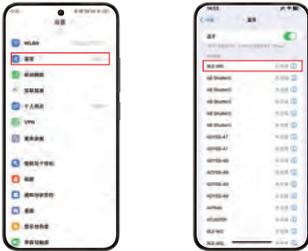

1. Pull the switch on the side of the remote control (ON on/OFF off), and the indicator light of the remote control will flash automatically.
2. Open the phone's "Settings" - "Bluetooth" to turn on Bluetooth, search for "BLE-M9" and click the device name to pair, after the display shows "Connected", the indicator stops flashing, that is, the connection is successful (the remote control is turned on).

Product parameters

Product Name: Multi-function remote control
 Product model: M9
 Battery capacity: 55mAh
 Charging voltage: 5V/2A
 Remote control standby time: 30 days
 Product color: pink, purple
 Product Weight: 28g
 Charging time: about 1 hour

Product Certificate

Product Name: Douyin Remote Control - Charging Model
 Packing specifications: product data cable manual
 Inspection Criteria:
 Charging voltage: 5V/2A
 Inspectors:
 Executive Standard No.:
 Factory: Shenzhen Chiheng Industrial Co., Ltd
 Address: 602, Building 4, Zhongpengcheng Industrial Park,
 Matian Street, Guangming District, Shenzhen, Guangdong
 Province:



FCC Warning

15.19 Labeling requirements.
 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
 15.21 Information to user.
 Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 15.105 Information to the user.
 Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 -Reorient or relocate the receiving antenna.
 -Increase the separation between the equipment and receiver.
 -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 -Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:

- 1.This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- 2.This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
 This equipment should be installed and operated with minimum distance 5mm between the radiator and your body.