


Size: 13.77(W) x 8.66(H)in
350(W) x 220(H)mm





LIGHT UP

RC SPEED BOAT


Instruction Manual

Thank you for purchasing the Light up RC Speed Boat. This manual provides more information about this RC Speed Boat, please read the instruction before using

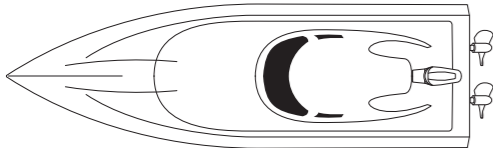


 The RC Light up Boat only works with contact to water. Put the boat into the water, now you can operate the boat with the transmitter. Do not place hands near the propeller and check before you start to play with it, there is no obstacle around the propeller to prevent from being wounded by the propeller when it is rotating in high speed. When you take the boat out of the water it will stop working

Product Overview

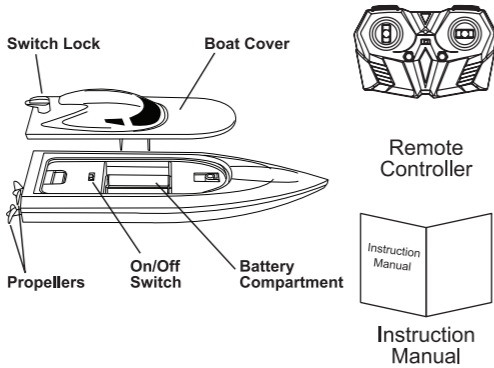

Boat Power On/Off

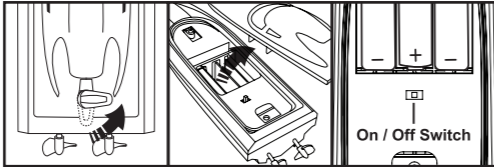

1. Rotate the switch to the right and unlock the cover.
2. Remove the Cover.
3. Power On/Off
Slide the ON/OFF Switch to ON to turn on the Turbo Racing Remote Control Boat
4. Put back in place the cover and lock it.


Package Contents

- Remote Control Boat x 1
Remote Controller x 1
Instruction Manual x 1

Specifications

Power Supply:
Remote Control Boat Power Supply:
3 x “AA” 1.5V Batteries (Not Included)
Remote Controller Power Supply:
3 x “AAA” 1.5V Batteries (Not Included)
Frequency: 2.4GHz


Remote Controller

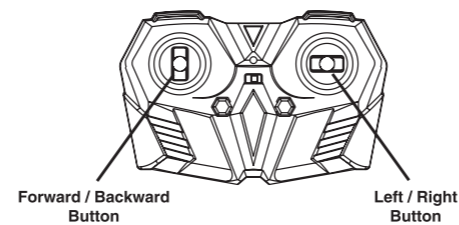

Operate Your Boat


Note: To avoid losing control, always pay attention when playing the Remote Control Boat.

Forward

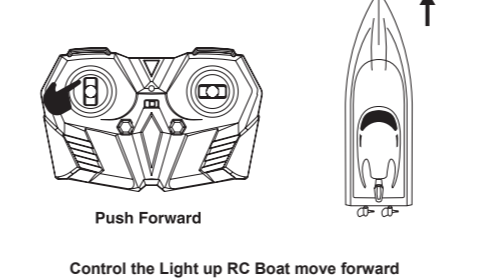

Control the Light up RC Boat move forward


Backward

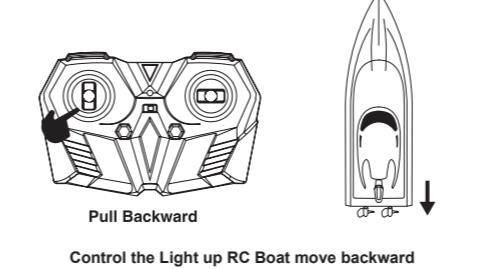

Control the Light up RC Boat move backward


Operate Your Boat

Left

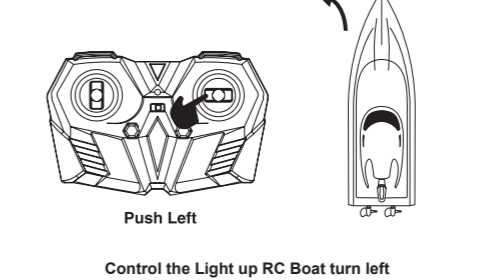

Control the Light up RC Boat turn left

Right

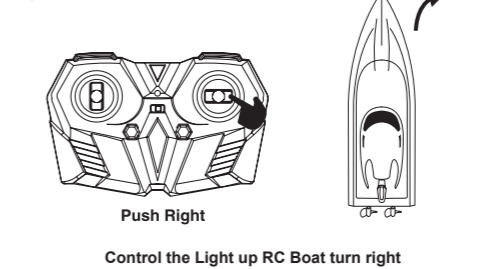

Control the Light up RC Boat turn right

FCC Statement


Warning
To assure continued compliance, any changes or modifications not expressly approved by the party.Responsible for compliance could void the user’s authority to operate this equipment.

FCC Statement
This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in the portable exposure condition without restriction.


Batteries Installation-Boat

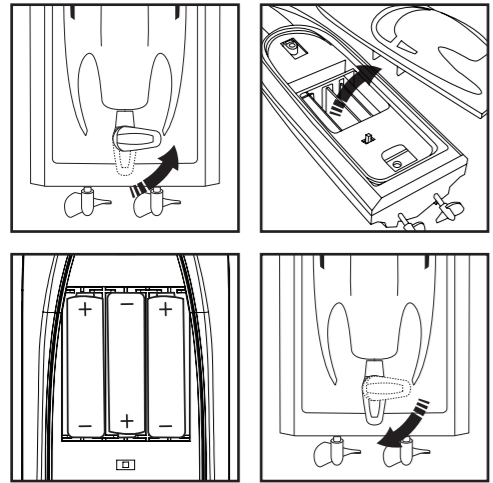

To install batteries into the Remote Control Boat, rotate the switch to right to open the boat cover. Insert 3 x “AA” 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Put back in place the boat cover and rotate the switch to left to lock the cover.

Notice:
When placing the batteries, you must insert according to the correct polarity, the Remote Control Boat won’t function if batteries are reversed.

Batteries Installation-Remote Controller

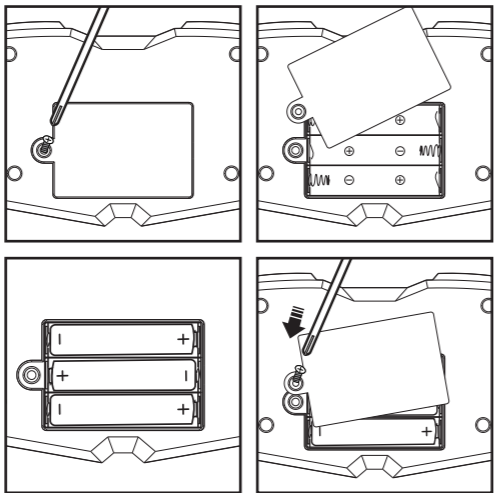

To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the battery compartment. Insert 3 x “AAA” 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Put back in place the battery box cover and tighten the screw.

Notice:
When placing the batteries, you must insert according to the correct polarity, the Remote Controller won’t function if batteries are reversed.


Performance Tips

1. Do not drive the Remote Control Boat in the sea or lake.
2. Do not drive the Remote Control Boat in windy or rainy weather.
3. Do not drive the Remote Control Boat into any sharp object.
4. Keep fingers, hair and loose clothing away from the propellers.

Care and Maintenance

1. Always use dry and soft cloth to clean this product.
2. Avoid this product from being exposed to sunlight or heat.
3. Avoid to immerse this toy into the water with the cover unlocked, otherwise, the electronic parts may be damaged.
4. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.

IMPORTANT: BATTERY INFORMATION

-  **WARNING: TO AVOID BATTERY LEAKAGE:**
1) The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222).
- 2) Always purchase the correct size and grade of battery most suitable for intended use.
- 3) Do not mix old and new batteries, alkaline, standard (Carbon - Zinc) or rechargeable (Nickel-cadmium) batteries.
- 4) Clean the battery contacts and those of the device prior to battery installation.
- 5) Ensure the batteries are installed correctly with the regard to polarity (+ and -).
- 6) Always remove batteries if consumed or if product is to be left unused for long time.
- 7) Should this product cause, or be affected by local electrical interference, move it away from other electrical equipment. Reset (switching ON & OFF again or removing and re-inserting batteries) if necessary.

Warning

This product is suitable to be used by people who has operating experience in remote toy or aged no less than 6 years old.

Please do not put the product in your mouth to prevent choking hazard of small parts.

Please do not put the finger into available interspaces.

Please do not play the product in a brutal way such as throwing, crashing or twisting it.

Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents.

Avoid placing the batteries in places in high temperatures and avoid exposure to heat.

When young children are operating the product, it shall be ensured that the adults are guiding and making sure the product control is within the viewing range of the controller (or instructor) so that it makes the control of the toy more convenient.

When the product is not in use, please switch off the power supplies of the toy, and remove the batteries from the product.

Please note that we won’t take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product.

Once this product is sold, we won’t be responsible for any safety responsibility during the time the user operates or uses controls this products.



Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty
Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.


To Obtain Warranty Service and Troubleshooting Information:
Call 1-800-592-9541 in the U.S. or 0-800-917-4831 in the UK or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepai

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR’S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER’S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.


Vivitar One Year Warranty

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.




© 2024 Sakar International
195 Carter Drive,
Edison, NJ 08817
Tech Support
877 397 8200 (Toll Free)
www.vivitar.com
Keep Manual and All Relevant Information for Future Reference
1 Year Warranty (for details,visit www.sakac.com/warranty/) or call 1800 592 9541

FCC ID:2BDKM-VRC5181



Item# VRC5181-BLU



6 81066 10230 5