

Retro Multifunctional Wireless Charging Speaker Lamp
Operation instructions


First of all, thank you for choosing our products and hope you enjoy your music journey

1. Safety guidance

Please read this manual carefully before use and save it for future reference.

- A. Keep away from heat sources, sun exposure and sharp objects.
- B. Keep away from open flames.
- C. Do not insert any metal objects to avoid short circuit.
- D. Do not repair the product yourself but contact an authorized repair manufacturer.
- E. Avoid exposing the product to rain, spray or other liquids.
- F. If the product is overheated, damaged or falls into liquid, please stop using it.
- G. Use products according to local standards and regulations..

2. Product diagram

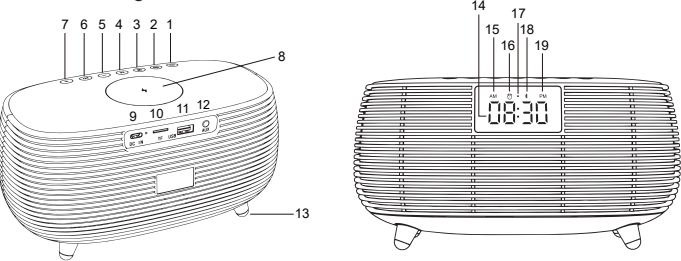

- 1.On/off key 2.Light key 3.Clock key 4.M mode key 5.Previous song/Volume down key
6.Play key 7.Next song/Volume up key 8.Wireless charging position 9.TYPEC charging port
10.TF card slot 11.USB socket 12.AUX socket 13.Tripod 14.Time dispal 15.AM icon
16.Alarm clock icon 17.MIC 18.Bluetooth icon 19.PM icon

3. Key functions

On/off button: Press and hold for 3 seconds to turn on/off. After turning on, short press to adjust the brightness of the display screen and turn off the display.

Light button: Long press for 2 seconds to turn off or on the light, short press to adjust the light mode.

Clock key: Short press to adjust the clock 24/12 hour standard and clock, long press to adjust the alarm time.
M mode key: Click the M key to switch modes.

Previous song button: In Bluetooth, T card, USB music mode, click to play the previous song; in FM mode, click to change to the previous radio station; long press to decrease the volume. Alarm clock settings Short press or long press to adjust the clock or the minute digits to decrease.

Play button: In Bluetooth music status, short press to pause play. When a Bluetooth call comes in, short press to answer, long press to reject, and double press to call back. In FM mode, long press to search for channels and short press to mute.

Next song button: In Bluetooth, T card, USB music mode, click to play the next song; in FM mode, click to change the next radio station; long press to increase the volume. Alarm clock setting Short press or long press to adjust the clock or minute numbers to increase.

4.Wireless charging usage

The wireless charging of this product requires an external power adapter to work properly. An adapter with an output of 5V/3A or 9V/2A is required. This product provides wireless charging with a maximum power of 15W. If you use a Bluetooth speaker and lights while charging, the wireless charging power may not reach 15W due to excessive power. If the adapter is not configured according to the above specifications, wireless charging may not work properly, which is normal.

5.Bluetooth function

After powering on, the speaker defaults to Bluetooth status, and the Bluetooth icon flashes. Turn on Bluetooth on your phone and search for the pairing name. Then click on the pairing name found on your phone to complete the Bluetooth connection between the phone and the speaker. After the pairing connection is successful, the Bluetooth icon of the speaker will always light up. In the Bluetooth state, if there is an incoming call, short press the play button of the product to make a hands-free call through the speaker. During a call, short press the play button on the speaker to hang up the call. Double-click the play button to call back the last call.

6.FM function

After powering on, press the M mode key to switch to FM mode. After entering FM mode, you can automatically search for radio stations by long pressing the play button. During the radio search process, the speaker will automatically save the radio station. After the search is completed, FM will automatically enter the first radio station. , at this time, you can adjust the radio program by short pressing the up and down buttons of the speaker. Long press the up and down music keys to adjust the volume of the radio station. In FM mode, short press the play button to mute FM.

7. TF card and USB flash drive

When the speaker is plugged into the TF card or U disk, the speaker will give priority to playing the songs in the TF card or U disk. The songs support MP3, WAV and other conventional formats. You can pause or play the music by short pressing the play button. Short press up and down. The music key can adjust the track selection of the music in the TF card or USB flash drive. Press and hold the up and down music keys to adjust the volume of the speaker.

8. AUX function

Plug in the audio cable with 3.5 connector, and the external audio source can be played through this product. Under the AUX function, the volume can only be adjusted by long pressing the up and down song keys, and the control of playing and pausing the up and down songs cannot be realized.

9.Clock and alarm settings

A.After turning on, the display screen will display the time. There are two ways to adjust the time: first, you can touch the button to adjust the time. Short press the time clock button to display the time format first. You can adjust the time format by short pressing the previous or next button, 12H or 24H format. After selecting the time format, continue to short press the clock button, and the clock value will flash. Short press the previous or next button to adjust the clock value. Continue to short press the clock button, and the minute value will flash. Short press the previous or next button to adjust the minute value. After the adjustment is completed, press the time button again to confirm the adjustment time. The second option is to connect the phone in Bluetooth mode. When the product is Bluetooth connected to the phone, the time display of the product will automatically synchronize with the phone.
B.12H format, the AM icon lights up from 0:00 to 11:59 am, and the PM icon lights up from 12:00 to 11:59 pm; 24H format, the display is from 0:00-23:59 all day, AM and The PM icon does not light up.
C.Press and hold the clock button, the alarm clock icon and clock numbers will flash, short press or long press the previous or next song button to adjust the alarm clock value, press the clock button again, the alarm clock minutes will flash, short press or long press Press the previous or next song button to adjust the minutes value of the alarm clock. After the adjustment is completed, press the clock button again and it will display OFF. Short press and long press the previous or next song button to turn on the alarm clock. After the alarm clock is turned on, it will display ON and the alarm clock icon will light up. During the setting period, if there is no operation, the system will automatically exit the current operation in 5 seconds by default.
D.After the alarm clock is turned on, the alarm clock icon will be displayed on the display screen; after the alarm clock is turned off, the alarm clock icon on the display screen will be cleared accordingly.
E.After the alarm clock rings, the ringing time lasts for about 10 minutes when you do not press the button on the product. When the alarm is ringing, press any button on the product to end the alarm. After the ringing is completed, the alarm clock icon will remain on, and the alarm will automatically ring at the same time the next day. To exit the alarm clock, you need to adjust the alarm clock to OFF according to point 'C' above.

10. Charging and low battery

When the product is low on battery, there will be a voice reminder. After plugging in the charging cable, the charging indicator light turns red. When charging is completed, the light turns off.

11. Function parameter

- 1. Product functions: Bluetooth, call, clock, alarm clock, TF card, U disk, AUX, FM, colorful lights, wireless charging
- 2.Bluetooth version: V5.2
- 3. Speaker specifications: Ø57mm, 4Ω 8W*2
- 4. Wireless charging output: 5W/7.5W/10W/15W
- 5. Wireless charging source input: 5V/3A; 9V/2A
- 6. Lamp bead specifications: Symphony 5050LED
- 7. Battery: Built-in 2400MA lithium battery
- 8. Charging interface: Type-c
- 9. Product size: 228*128*115mm
- 10. Product weight: 875g

FCC Warning

This device complies with Part 18 and Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Refer to FCC Part 18.213(c) and KDB 784748 Anner A section A.5:

(a) Max. Electric Field Emissions: 6.01V/m

Max. Magnetic Field Emissions: 0.36A/m

(b) The maintenance of the system is the responsibility of the manufacturer.

(c) To prevent interference, the product should be as far away from devices operating at the same frequency as possible.