


In The Box

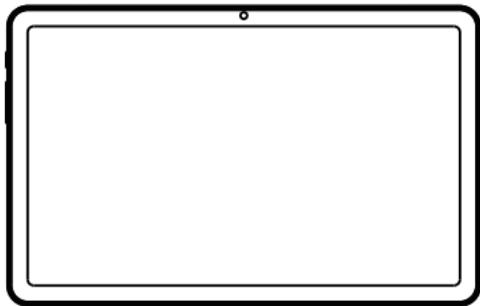

 
User Manual



Cable TYPE-C



SIM/micro SD card eject pin



Charger

Input: 100-240V/~ 50/60Hz, 0.5A Max.
Output: 9.0V ==2.0A


Starting Your Tablet

1. Press and hold the Power button for 3~4 seconds.

(If your tablet does not turn on, or instructs you to "Connect your charger", connect the AC adapter and charge the device.)


(To power off the tablet, pls press Power button + volume up button at the same time)

2. In the Start-up screen interface, slide up by your finger to unlock.

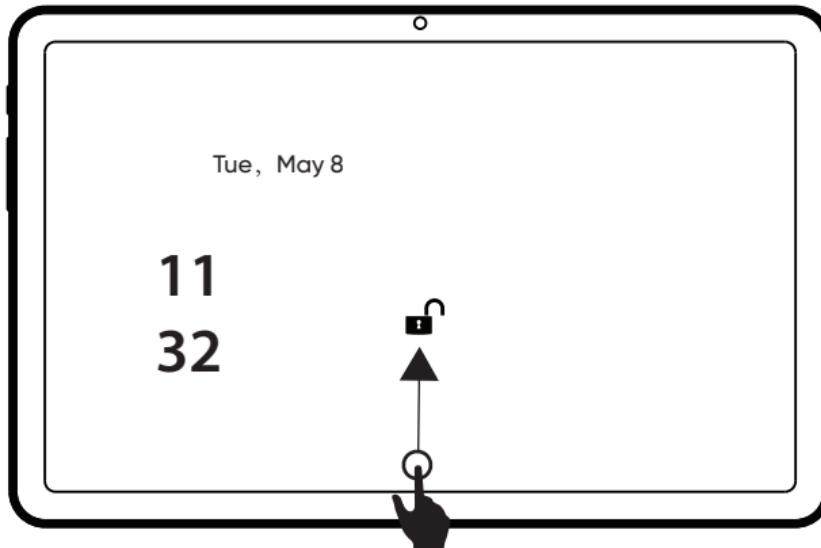

3. Once you've entered the Home interface, you can start to use your tablet.


Home Screen At-a-Glance

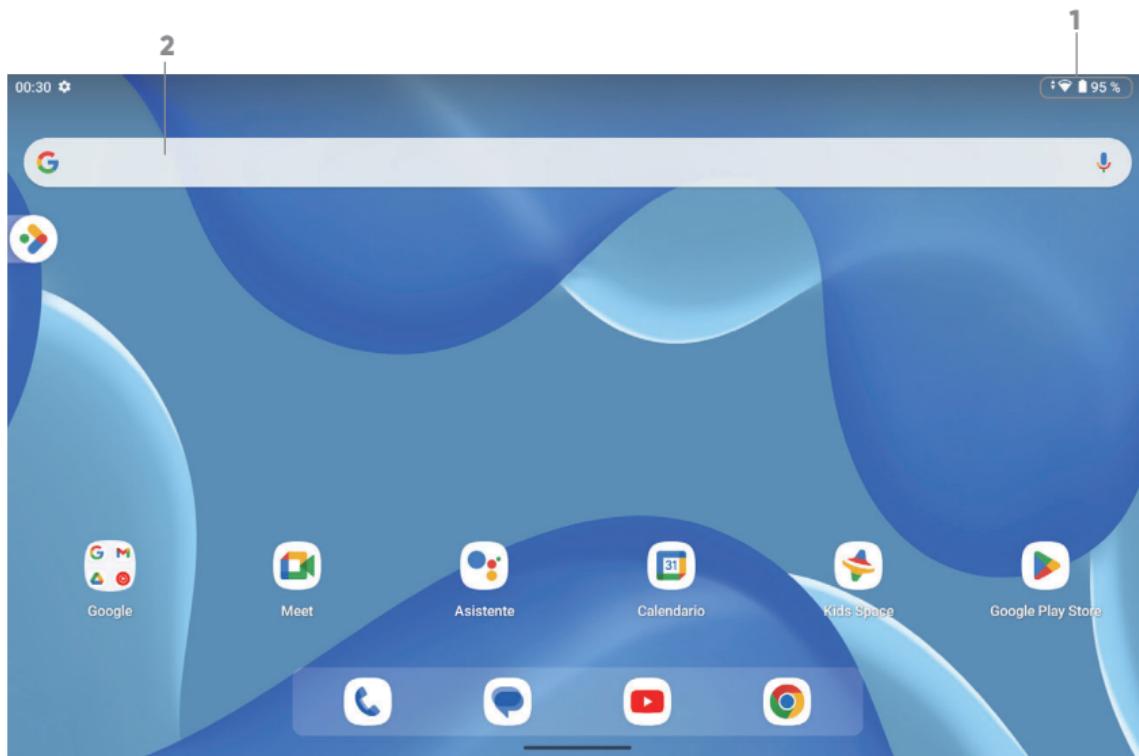

1. Status Bar 2. Search Box

Using the Cameras

Tap on the Camera Icon

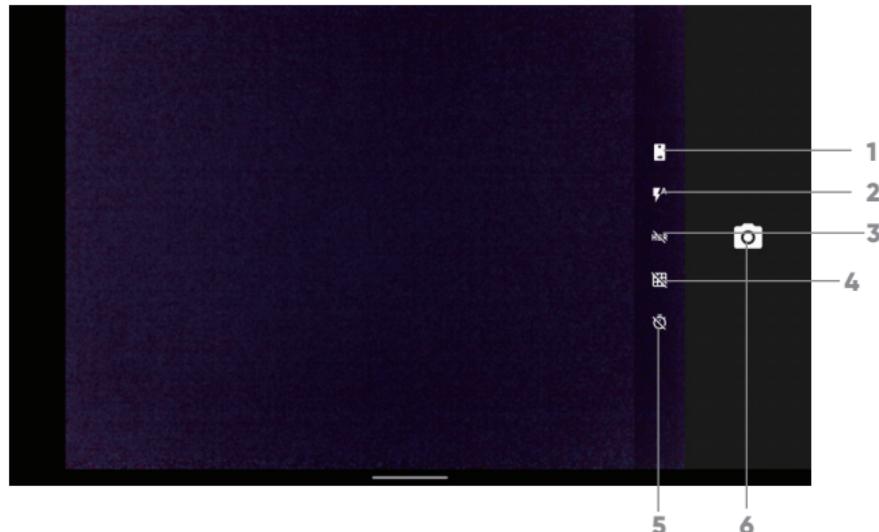


- 1. Flip lens
- 4. Grid view

- 2. Flash light
- 5. Time lapse shooting

- 3. HDR
- 6. Shoot

System updates help protect your device while providing new features we think you will love.

1. Connect the device to the internet. (see Connecting to WiFi)
2. Select "Settings"  select "System", then select "System update", then tap on the "Check for update" button.
3. After you've searched for new updates, the system will download any available system updates.
4. After the download is complete, tap the "Restart now" button to restart the tablet and install the update.

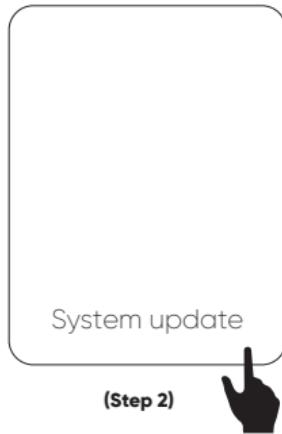

Log in or Change Your Google Account


1. Select "Settings"  and select the "Passwords & accounts" menu.
2. Select "Add account".
3. Select "Google" or another app accounts you'd like to add.



(Step 1)




(Step 2)

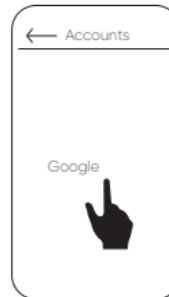


(Step 3)


4. Enter your Google Account and password accordingly in the sign in interface and tap "Next".
5. Choose to turn on or off "Back up to Google Drive" and then tap "Accept".

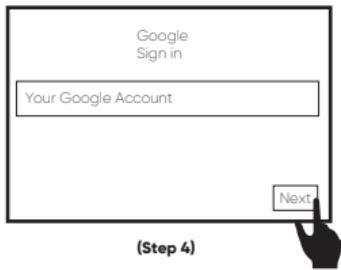

(Step 4)

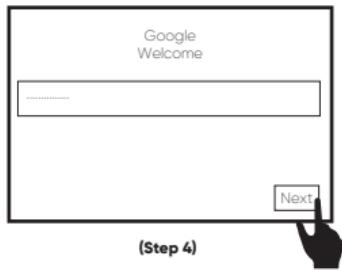


(Step 4)

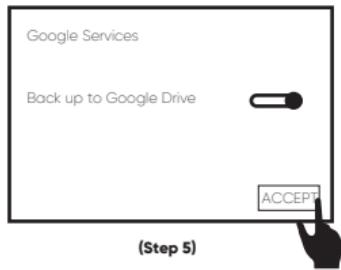

(Step 5)


Navigating Apps

1. Swipe up in the middle of the screen to enter app list.
2. Find your app manually from the app list.
3. Swipe down to exit your app list and back to Home interface.

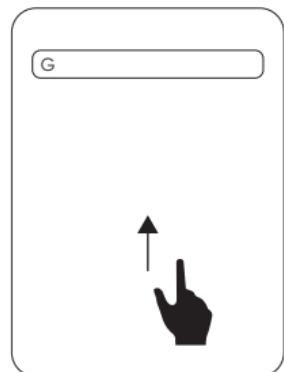

Getting New Apps

1. Connect the device to the internet.(see Connecting to the Internet)
2. Go to Google Play Store and log in your Google account.
3. Type the desired App's name in the search bar, tap the install button to start the download.
4. After the download is complete, install the app, then the new app will appear in the app list.

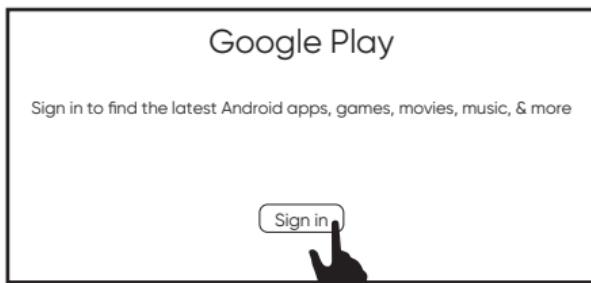

(Navigating Apps Step 2)



(Navigating Apps Step 3)

Google Play Updates


The first time you sign in Google Play, updates will automatically start to download.

The download icon will appear in the status bar at the top left of screen. Installing a new application while downloading multiple apps will slow down the speed and performance of the device.


After all downloads and updates have been installed, the tablet will recover normal operating performance.

To check the progress of downloads in the background, slide down from the top edge of the screen by your finger.

Touching and Typing


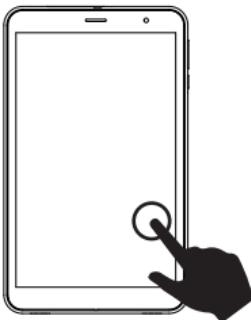


To select an icon or menu on the screen, tap it by your finger. Some icons/menus may require you to "double-tap".

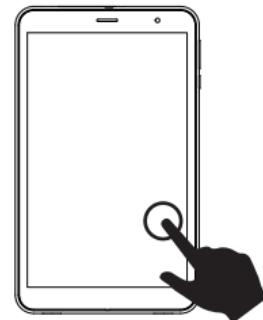


To type in a text field (i.e., when inputting your name, or a website), tap the text field.

The virtual keyboard will appear, and allow you to type the information you would like to input.

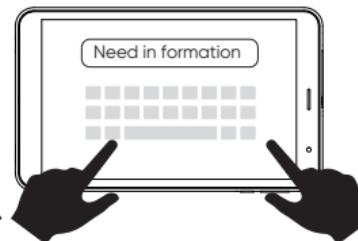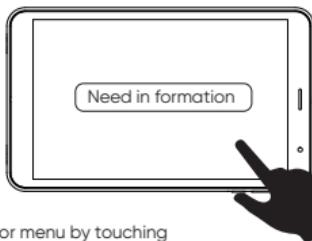


Touch and Hold: Keep your finger on an icon or menu until it glows or activates an alternate option.

Drag: Move an App or menu by touching and holding it, then sliding it to the destination.

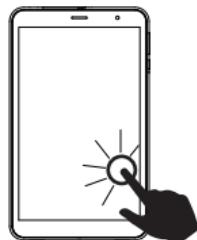

Slide: When there are other interfaces or positions for the icon or menu, drag it and slide to new interface or position.

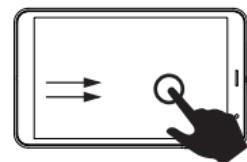


Connecting to the Internet

1. Select "Settings"  and select the "Network & internet" menu.
2. Select "Internet" and turn on Wi-Fi switch.




3. Available Wi-Fi networks will be listed here, select your preferred network.
4. Enter the Wi-Fi password in the pop-up interface and tap "CONNECT" to start the connection.

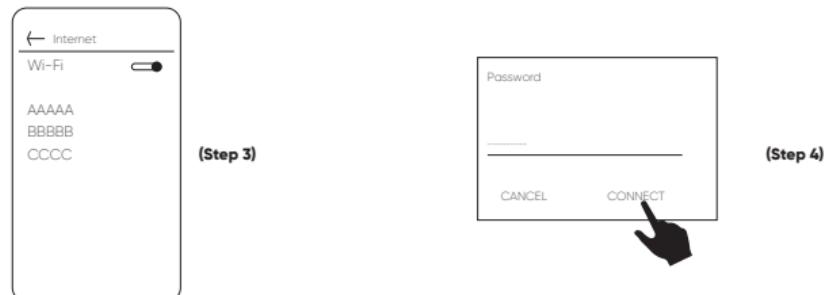

5. Wi-Fi will be connected automatically next time.

Your tablet is compatible with Bluetooth devices. Once your tablet searches and finds the Bluetooth device, follow pop-up interface instructions to initiate the pairing of the device with the tablet. Add or "PAIR" a Bluetooth compatible device with your tablet as follows:

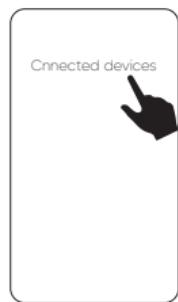

(Step 1)



(Step 2)




(Step 3)



(Step 4)

Charging Your Tablet

It is recommended to fully charge the tablet before first use.
To charge the tablet, (1) Plug the USB cable into the adapter,
(2) Connect the other end to the TYPE-C port of the tablet,
(3) Plug the AC adapter into a wall outlet.

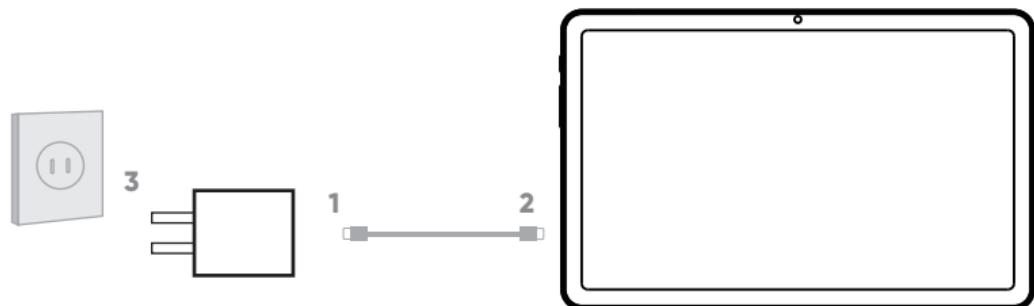


It is normal for the tablet to get warm while charging, playing high in tensity games, or streaming video. Battery life will vary depending on usage.

Note: Leave tablet in well ventilated area while charging.

Follow the steps below to set up Google Kids Space.

1. When asked who is going to use the device, tap A child.

 
(If you've previously set up an account, tap on the Google Kids Space icon)



2. Sign into your child's existing Google Account or follow the prompts to create a new Google Account for your child under 13 (or the applicable age in your country).
3. When prompted to set up Google Kids Space, tap Set Up.
4. Edit your child's settings and interests.

Remove the Kids Space

1. In the bottom right, press and hold the Parent menu ->Device Settings.

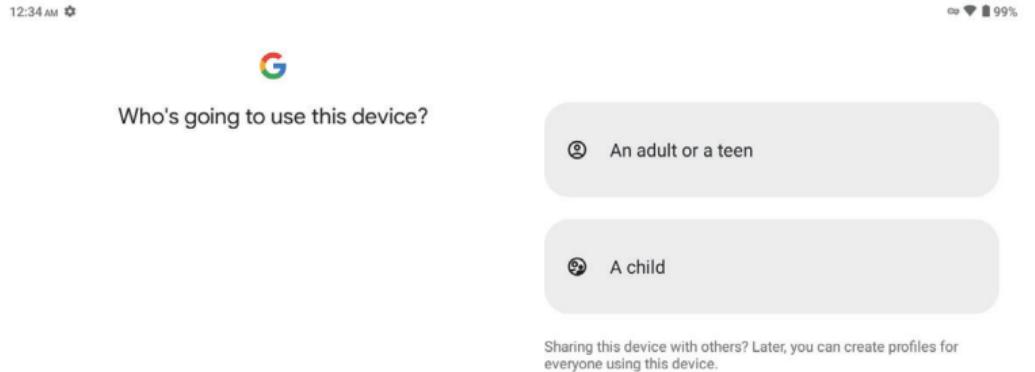

2. Go to Accounts to remove the account from the device.

More details about Kids Space on g.co/KidsSpace.

1. Slide the "Entertainment Space" icon to right, follow the prompts to log in to Google Play.
2. You can choose to log in with a child account or an adult account.



(Step 1)



Google Play

Sign in to find the latest Android apps, games, movies, music, & more

Sign in

(Step 1)

Who's going to use this device?

An adult or a teen


A child

Sharing this device with others? Later, you can create profiles for everyone using this device.

(Step 1)

Entertainment Space instruction

3. Enter the Google account and follow the system prompts to enter the main interface of Entertainment Space.

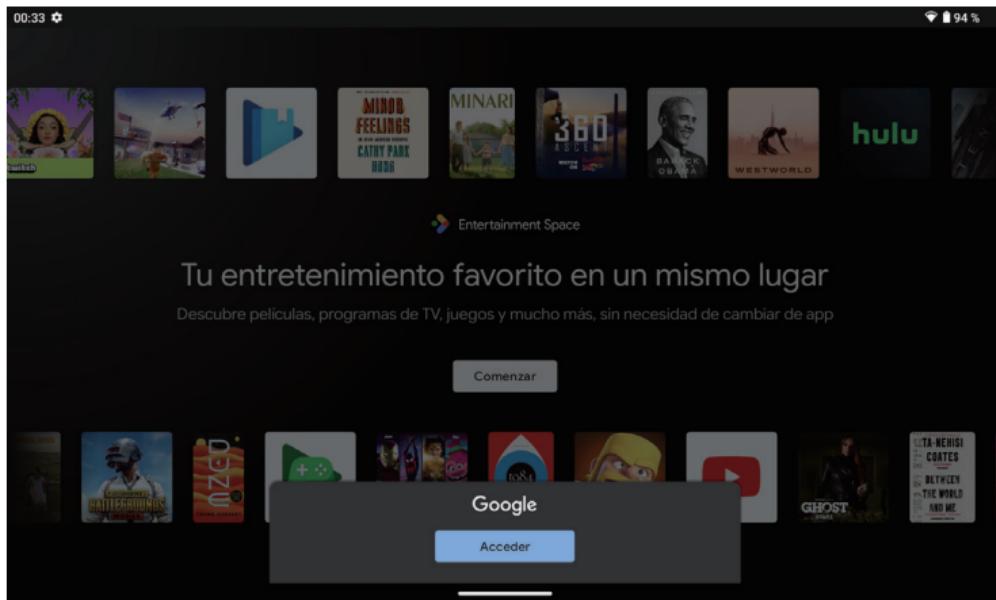

4. Tap "Update" to search for the latest updates of Entertainment Space.

1. Do not use the device near any heat sources such as radiators, heat registers, stoves, or other apparatus (Including amplifiers) that produce heat.
2. **WARNING:** Only use attachments/accessories specified or provided by the manufacturer (Such as the exclusive AC adapter, battery etc).
3. **WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
4. **WARNING:** To reduce the risk of fire or electric, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and the objects filled with liquids. Such as vases, shall not be placed on apparatus.
5. **WARNING:** Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.

Use the devices where the ambient temperature is between 0° and 35°C (32 to 95°F).

Low- or high-temperature conditions might cause the device to change its behavior to regulate its temperature. Using Android device in very cold conditions outside of its operating range might temporarily shorten battery life and could cause the device to turn off. Battery life will return to normal when you bring the device back to higher ambient temperatures. Using the devices in very hot conditions can permanently shorten battery life.

Important Safety Instructions

We would like you to have a safe and enjoyable experience.

Please read the following instructions and notices before using your tablet.

- Avoid using the tablet in extremely hot, cold, dusty, damp or wet environments.
- The tablet is not moisture/water-resistant. Avoid using the tablet around sources of water.
- Avoid dropping or forcibly placing the tablet onto a hard surface. This may damage the screen or internal electronic components and void the warranty.
- Do not use alcohol, thinner or benzene to clean the surface of the tablet. Use only cleaning products designed for computer tablet devices.
- Do not use the tablet while walking or driving.
- Excessive use of earphones at high volume may lead to hearing impairment. Limit earphone usage, and adjust the volume to a moderate level when doing so.
- The images in this guide may vary slightly from the actual product.
- Charge the tablet battery under any of the following circumstances
 1. The battery level icon indicates low power, by showing a drained, red battery icon.
 2. The tablet powers-off automatically, and continues to do so even after restarting.
 3. On-screen keys do not work.
- Do not suddenly disconnect the tablet when formatting, uploading or downloading data. This can lead to program errors (e.g., system or screen "freezing".)
- Static discharge is normal and can occur in an electronic device. Although not life threatening, it may corrupt files or damage memory and its content.
- Dismantling the tablet will void the manufacturer's warranty.
- The tablet functions, hardware, software, and warranty information may be improved or modified by the manufacturer or their respective owners and is subject to change without notice. Google, Android, Google Play and other marks are trademarks of Google LLC.

1. I cannot turn my device on.

press and hold the power button for more than 3 seconds or charge the tablet for 10-15 minutes.

2. My tablet does not charge.

Use the in-box charger and USB cable to charge your tablet.

Check whether the power outlet is working, and the charger is correctly plugged into the outlet.

Reconnect the charger to the device and let it charge for 10-15 minutes. Then press the power button to check if there is a charging prompt.

3. My tablet cannot connect to Wi-Fi.

Use your device closer to your router, if this does not solve the issue restart your router.

4. My tablet turns off automatically.

Please charge the tablet.

5. My tablet's touch screen is malfunctioning

Clean your tablet screen.

6. My tablet runs slow.

Close or uninstall unwanted applications.

7. My tablet's system is abnormal.

Uninstall third-party programs/restore factory settings.

If any problem, pls contact below service center:

TEL. NO. : 5567261090 /8003263491

COMPANY NAME: ECOFIX.TV, SA DE CV

ADDRESS: BLVD. MANUEL AVILA CAMACHO 1615, COL. LA FLORIDA, C.P. 53160, NAUCALPAN,

STATE OF MEXICO.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This Device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Device has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the device kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.