

COMFAST

Quick Installation Guide

 


Wireless Router
M0304517 Version 2.0


1 Equipment wiring

1.1 If you use broadband dial-up Internet access, please connect in sequence 1, 2, 3, 4 as shown in the figure below; If you use residential broadband to access the Internet, please connect in the order of 2, 3, 4 as shown in the figure, and connect the router The WAN port directly accesses the broadband of the community.

Dial-Up Internet

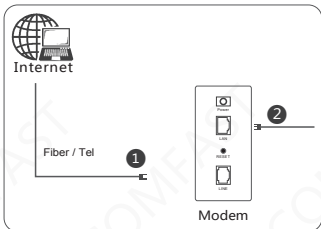

Broadband Internet

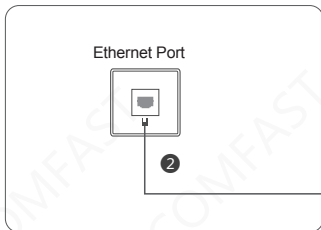 


wireless connection

Search for wireless signals and connect the wireless name to COMFAST_XXXX_2G/5G (XXXX is the last four digits of MAC)



 router



Power Socket

 


4 Power Port

2 Connect to WAN Port

Wired connection


3 Connect to LAN port

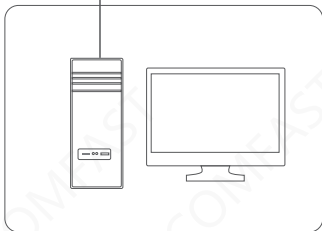

Special note: This manual is only for instructions on connecting to the Internet. If you have more functional requirements, please download the detailed operation manual from the COMFAST official website www.comfast.cn.

2 Fast networking

2.1 After connecting the router device, enter 192.168.0.1 in the address bar of the computer (mobile phone) browser to enter the device login page. Enter the default username admin and default password admin.

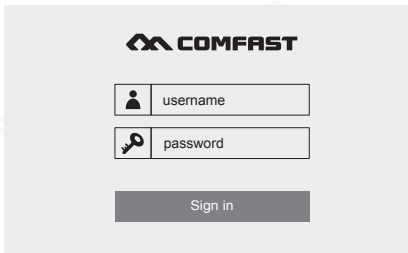


The image shows the login page for a COMFAST router. At the top center is the COMFAST logo, which consists of a stylized 'C' icon followed by the word 'COMFAST' in a bold, sans-serif font. Below the logo are two input fields. The first field has a person icon on the left and the text 'username' on the right. The second field has a key icon on the left and the text 'password' on the right. At the bottom center of the form is a dark grey button with the text 'Sign in' in white.

2.2 Enter the setting interface and select the "Setting Wizard" routing mode setting. Fill in the broadband account and password in the "Setup Wizard"- "External Network Settings", and set the broadband "uplink" and "downlink".

Note: If the user logs in for the first time (including the first login after restoring factory settings), he will directly enter the "Setup Wizard" page.

HOME PAGE > SETUP WIZARD

 Router Mode



WAN Settings

ADSLPPPOE Static IP DHCP

Ip Address

Subnet Mask

Gateway

Main DNS

Up
1-1000(Mbps)

Down
1-1000(Mbps)

Back

Next

2.3 Fill in the IP address and subnet mask in "Setup Wizard"- "Intranet Settings".

Note: In most cases, this step only needs to be defaulted.

HOME PAGE > SETUP WIZARD

Router Mode



LAN Settings

Ip Address

Subnet Mask

Back

Next

2.4 Fill in the wireless SSID and wireless password in "Setup Wizard"- "2.4GHz Settings".

Note: SSID is the WIFI name, and the wireless password is the WIFI password; the password must be a combination of letters and numbers.

HOME PAGE > SETUP WIZARD

Router Mode

① — ② — ③ — ④

WiFi Unification OFF

2.4G Wireless Stting


| | |
|----------------|----------------|
| SSID | COMFAT_XXXX_2G |
| Password | |
| Channel Width: | 40MHz |
| Password | China |
| Channel | auto |

Advanced WiFi Settings

| | |
|----------------|----------------|
| SSID | COMFAT_XXXX_5G |
| Password | |
| Channel Width: | 80MHz |
| Password | China |
| Channel | auto |

Back **Next**

 2.5 The setting is successful. Click "Finish", the page will jump to the login interface; after logging in again, you can view the basic information of the device, and you can also select more functional categories to set up, and enjoy the powerful business functions that this device brings to you .

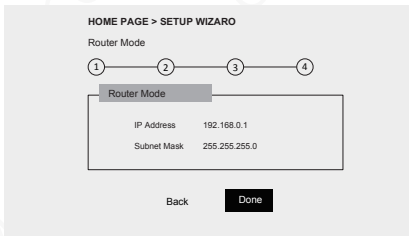

3 FAQ

3.1 What should I do if I forget the password to log in to the device (how to reset the router)?

A. Forgetting the password to log in to the device can only restore the device to the factory default settings, that is, reset. There is a RESET button between the power port of the device and the WAN port. When the device is powered on, press the RESET button with your finger for about 7 seconds, the indicator light flashes 3 times quickly and then release it, the reset is successful.

Note: After reset, the router's default login IP is 192.168.0.1, and by default, a password must be set for the first login. When logging in, please make sure that the computer's IP address is automatically obtained in the network segment 192.168.0.X (x can take any value between 2-254).

3.2 What should I do if I cannot log in to the management interface of the device?

A. Please make sure that the IP address of the computer and the login IP address of the device are in the same network segment: if the default login IP address of the device is 192.168.0.1, the computer IP address must be 192.168.0.X (x is any integer before 2-254) ;

B. Please make sure that the browser is set to "Never dial-up connection", and no proxy server is set; the method is as follows (take IE browser as an example): Select Tools-Internet Options-Connection, and select "Never dial-up connection" "; Click "LAN Settings" to remove the proxy server option.

C. You can try to change to another computer to log in; if the above prompt does not help you log in to the device, please restore the device to the factory and operate again.

3.3 Why can't my laptop search for wireless signals?

- A. If it is the built-in wireless network card of the laptop, please make sure that the wireless function switch is turned on (it is recommended to contact the pen vendor or consult the relevant manual);
- B. Check whether the wireless network card driver is successfully installed and whether the wireless network card is enabled in the device manager;
- C. Check whether the wireless service of the laptop is turned on, click My Computer on the desktop, and select Manage. Select "Services and Applications" in the computer management, and then check the status of "Wireless Zero Configuration" in the "Services page".
- D. Please make sure that the wireless function of the device is turned on and SSID broadcast is allowed.
- E. Try to see if the wireless signal can be searched at a close distance to avoid serious signal attenuation due to too many obstacles; if the above tips cannot help you, please confirm whether other wireless network cards can connect to the wireless router. If nothing works, please restore the device to factory settings.



Warning

1. Please remove the router's power supply and all connections during thunderstorms to avoid damage by lightning;
2. Keep away from heat sources and keep well ventilated;
3. Please pay attention to waterproof in storage, transportation and operation environment;
4. Use the power adapter attached to the router;
5. Place the equipment on a stable surface.

Quick Installation Guide

Statement

**Shenzhen Four Seas Global Link Network
Technology CO.,Ltd.Company
all rights reserved.**

Without our official written permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means (electronic, mechanical, printing, recording or other possible means) or for the propagation of goods any commercial, profitable purposes.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co., Ltd. Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreements, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee

Manufacturer: Shenzhen Four Seas Global Link Network
Technology Co., Ltd. Company
Address: Room 607-610, Block B Tao JINDI Electronic
Business Incubation Base, Tenglong Road, Longhua
District, Shenzhen, China
Hotline: 4009-001-766
Website: en.comfast.com.cn

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.