


# User Manual

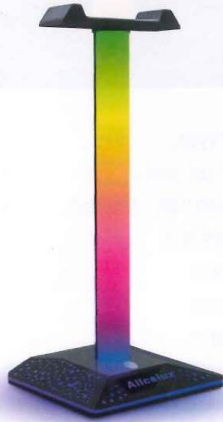

## Download app



Scan QR code and download app

## APP: LotusLamp X

Connection:

1. Scan QR code and download app
2. Turn on Bluetooth
3. Open LotusLamp X-APP, wait 3-5 seconds and the device will automatically connect.

- 3 -

## Specification

Name: Smart atmosphere light  
 Voltage: 5V  
 Current: 1A  
 Led chip: RGBIC  
 Beam angle: 180°  
 Working Distance: -20°C-45°C  
 Power supply: USB  
 Lifecycle: 50000 hours  
 Size: 110\*110\*280mm


## Base of light



1. Type-c: Power supply port


- 1 -

## APP

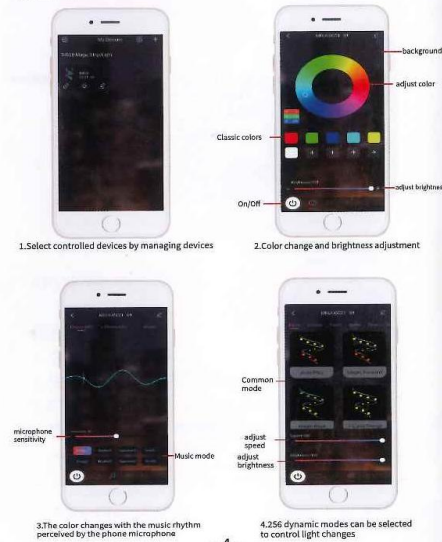

- 4 -

## Touch

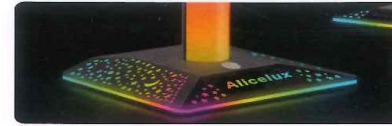

1. Tap "⊙" for ON;
2. Long press "⊙" 3s for OFF;
3. When light is on, tap "⊙" to switch mode;
4. 17 different modes
  - 8 static modes
  - 8 dynamic modes
  - 1 music mode

Note:

This product has power-off memory function. It can be turned on after turning off the light. It is still in the mode before turning off the light.

- 2 -



- 5 -

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

- 6 -