

# V8 中性英文蓝牙版

V1.0版：20230301

## 技术要求：

1、材质:80g双胶纸 2、展开尺寸:150X100MM 3、印刷色:黑色印刷 4、工艺:正反面印刷,对折

BlueT Version	
BlueT version:	V5.0
Receiving distance:	≤10m
Output Power:	6W
Speaker size:	2 inches × 2
Frequency response:	60Hz~20KHz
Signal to noise ratio:	≥80dB
Input voltage:	DC 5V
Input Current:	1000mA
Audio input:	BlueT/AUX
Speaker size:	W415 × D78 × H68mm

**Package Contents**

Speaker \*1  
Instructions \*1


## BLUETOOTH SPEAKER



# V8

USER MANUAL

### Product Description

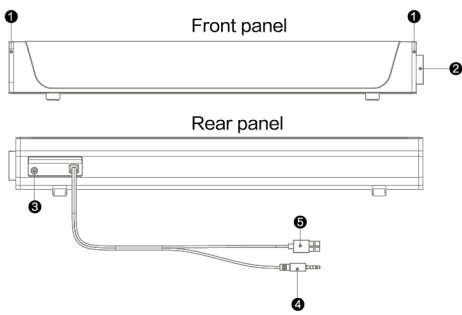

1. 7 color LED lights
2. Power switch/volume adjustment knob
3. 7-color LED light switch button
4. 3.5mm audio input: plug in the audio output interface of the connected device
5. USB 5V power supply input: it can be directly plugged into the USB port of the computer for power supply, or it can be directly connected to the power conversion head (such as a mobile phone charger).

### BlueT connection

1. Turn on the power switch, there will be a beep when booting, the default is BlueT mode. Then turn on the mobile phone or other BlueT device, search for the corresponding BlueT name " V8 ", click connect, there will be a prompt tone after the pairing connection is successful. You can play music.
2. After connecting with the mobile phone once, the BlueT has a memory function. After turning on the phone, it can be automatically connected or need to be connected manually according to different types of mobile phones.
3. Disconnect BlueT mode, insert AUX to automatically switch AUX playback mode, and automatically disconnect AUX playback mode when BlueT is connected.

## FCC Warning

### **15.19 Labeling requirements.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **15.21 Information to user.**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **15.105 Information to the user.**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

### **FCC RF Radiation Exposure Statement:**

- 1.This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- 2.This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.  
This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.