

65mm



**Catalog**

English-----2

Français-----9

Deutsch-----15

Español-----21

日本語-----27

Italiano-----33

**Packing List**

- NOBIS CLIP N1 \* 1
- USB-C Charging Cable \* 1
- User Manual\* 1

**At a Glance**

- Power button
- Bluetooth button
- Multi-function button
- Volume up button
- Volume down button
- Beat button
- Beat touch key
- Power/Bluetooth indicator
- Beat indicator
- Rubber flap
- USB-C charging port

**Specifications**

- Output power-----5W RMS
- Frequency response-----90Hz-20KHz
- Signal-to-noise ratio----->90dB
- Battery-----Lithium-ion 6.66Wh
- Battery charge time-----3.5 hours(SV/1A)
- Music playtime-----up to 24 hours(varies by volume level and audio content)
- Bluetooth version-----5.3
- IP Rating-----IP68
- Dimensions(WxHxD)-----80.4x52.5x138mm
- Weight-----250.7g

**Specifications are subject to change without notice.**

**Using Your Wireless Speaker**

**NOBIS GO APP**  
Download the NOBIS GO app for an enhanced experience.

**1. Charging**

Fully dry off the USB port before charging.

Indicator:  
Blinking red rapidly: Low battery  
Blinking red slowly: Charging  
Solid white: Full charge

**2. Powering On/Off**

Press and hold down the power button for 1 second to power on.  
Press and hold down the Power button for 1 second to power off.

The speaker will power off automatically 20 minutes after no audio input or button inactivity.

**3. Pairing**

Press the Bluetooth button to enter the Bluetooth pairing mode.  
Select "NOBIS CLIP N1" on your device's Bluetooth device list to connect.

Multiple Bluetooth Connection: This speaker can pair up to 6 mobile devices via Bluetooth. To pair with another device, press the Bluetooth button to re-enter Bluetooth pairing mode.  
This speaker can only play music on one mobile device at a time. To play from another connected device, pause the currently active device first.  
Each time you power on your speaker, it will automatically connect to your last connected device if available within the Bluetooth range. If not, press the Bluetooth button to enter Bluetooth pairing mode.

**4. Controls**

x1: Press once x2: Press twice x3: Press three times

**5. Beat Function**

Beat indicator:  
Solid colour: Different beat sound  
OFF: Beat function off

Beat ON/OFF Beat sound switching

Beat mode switching

1: Beat ON/OFF Beat sound switching

2: Beat mode switching

3: Beat mode switching

**6. Stereo Link Function**

With the stereo function, you can pair your Nobis CLIP N1 with another Nobis CLIP N1. Two speakers can play together in stereo mode.

Speaker 1 Speaker 2

**Beat Function On/ Off and Beat sounds switching**

- Press the beat button >C repeatedly to switch between different beat sounds or turn off beat function.
- When beat function is on, touch the beat touch key □ to play the corresponding sound.
- When music is playing, the beat sound will be mixed with the music. When no music is playing, the beat sound will be played alone.
- More beat sounds in Nobis GO app.

**Beat modes switching**

- When beat function is on, press and hold down the Beat button >C for 1 second to switch between different beat modes.
- The different beat modes cover commonly used music beats such as 2/4, 3/4, 4/4, 3/8, 6/8, and so on.
- The recommended beat modes are as follows.

Mode No.	Music Beat	Music style
Beat Mode 1	2/4	Hip-hop, Electronic Dance Music, Techno, House, Pop, Rock and Roll, Tango, March
Beat Mode 2	3/4, 3/8, 6/8, 9/8, 12/8	Waltz, Polka, Mazurka, Minuet, Classical, Jazz (some styles)
Beat Mode 3	4/4	Latin, Jazz, Hip-hop, Blues, Rock, Pop, Funk, Country, R&B

**Notes:**

- These are just suggestions.
- Feel free to experiment and find the best mode for your music.
- The beat modes are designed to work with most common musical time signatures, but they may not cover all of them.

**Beat sound volume control**

- Refer to the section "Controls" for the beat sound volume control.

**7. Clear the speaker pairing list**

- Press and hold both the volume up and volume down buttons simultaneously for 2 seconds, until you hear "Pairing" and the Power/Bluetooth indicator blinks white rapidly.
- Delete your speaker from the Bluetooth list on your mobile device.

**8. Factory Reset**

- Factory reset clears connected devices and other settings from your speaker and returns it to the original factory setting.
- Make sure the speakers is powered on.
- Press and hold down the beat button for 8 seconds.
- Once the reset is complete, you'll hear "Pairing" from the speaker.

**9. Forced Reset**

- If your speaker experiences issues like unresponsive buttons, failure to power off, or charging problems, a forced reset may help.
- Press and hold down the Power button for 8 seconds.
- The speaker will automatically power on once the reset is complete.

**10. IP68 Waterproof and Dustproof**

Perfect for taking to the lake, the beach, listening by the pool, listening in the shower.

The rubber flap needs to be closed to keep the speaker waterproof and dustproof.

**Important Safety Precaution: When the speaker is plugged in to a charging source with the USB-C charging cable, never use the speaker in the shower, bath, or near water to prevent risk of electric shock.**

**Rappresentante UE**

Nome / Azienda: REP Europe GmbH  
Indirizzo: Annastraße 9B, 64347 Griesheim, Germania  
Persona di contatto: Ben Xu  
Numero di telefono: +49 15751253212  
Email: info@rep-europe.de

**Safety and Precautions**

- When the speaker is plugged in to a charging source with the USB-C charging cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.
- Read and follow all instructions – All operating and use instructions should be followed.
- Protect the USB-C charging cable from being pinched, particularly at the connectors.
- Unplug the USB-C charging cable during lightning storms or when unused for long periods of time.
- Do not place speaker near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way.
- Do not make alterations to this speaker.
- The battery in the speaker is not replaceable. Do not attempt to change it.
- Use this speaker only with an agency approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC) in accordance with the manufacturer's specifications.
- Do not place near naked flame sources, such as lighted candles, on or near the speaker.
- Do not expose this speaker to excessive heat (e.g. from storage in direct sunlight, fire or the like).
- If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.

Name of the Parts	Hazardous Substance					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Housing	○	○	○	○	○	○
Loud Speakers	○	○	○	○	○	○
PCBA	x	○	○	○	○	○
Accessories Power cord, connecting cable	x	○	○	○	○	○

This table is compiled according to SJ/T 11364.

○ : Indicates that this hazardous substance contained in all of homogeneous materials for this part is below the limit requirement in GB/T 26572.

x : Indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.

**FCC Statement**

This equipment has been tested to meet the limits for Class B digital equipment pursuant to Part 15 of the FCC Rules. These restrictions are intended to provide reasonable protection against harmful interference in residential facilities. This equipment generates and radiates radio frequency energy for use, and failure to install and use instructions in accordance with regulations may cause harmful interference to radio communications. However, there is no guarantee that there will be no interference during installation. If the device has caused harmful interference to radio or television reception, the device may be determined by turning, turning it off and on, encouraging the user to attempt one or more of the following additional measures:

- Reorient or reposition the receiving antenna.
- Increase the spacing between the device and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and consider removing the no-collocation statement.

Caution!  
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. The operation is subject to the following two conditions:  
(1) This device must not cause harmful interference.  
(2) The device must accept any interference received, including interference that may result in unintended operation. Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

FCC ID: 2BDYR-ZS200

**Environment Friendly Use Period (EFUP)**

This logo refers to the period (10 years) during which the hazardous substances in electronic and electrical products will not leak or mutate so that the use of these [substances] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

**Customer Service**

For FAQs and more information:  
Please send an email to: service@nobisound.com  
www.nobisound.com