

P12 USER MANUAL

Please read this manual thoroughly before using and
keep it for future reference.

SPECIFICATION

Size	10.95"	Connection	Wi fi
Chipset	T606	CPU	Octa core 1.6GHz
GPU	ARM G57	RAM	4+12GB
Display/ Resolution	1280*800	Storage	128GB
Front-facing Camera	5.0MP	Network	802.11 b/g/n
Rear Camera	13.0MP	Power Supply	DC 5V/2A
Battery	8000mAh	Touch	Multi-touch
Operating System	Android™14.0	Ports	Type-C

FUNCTION OVERVIEW



- | | | | |
|---------------------|------|------------------------|------------------|
| 1. USB-C Port | jack | 5. Flash lamp | 9. Rear Camera |
| 2. Memory Card Slot | | 6. Microphone | 10. Power On/Off |
| 3. Volume + | | 7. Front-facing Camera | |
| 4. Volume - | | 8. Speakers | |

* Google, Android, Google Play and other marks are trademarks of Google LLC.

Battery

- * A rechargeable Li-ion battery is installed in the tablet.
- * DO NOT attempt to replace the tablet battery by yourself because you may damage the battery, which might cause overheating, fire or injury.
- * DO NOT dispose of tablet in a fire.
- * DO NOT expose the tablet battery to any heat source, direct sunlight or high temperature.
- * Only use the **ORIGINAL** power adapter provided by us to charge the tablet battery.
- * We suggest you drain the battery completely once a month if only use your tablet occasionally.
- * The Li-ion battery in your tablet should be serviced or recycled by an authorized service provider, and must be recycled or disposed of separately from household waste.
- * Dispose of battery according to your local environmental laws and regulations.

Sleep Mode

Simply press the power button once to switch the tablet to the **Sleep Mode** when the tablet is **ON**; press again to wake it up.

Tip:

Go to **Settings > Display > Screen timeout** to set the time of entering the **Sleep Mode**.

Screenshot

Press and hold the **Volume-** button and the **Power On/Off** button together to capture a picture.

HOME SCREEN

Icons on the Bottom Menu



Sliding and touch screen

Slide up the screen to enter the main menu

Slide in from left/right to return to the previous page

Quickly slide up from the "-" position at the bottom of the screen to return to the home screen.

Slide up a bit from the "-" position at the bottom of the screen to display running applications, tap a background application to switch to it, or slide up to close it.



1. Back
2. Home Screen
3. Recent Activities

Set navigation Button:

Go to the **Settings** application > **System** > **Gestures** > **System navigation** > **Gesture navigation** or **3-button navigation** on the tablet, and select **3-button navigation**.

The screen will display three buttons: 'Back', 'Home', 'Recent Activities',

Tap a button to enable it.

1. Tap **Back** button to return to the previous page
 2. Tap **Home** button to return to the home screen
 3. Tap **Recent Activities** button to display all running applications.
- tap a background applications to directly switch to it or slide it up to close.

Home Settings and Wallpapers



 
Tap and hold the empty section of a Home screen, **Home settings** and **Wallpapers** will be displayed.

1. Tap **Home Settings** to check the option of **Add icon to Home screen**:
Allow the new Apps installed on Play Store to be displayed on the Home Screen.
2. Tap **Widgets**, touch and hold any application (e.g. Clock), then slide and add it to a Home screen. Remove it by sliding it to **X Remove**.
3. Tap **Wallpapers & style** to change the current wallpaper of the tablet and its style, and more.

SETTING BASICS

Quick Settings

Swipe down from the top of the screen to access Quick Settings.

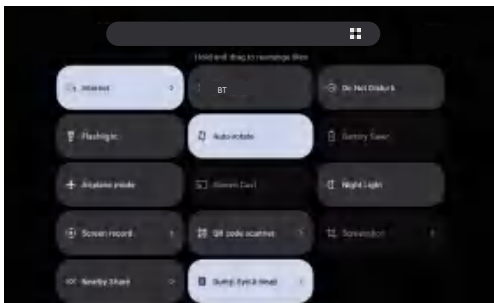

 : Internet. Tap to connect/disconnect to a wireless network


 : Do not disturb . Block sound after enabling this feature


 : Flashlight .Tap to turn the flashlight on/off

 : Auto-rotate. Turn on/off the Auto-rotate of the screen


 : Power saving mode.Tap to choose the power setting you prefer to save battery time

 : Airplane mode. Turn on/off all network connections

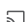 : Screen Cast. Mirror the display of the tablet to compatible devices, e.g. TV box or Fire TV Stick.


 : Night Light. Enabling this reduces the amount of blue light emitted by the device display

 : Screen record . Start and end the screen recording

 : Nearby share.Enable feature, Users can share information with nearby devices quickly.

 : Screenshot . Enabling this feature to take screenshot

More Settings

Swipe down from the top of the screen, then tap the  icon to enter the detailed setting interface. Or, tap the **Settings** App on the Home screen to enter.



Network & internet

- * Connect to any working Wifi
- * Enable/disable the **Airplane Mode**
- * Turn on/off the **Data Saver**
- * Add VPN Connections
- * Select a private DNS mode

Apps

- * Check the Apps recently opened
- * Check all the Apps on the tablet
- * Clear the cache of the Apps
- * Uninstall the third-party Apps
- * Set default apps and check the unused apps
- * Check the screen time for Apps
and more

Notifications

- * Turn on/off the notification for each app
- * Show or hide the notification history
- * Set privacy preferences for notifications
- * Set notification displaying options when the screen is locked
- * Enable or disable the mode of **Do Not Disturb**
- * Allow or disallow the apps to show dot
and more

Battery

- * Check the time for **Screen usage since full charge**
- * Enable/disable **Battery Saver** and **Battery Manager**
- * Display or hide the remaining power as a percentage

Storage

- * View and manage your storage space

Sound

- * Set sound level for **Media, Alarm** and **Notification**
- * Enable/disable **Do Not Disturb** to mute sound
- * Show/hide the media player when the media session has ended
- * Set default notification sound and alarm sound
- * Enable/disable **Screen locking sound, Charging sounds, and Touch sounds** and more

Display

- * Adjust the screen brightness
- * Enable/disable the **Dark theme**
- * Turn on/off **Night Light**
- * Change the wallpaper
- * Adjust the time of entering the sleep mode
- * Turn on/off the auto-rotation of the screen
- * Adjust the font size and display size
- * Set a screen saver
- * Set what to show when the tablet is locked

Wallpaper

- * Choose wallpaper from your photos or the default wallpapers.

Accessibility

- * For vision and hearing impaired users, manage settings for **Screen reader, Display, Interaction controls, Captions, Audio** and **General**.

Security

- * Check the security status
- * Set screen lock pattern, e.g. Password, PIN, Swipe etc.
- * Choose a **Smart Lock** to keep the device unlocked if you preset a lock pattern
- * Allow the admin apps to **Find My Device** and lock or erase a lost device and more

Privacy

- * Check and set app permissions
- * Set to show/hide the password when input a password
- * Set what to show when the tablet is locked and more

Location

- * Turn on/off the location services for specific Apps
- * Set apps that have access to location
- * Check and set **Location services** and more

Passwords & accounts

- * Add and remove the google accounts, manage google passwords.

Digital Wellbeing & parental controls


- * Check your app usage based on **Screen time**, **Notifications received**, or **Times opened** from **Dashboard**
- * Manage the related notification settings to reduce interruptions
- * Set up **Parental controls** to help your kids balance their screen time and more

Google

- * Set the preferences for Google™ related services

System

- * Set Language

Tap **Languages & input** > **Languages** > **+Add a language** to add your language. After adding, hold and slide the  to the top to change the language

- * Set gestures of using the tablet
- * Set the date and time
- * Turn on/off the option of **Backup**
- * Check and update the tablet's system
- * Manage multiple users and profiles
- * Restore factory setting

Tap **Reset options** > **Erase all data (factory reset)** to restore the factory setting

About tablet

 
 
- * Check the detailed information about the tablet

NETWORK CONNECTION

Wifi Connection

Go to network settings from the **Settings** App or by long pressing the Wifi icon in **Quick Settings**.

1. Tap **Network & internet** and turn on the **Internet**. All the WiFi connections available will be listed.
2. Select your WiFi and input the correct password.

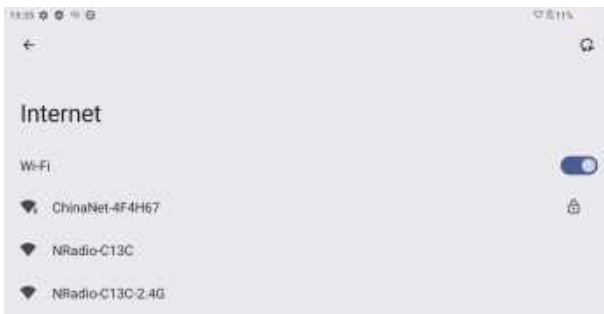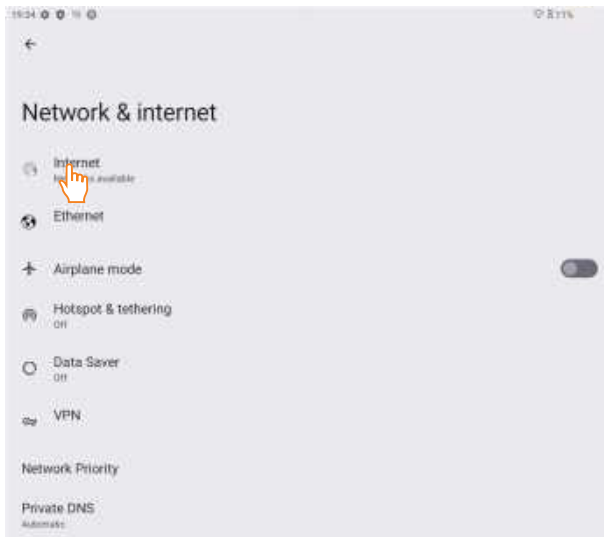

APP MANAGEMENT

App Download and Installation

1. Tap and open **Play Store** on the Home screen.
2. Log into your google account, search and download the App you need.

App Management

Move the App

Tap and hold the App, then slide it to a desired screen.

Remove the App from the Home screen

Touch and hold the App, then slide to  to remove it from your Home screen.

Uninstall the App

Touch and hold the App, then slide to the  to uninstall the App.

Clear the Cache of the App

1. Go to **Settings > Apps**.
2. Select an **App > Storage & cache > CLEAR CACHE** to clear the cache.

INTERNET NAVIGATION

Please make sure the tablet is connected to a working WiFi network before navigating the Internet.

You may use the pre-installed Chrome browser or use another browser downloaded from Play Store.

MULTIMEDIA

 
Connecting to a Computer

1. Connect your tablet to the computer with a USB cable.
2. **File Transfer** is the default setting. Go to your computer and find your tablet to transfer files between your tablet and computer.

Tips:

Go to **Quick Settings**, tap **USB file transfer** turned on > **Tap for more options** > **USB Preferences** to select the option preferred.


- * Select **MIDI** to play MIDI instruments on the tablet.
- * Select **PTP** to transfer photos between the devices.
- * Select **No data transfer** to charge your tablet.

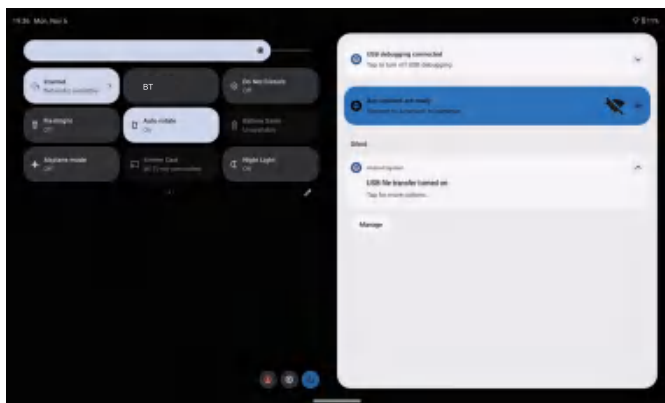





Connecting to an External Device

 1. Install a memory card into the memory card tray using the pin in the box when the tablet is off.

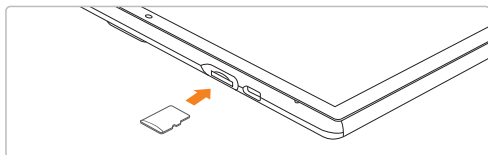

  2. Turn on the tablet, then go to **Quick Settings** and tap **SET UP**.
3. Set the memory card as a portable storage by selecting **Portable storage**. Enter memory card storage to move files between the card and tablet.

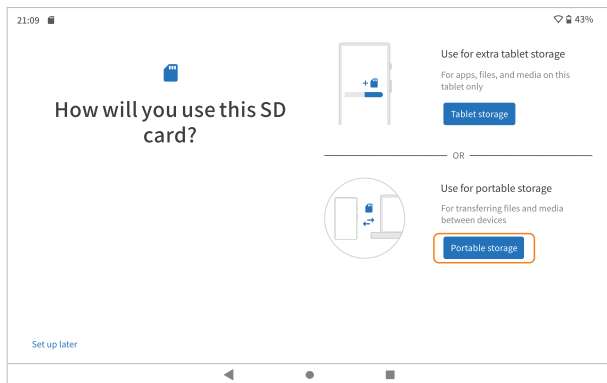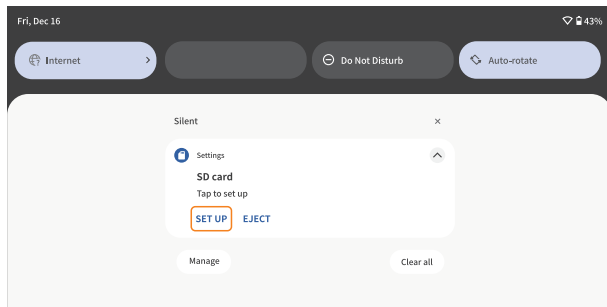

TROUBLESHOOTING

Q1. The tablet doesn't power on.

- * Reboot your tablet after charging for more than 30 minutes.
- * Press the power button to check if the tablet is in the **Sleep Mode**.
- * Insert a pin to the **Reset Hole** to reboot it.

Q2. The tablet doesn't charge.

- * Make sure the USB cable is properly plugged into the charging port.
- * Try another compatible USB cable and adapter.

Q3. Error message occurs during the operation.

- * Uninstall the App with the error message, then download and install again.
- * Insert the pin into the **Reset Hole** to reboot it.

Q4. The tablet cannot be detected by the computer.

- * Make sure the tablet is powered on.
- * Try another USB cable.
- * Try another USB port on the computer.
- * Instead of **No data transfer**, choose **File Transfer** or **PTP** when connecting the tablet to the computer.

Q5. The tablet cannot connect to the WiFi.

- * Make sure the WiFi in your tablet is **ON**.
- * Make sure you input the correct password when connecting the WiFi.
- * Restart the router.
- * Make sure there is no filter setting or device connection limitation in the setting of the router.
- * Forget the current Wifi, reset the router and connect the Wifi again.

Q6. The storage space of the tablet is not enough.

- * Delete the Apps you don't use.
- * Clear the cache of the Apps regularly.
- * Install a memory card to expand the storage.

Q7. The tablet comes with scratches on the screen.

- * Check if the scratches are on the film. If yes, please remove the film.

Q8. The screen is unresponsive.

- * Check if the screen is dusty or greasy. If yes, please gently wipe the screen with a cloth to clean it.

Q9. The font size is too small to read.

- * Please go to **Settings > Display > Advanced > Font Size** to adjust the text size.

Q10. How to use your voice to search a fact?

- * Tap the microphone icon on Google Search bar, tell the tablet what you want to know and it will show you the search results.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example— use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.