




USER MANUAL

SPECIFICATION

Size	10.1"	Connection	Wi-fi
Chipset	MT8768	CPU	Octa-core A53 2.3GHz
GPU	IMG GE8320	RAM	4GB+6GB
Display/ Resolution	1280*800	Storage	64GB
Front-facing Camera	2.0MP	Network	802.11 a/b/g/n/ac
Rear Camera	8.0MP	Power Supply	DC 5V/2A
Battery	6000mAh	Touch	Multi-touch
Operating System	Android 13	Ports	Type-C

FUNCTION OVERVIEW

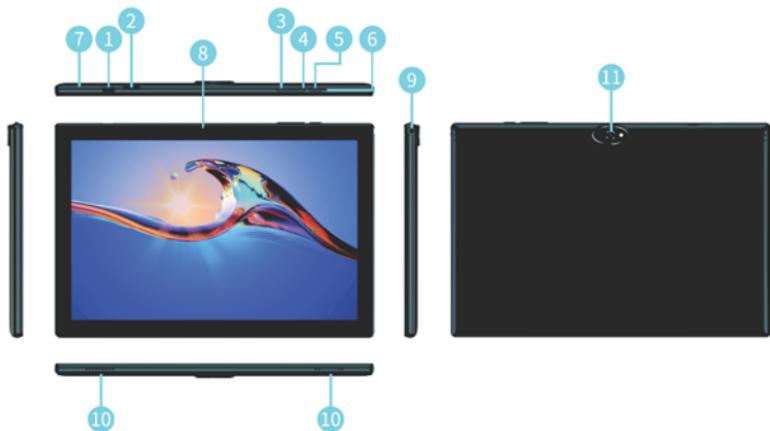

- | | | |
|---------------------|------------------------|-------------------|
| 1. USB-C Port | 5. Power On/Off | 9. Headphone Jack |
| 2. Memory Card Slot | 6. Reset | 10. Speakers |
| 3. Volume + | 7. Microphone | 11. Rear Camera |
| 4. Volume - | 8. Front-facing Camera | |

* Google, Android, Google Play and other marks are trademarks of Google LLC.

GETTING STARTED

Power On/Off

- * Press and hold the power button for 2-3s to turn on your tablet. Select your language and set up your tablet following the start guide.
- * Press and hold the power button for 2s, then release it. It will show **Power off**, **Restart** and **Screenshot** on the screen. Tap **Power off** to turn off the tablet.
- * Press and hold the power button for 7-8s to do a forced reboot when it's frozen.

Battery

- * A rechargeable Li-ion battery is installed in the tablet.
- * DO NOT attempt to replace the tablet battery by yourself because you may damage the battery, which might cause overheating, fire or injury.
- * DO NOT dispose of tablet in a fire.
- * DO NOT expose the tablet battery to any heat source, direct sunlight or high temperature.
- * Only use the ORIGINAL power adapter provided by us to charge the tablet battery.
- * We suggest you drain the battery completely once a month if only use your tablet occasionally.
- * The Li-ion battery in your tablet should be serviced or recycled by an authorized service provider, and must be recycled or disposed of separately from household waste.
- * Dispose of battery according to your local environmental laws and regulations.

Sleep Mode

Simply press the power button once to switch the tablet to the Sleep Mode when the tablet is ON; press again to wake it up.

Tip:

Go to **Settings > Display > Screen timeout** to set the time of entering the Sleep Mode.

Screenshot


Press and hold the **Volume-** button and the **Power On/Off** button together to capture a picture.

HOME SCREEN



1. Back
2. Home Screen
3. Recent Activities

Home Settings, Widgets and Wallpapers

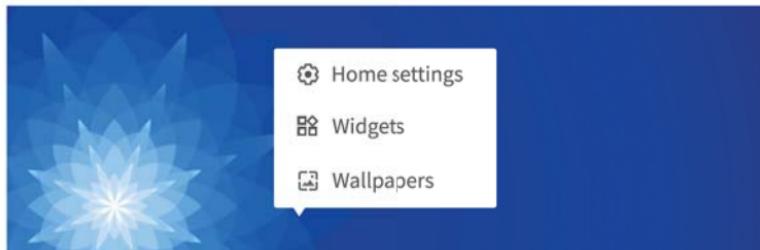


Tap and hold the empty section of a Home screen, Home settings, Widgets and Wallpapers will be displayed.

- * Tap **Home Settings** to enable/disable Add icon to Home screen. This is applicable to the new Apps installed from Play Store. Tap Home Screen loop to allow continuous Home Screens swiping/sliding; tap Pull down action to select the action when you swipe downward on the Home Screen, and more.
- * Tap **Widgets**, touch and hold any application (e.g. Clock), then slide and add it to a Home screen. Remove it by sliding it to **X Remove**.
- * Tap **Wallpapers** to change the current wallpaper of the tablet from the default wallpapers or your photos.

SETTING BASICS

Quick Settings


Swipe down from the top of the screen to access Quick Settings.

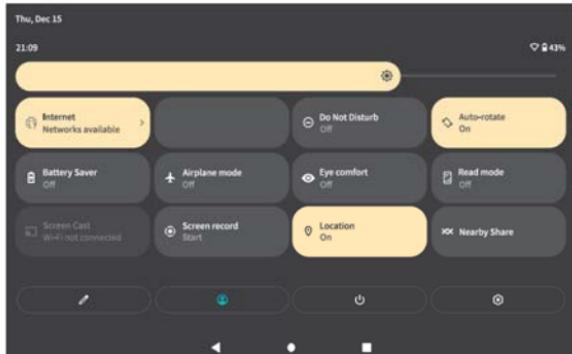

- 🌐 : **Internet.** Tap to connect/disconnect to a wireless network
- 🔇 : **Do Not Disturb.** Block sound after enabling this function
- 🔃 : **Auto-rotate.** Turn on/off the **Auto-rotate** of the screen
- 🔋 : **Battery Saver.** Tap to choose the power setting you prefer to save the battery time
- ✈️ : **Airplane Mode.** Turn on/off all the network connectivity
- 👁️ : **Eye comfort.** Eye comfort reduces the amount of blue light emitted by the device display
- 💻 : **Read mode.** The screen will be black and white after enabling this option
- getDisplay : **Screen Cast.** Mirror the display of the tablet to compatible devices, e.g. TV box or Fire TV Stick.
- ⌚ : **Screen record.** Start and end the screen recording.
- 📍 : **Location.** Enable/disable the location services.

More Settings

Swipe down from the top of the screen, then tap the  icon to enter the detailed setting interface. Or, tap the **Settings** App on the Home screen to enter.

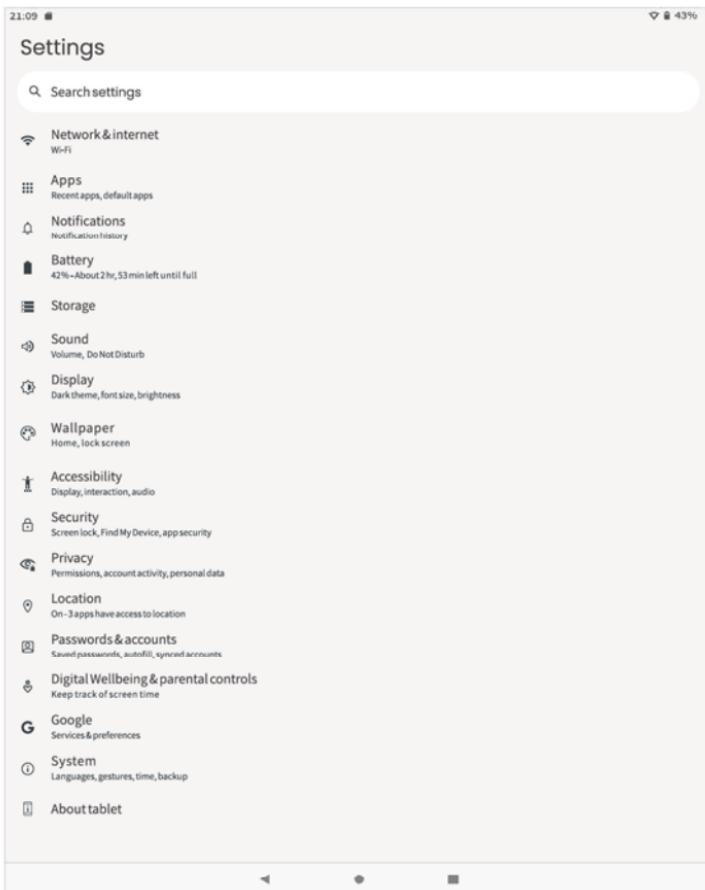

Network & internet

- * Connect to any working Wifi
- * Enable/disable the Airplane Mode
- * Turn on/off the Data Saver
- * Add VPN Connections
- * Select a private DNS mode

Apps

- * Check the Apps recently opened
- * Check all the Apps on the tablet
- * Clear the cache of the Apps
- * Uninstall the third-party Apps
- * Set default apps and check the unused apps
- * Check the screen time for Apps
- and more

Notifications

- * Turn on/off the notification for each app
- * Show or hide the notification history
- * Set privacy preferences for notifications
- * Set notification displaying options when the screen is locked
- * Enable or disable the mode of Do Not Disturb
- * Allow or disallow the apps to show dot
- and more

Battery

- * Check the time for **Screen** usage since full charge
- * Enable/disable **Battery Saver** and **Battery Manager**
- * Display or hide the remaining power as a percentage

Storage

- * View and manage your storage space

Sound

- * Set sound level for **Media**, **Alarm** and **Notification**
- * Enable/disable **Do Not Disturb** to mute sound
- * Show/hide the media player when the media session has ended
- * Set default notification sound and alarm sound
- * Enable/disable **Screen locking** sound, **Charging** sounds, and **Touch** sounds and more

Display

- * Adjust the screen brightness
- * Enable/disable the **Dark** theme
- * Turn on/off **Night Light**
- * Change the wallpaper
- * Adjust the time of entering the sleep mode
- * Turn on/off the auto-rotation of the screen
- * Adjust the font size and display size
- * Set a screen saver
- * Set what to show when the tablet is locked

Wallpaper

- * Choose wallpaper from your photos or the default wallpapers.

Accessibility

- * For vision and hearing impaired users, manage settings for **Screen reader**, **Display**, **Interaction controls**, **Captions**, **Audio** and **General**.

Security

- * Check the security status
- * Set screen lock pattern, e.g. Password, PIN, Swipe etc.
- * Choose a **Smart Lock** to keep the device unlocked if you preset a lock pattern
- * Allow the admin apps to Find My Device and lock or erase a lost device and more

Privacy

- * Check and set app permissions
- * Set to show/hide the password when input a password
- * Set what to show when the tablet is locked and more

Location

- * Turn on/off the location services for specific Apps
- * Set apps that have access to location
- * Check and set **Location services** and more

Passwords & accounts

- * Add and remove the google accounts, manage google passwords.

Digital Wellbeing & parental controls

- * Check your app usage based on **Screen time**, **Notifications received**, or **Times opened** from Dashboard
- * Manage the related notification settings to reduce interruptions
- * Set up **Parental controls** to help your kids balance their screen time and more

Google

- * Set the preferences for Google™ related services

System

- * Set Language

Tap Languages & input > Languages > +Add a language to add your language. After adding, hold and slide the  to the top to change the language

- * Set gestures of using the tablet

- * Set the date and time

- * Turn on/off the option of Backup

- * Check and update the tablet's system

- * Manage multiple users and profiles

- * Restore factory setting

Tap Reset options > Erase all data (factory reset) to restore the factory setting

About tablet

- * Check the detailed information about the tablet

NETWORK CONNECTION

Wifi Connection

Go to network settings from the **Settings** App or by long pressing the Wifi icon in Quick Settings.

1. Tap **Network & internet** and turn on the **Internet**. All the WiFi connections available will be listed.
2. Select your WiFi and input the correct password.



Network & internet

Internet
Networks available

Airplane mode



Data Saver
off

VPN
None

Private DNS
Automatic



Internet

Wi-Fi

Find and connect to Wi-Fi networks



WLAN 1



WLAN 2



+ Add network



Network preferences

Wi-Fi turns back on automatically

APP MANAGEMENT

App Download and Installation

1. Tap and open **Play Store** on the Home screen.
2. Log into your google account, search and download the App you need.

App Management

Move the App

Tap and hold the App, then slide it to a desired screen.

Remove the App from the Home screen

Touch and hold the App, then slide to  to remove it from your Home screen.

Uninstall the App

Touch and hold the App, then slide to the  to uninstall the App.

Clear the Cache of the App

1. Go to **Settings > Apps**.
2. Select an App > **Storage & cache > CLEAR CACHE** to clear the cache.

INTERNET NAVIGATION

Please make sure the tablet is connected to a working WiFi network before navigating the Internet.

You may use the pre-installed Chrome browser or use another browser downloaded from Play Store.



MULTIMEDIA

Connecting to a Computer

1. Connect your tablet to the computer with a USB cable.
2. **File Transfer** is the default setting. Go to your computer and find your tablet to transfer files between your tablet and computer.

Tips:


- Go to Quick Settings, tap **USB file transfer turned on** > Tap for more options > **USB Preferences** to select the option preferred.
- * Select **MIDI** to play MIDI instruments on the tablet.
 - * Select **PTP** to transfer photos between the devices.
 - * Select **No data transfer** to charge your tablet.

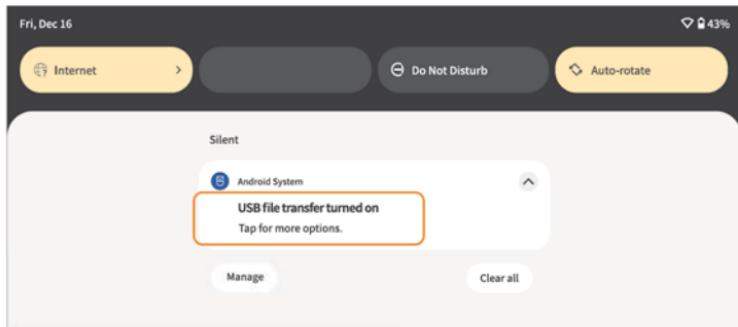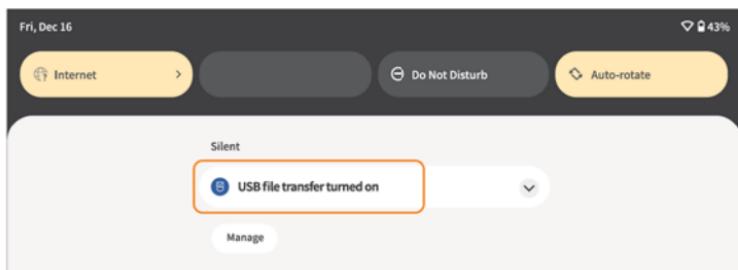





Connecting to an External Device

1. Install a memory card into the memory card tray using the pin in the box when the tablet is off.

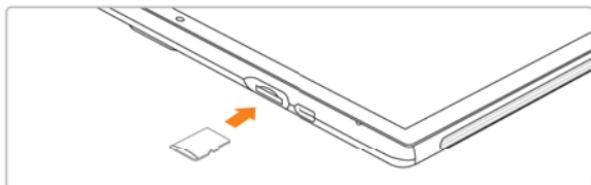

2. Turn on the tablet, then go to **Quick Settings** and tap **SET UP**.
3. Set the memory card as a portable storage by selecting **Portable storage**. Enter memory card storage to move files between the card and tablet.

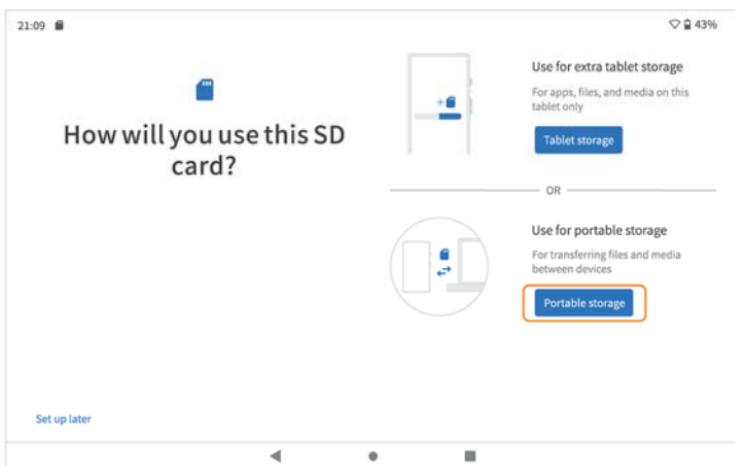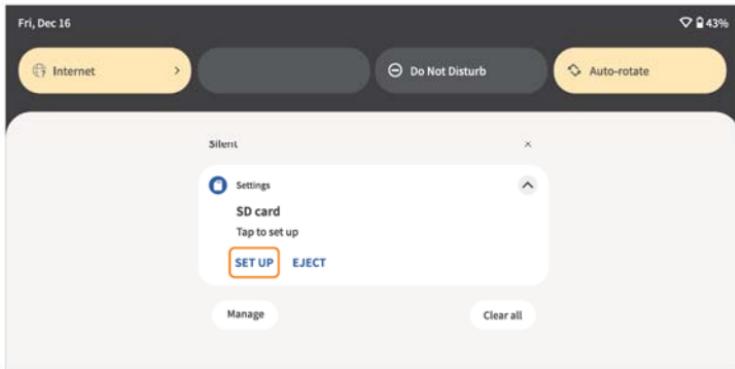

TROUBLESHOOTING

Q1. The tablet doesn't power on.

- * Reboot your tablet after charging for more than 30 minutes.
- * Press the power button to check if the tablet is in the **Sleep Mode**.
- * Insert a pin to the **Reset Hole** to reboot it.

Q2. The tablet doesn't charge.

- * Make sure the USB cable is properly plugged into the charging port.
- * Try another compatible USB cable and adapter.

Q3. Error message occurs during the operation.

- * Uninstall the App with the error message, then download and install again.
- * Insert the pin into the Reset Hole to reboot it.

Q4. The tablet cannot be detected by the computer.

- * Make sure the tablet is powered on.
- * Try another USB cable.
- * Try another USB port on the computer.
- * Instead of **No data transfer**, choose **File Transfer** or **PTP** when connecting the tablet to the computer.

Q5. The tablet cannot connect to the WiFi.

- * Make sure the WiFi in your tablet is **ON**.
- * Make sure you input the correct password when connecting the WiFi.
- * Restart the router.
- * Make sure there is no filter setting or device connection limitation in the setting of the router.
- * Forget the current WiFi, reset the router and connect the WiFi again.

Q6. The storage space of the tablet is not enough.

- * Delete the Apps you don't use.
- * Clear the cache of the Apps regularly.
- * Install a memory card to expand the storage.

Q7. The tablet comes with scratches on the screen.

- * Check if the scratches are on the film. If yes, please remove the film.

Q8. The screen is unresponsive.

- * Check if the screen is dusty or greasy. If yes, please gently wipe the screen with a cloth to clean it.

Q9. The font size is too small to read.

* Please go to Settings > Display > Advanced > Font Size to adjust the text size.

Q10. How to use your voice to search a fact?

* Tap the microphone icon on Google Search bar, tell the tablet what you want to know and it will show you the search results.

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED Requirements

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d' Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil n'edoit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device has been tested and comply with IC SAR limits.

L'appareil a été testé et est conforme aux limites IC SAR.

Operation of this device in the band 5150-5250 MHz is restricted to indoor use only.

Le fonctionnement de cet appareil dans la bande 5150-5250 MHz est limité à une utilisation en intérieur uniquement.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet émetteur ne doit pas être colocalisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

Notes:



1. High Sound Pressure
2. Hearing Damage Risk
3. Do not listen at high volume levels for long periods.