



*Wireless car camera monitor system*

***USER MANUAL***

# Contents

<i>A. Foreword</i>	3
<i>B. Package List</i>	4
<i>C. Introduction to Camera</i>	6
A) CAMERA LOW-POWER STANDBY MODE	6
B) CAMERA LOW BATTERY WARNING	7
<i>D. Introduction to Monitor</i>	8
<i>E. Installation</i>	10
<i>F. Remote Control Introduction</i>	13
<i>G. Monitor Function Introduction</i>	14
C) SYSTEM SETTINGS MENU	14
D) PAIRING	15
E) PICTURE	17
F) MIR-FLIP	19
G) SYSTEM	20
H) RECORD	23
I) PALY	25
<i>H. MENU FAQ</i>	26
<i>I. Tips</i>	27
<i>J. Customer Service</i>	27

## *A. Foreword*

Thank you for purchasing committed to providing high-quality products and bringing a good experience to our customers. It's our great honor to have your trust! This manual includes product descriptions and operation descriptions. To get the best performance, read the manual carefully before installing and keep the manual correctly.

If you're experiencing the following situations:



1. Open the package, finding something is broken or missing.
2. Open the package, and don't like the product.
3. Order a wrong product.
4. Need technical support.
5. Encounter problems with the camera in use.
6. Have any other problems or needs.

Please feel free to e-mail our customer service team at any time:

Please bring your order number or product model when sending emails. Each of your messages will be answered within 12 hours. We will help you solve your problems and provide you with the best customer service and technical support!

 
## *B. Package List*

	
7" Monitor	Suction Cup Bracket
	
U-Bracket Sticker	Cigarette lighter power cord
	
Monitor Power extension cable	Camera Charger
	
Camera	Screws*4





	
Remote Control	Antenna x3

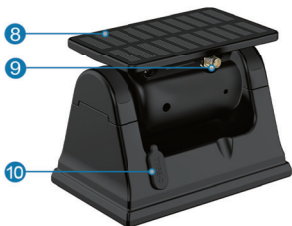**If you find that the product in the packaging is damaged or lacks accessories, please send your [#order number](#) and your [Shipping address/phone number](#) to the after-sales customer service email, and we will immediately handle it.**

## C. Introduction to Camera



 
- ① Camera Lens ② Light sensor ③ Infrared LEDs  
④ Charging light ⑤ Battery Indicator lights ⑥ Power button  
⑦ Magnetic base ⑧ Solar panel ⑨ Antenna interface  
⑩ USB-C charging port (waterproof rubber)

	1 to 33% of the remaining power
	34 to 66% of the remaining power
	67 to 100% of the remaining power
	Charging

### a) Camera low-power standby mode

When the monitor loses power for over 2 minutes, the camera will automatically switch to a low-power standby mode. To turn off the camera, press and hold the power button for more than 3 seconds.

## **b) Camera low battery warning**

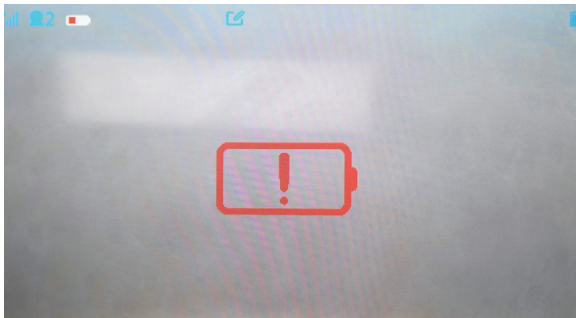

When the monitor displays this icon, it indicates that the camera's battery is running low. Please use the USB-C cable included in the package to recharge it.

Resolution	HD 1920×1080 (3 Million)
Transmission Range	328ft in unobstructed space
Battery Capacity	9600mA
Battery Charging Time	USB 5V 2A / 5H
Installation Mode	Magnet base adsorption installation
Night Vision	Support IR
Waterproof level	IP69

## D. Introduction to Monitor



1. **-**: Reduce/Select Button
2. **M**: Settings/ Back Button
3. **+**: Increase/Select Button
4. **OK**: Confirm Button/ Turn on/off recording
5. **CH**: Switch Channel Button
6. **⌘**: Show/No Parking Guideline Button
7. **⏻**: Screen Off Button (Does not power off)

Tip: Only when the monitor is powered off, the camera will enter a low-power standby mode.



<b>Monitor</b>	
Size	7 inch
Type	IPS
Brightness	500 cd/m <sup>2</sup>
Power input	DC 5V
Maximum power	Max 6W
Support channel	Support up to 2 cameras
Mirroring	Support
Recording Video	Support
SD Card	Support up to 128G

## *E. Installation*

1. Install the Camera and Monitor Antennas.



 
2. Insert the Monitor Power Cord into the Cigarette Lighter and Connect.



3. Press the camera power button, and after a few seconds, the monitor will automatically display the camera's image. (Because the camera is already paired with Channel 1 of the monitor at the factory, no further action is required.)



## F. Remote Control Introduction

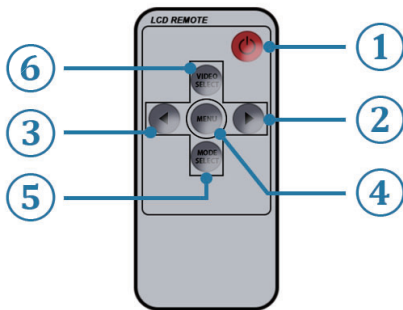

① On/Off the Monitor (It won't power off, just the screen will go to sleep.)

② Increase/Select Downward

③ Decrease/Select Upward


④ Enter Settings/Go Back

⑤ Confirm

⑥ Switch Channels

## *G. Monitor Function Introduction*
 
### *c) System Settings Menu*

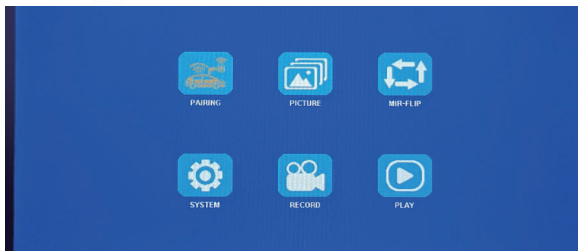

Switch the monitor channel to Channel 1 or Channel 2 using the "CH" button and access the system settings menu by pressing the "M" button.

## *d) PAIRING*

 
 


After pressing the “M” button to enter the menu page, then press the “OK” button to confirm to enter the “PAIRING” page for pairing and connecting the camera.

The system defaults to the camera with channel1. If you want to add an additional camera to your monitor, you can switch the channel to channel2 and enter the menu pairing new camera.



## e) *PICTURE*

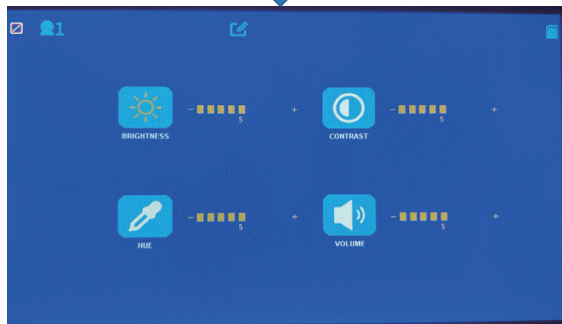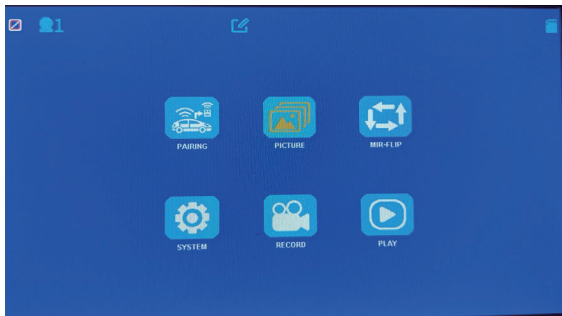

Press the 'M' button to enter the menu page, then press the '+' button, and finally press the 'OK' button to access the Picture menu, where you can adjust the monitor's brightness,


contrast, hue, and volume.

1. Brightness: After entering the "PICTURE" page, press the "OK" button again, and then press the "+" or "-" buttons to adjust the brightness. After making the adjustment, you can press the "OK" button to confirm or press the "M" button to return and make other settings.

2. Contrast: After entering the "PICTURE" page, press the "+" button and then press the "OK" button to access the settings. Use the "+" or "-" buttons to adjust the contrast. After completing the adjustment, you can press the "OK" button to confirm, and then press the "M" button to return.


3. Hue: After entering the "PICTURE" page, press the "+" button twice and then press the "OK" button to access the settings. Use the "+" or "-" button to adjust the hue. Press the "OK" button to confirm the adjustment, and then press the "M" button to return after confirmation.

## f) *MIR-FLIP*

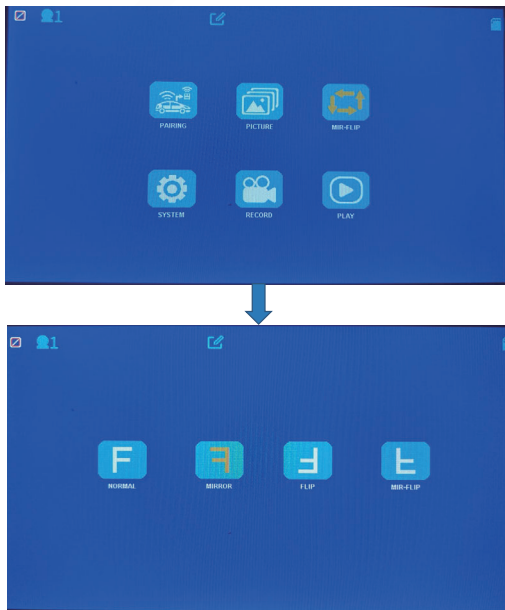 

After entering the menu page, press the '+' button twice and then press 'OK' to access the settings page. Make your desired adjustments, and once they are complete, press 'OK' to confirm. Press the 'M' button to go back.

## ***g) SYSTEM***

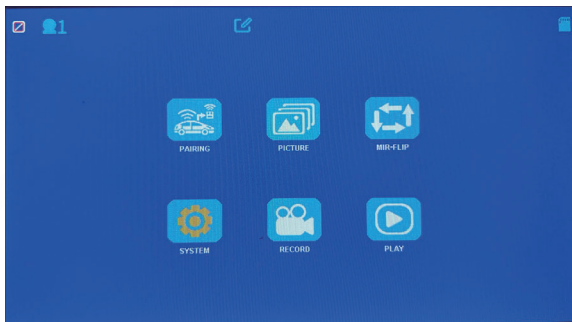 


After entering the menu page, press the '+' button three times and then press 'OK' to access the TIME, LANGUAGE, AUTO-DIM, DELAYTIME, P-LINE, and DEFAULT settings.

## 1. Time:

 In the 'SYSTEM' page, press 'OK' once, then use the '+' or '-' buttons to set the year. Press 'OK' again to set the month and continue setting the day and other time details as needed. Press 'OK' to confirm, or simply press 'M' to exit quickly after completing the setup.


## 2. P-LINE:

Press the '+' button to enter the P-LINE menu, then press 'OK' to access the P-LINE page. Select 'ON' and confirm by pressing 'OK.' When 'H' appears in the middle of the display, use the '+' or '-' buttons to adjust the guidance line height.

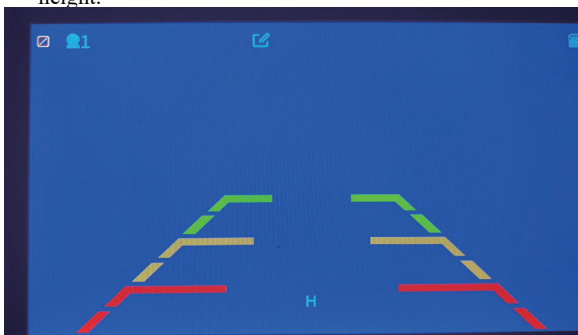


Press 'OK' twice when 'M' appears in the center of the monitor

 
to adjust the left-right position of the guideline. Use the '+' button to move it right and the '-' button to move it left.

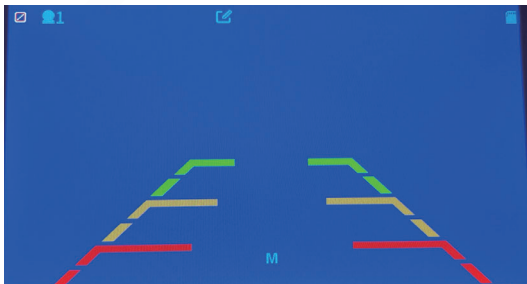

 Press the 'OK' button three times when 'W' appears in the center of the monitor to adjust the width of the guideline. Use the '+' button to widen it and the '-' button to narrow it.

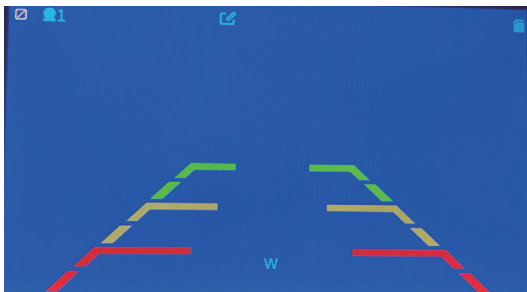


## ***h) RECORD***

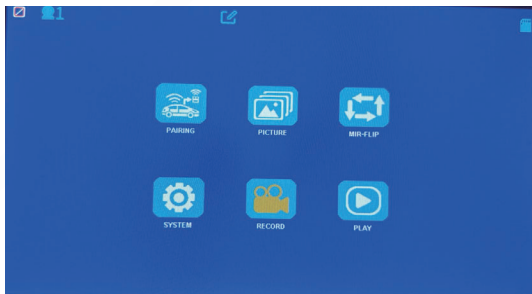 

After entering the menu page, press the '+' button four times, then select 'RECORD,' and press 'OK' to access the RECORD settings.


1. REWRITE: Loop Recording
2. FORMAT: Format memory card

 Tip: When the red dot at the top of the monitor is flashing, it indicates that the monitor is recording footage (as shown below).

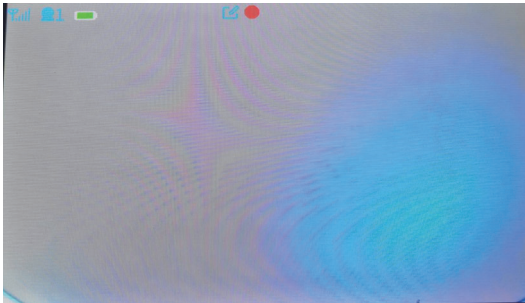



## *i) PALY*

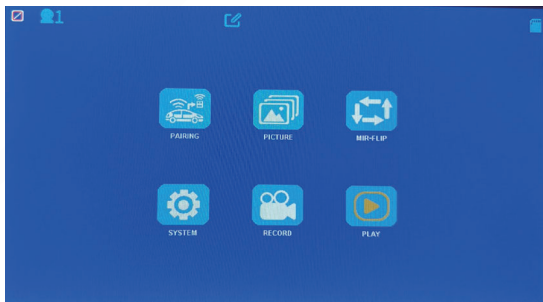 

After entering the menu page, press the 'M' button to access the menu, then press the '+' button five times (or once after entering the menu '-') to select 'PLAY,' and confirm by pressing 'OK.' Here, you can play video files. Loop recording is supported, and it will automatically overwrite old files when the SD card storage is full.

## ***H. MENU FAQ***

**Q1:** Why is the signal very weak? Image delay?

**A1:** Make sure the antenna of the camera and the monitor is firmly installed, and the antenna does not touch the metal because the metal blocks the signal. You can also try to replace the camera or monitor antenna with extended antenna to expand the signal transmission range.

**Q2:** Does the monitor support to add a second camera?

**A2:** YES! The monitor supports up to 2 cameras.

**Q3:** How to attach the camera to a non-metallic vehicle?

**A3:** The package includes a metal plate and dedicated screws. You can secure the metal plate in your desired location and then magnetically attach the camera to it. Please note that before securing the metal plate, avoid bringing the metal plate close to the camera.

## *I. Tips*

1. It is recommended that the backup camera be charged for **5-6 hours** for the first time.
2. The Antenna can't touch any metal, or it will greatly affect the video signal transmission.
3. The camera cannot fully rely on solar charging, and solar energy can only extend the working time of the camera. It is necessary to charge with a charger regularly. Please do not use the data cable and charger with the fast charge protocol to charge it.

## *J. Customer Service*

If you need technical guidance or difficulty in using the camera, please contact our customer service at any time. Our customers will answer all your questions within 12 hours. When you contact our customer service, please attach your #order number or your product model so that we can quickly reply to your question.

**FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.