材质:120G书写纸 折叠尺寸:96\*96mm 风琴折



折叠后此面为封面

# **ATK**

QUICK START

## 2 鼠标左键 Left Mouse Button マウスの左ボタン 마우스 왼쪽 버튼 3 鼠标右键 Right Mouse Button マウスの右ボタン 마우스 오른쪽 버튼 4 滚轮 Scroll Wheel

01 按键和配件说明 / Introduction / 紹介 / 소개

1 Type-C□ Type-C Port

Type-C インタフェース

Type-C 인터페이스

マウスホイール

마우스 휠

5 LED指示灯

6 前进侧键

7 后退侧键

LED Indicato

LED 표시등

前進側キー

전진 측면 키


Back Button

後退側キー

뒤로 측면 키

LEDインジケータ

Forward Button

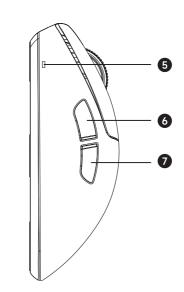

8 脚贴区 Feet フィート 9 光学传感器 Optical Sensor 9 光センサ 광학 센서 DPI切换键 DPI Button DPIボタン DPI 버튼 11 无线开关 Power Switch 電源スイッチ 전원 스위치

**USER GUIDE** 

用户指南

烈空Z1 SERIES

# 빠른 시작

1. 充电/有线使用 Charge / Wired Mode 充電/有線モード 충전 / 유선 모드

02 快速开始 / Quick Start / クイックスタート



2. 无线使用 / Wireless Mode / ワイヤレスモード / 무선 모드





03 DPI调节 / DPI Set / DPI設定 / DPI 튜닝

按击底部DPI切换键可以快速切换DPI, 免驱提供以下DPI档位和状态指示 / Press the DPI button to quickly switch the DPI. The free drive provides the following DPI set and status indications / DPIボタンを押すと、DPIをすばやく切り替えることができます。無償ド ライブには、以下のDPI設定とステータスインジケータが用意されています / DPI 버튼을 눌러 DPI를 빠르게 전환합니다.무료 드라이브는 다음과 같은 DPI 설정 및 상태 지침을 제공합니다



更多DPI设置需要使用驱动修改,支持50~36000DPI之间的设置 / The DPI can be set between 50 to 36000 DPI by software. / DPIは、ソフトウェアを介して50~36000 DPIの 間に設定することができる / DPI는 소프트웨어를 통해 50에서 36000 DPI 사이를 설정할 수

있습니다

# 04 回报率设置 / Polling Rate Set / ポーリングレート 設定 / 수익률 설정

可通过驱动直接修改回报率 / Set the rate by software / ソフトウェアを使用して速度 を設定します / 소프트웨어를 통해 속도를 설정합니다

### 05 电量状态指示 / Battery Indication / 電力量状態指示 / 전력 상태 표시

- 1) 指示灯红灯闪烁: 电量小于20%, 请充电 / Blinking In Red: 20% Battery, please charge / 赤色点滅: 20% バッテリ、充電してください / 빨간색 깜박임: 20% 배터리 충전
- 2) 指示灯黄灯闪烁: 充电中 / Blinking In Yellow: Charging / 黄色点滅: 充電 / 노란색 깜박임: 충전
- 3) 指示灯常亮: 充电完成,恢复至绿色 / Staying in Green: Charging completed / 緑のまま:充電完了 /녹색 유지: 충전 완료

-- Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is

-- Consult the dealer or an experienced radio/TV technician for help

(2) this device must accept any interference received, including interference that may cause undesired

FCC RF Radiation Exposure Statement

(1) This device may not cause harmful interference. and

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter 2. This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment This equipment should be installed and operated with minimum distance 5mm between the radiator and your body

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

❷ 驱动下载 Software Download ソフトウェアのダウンロード 소프트웨어 다운로드





Removal Instruction for Battery Recycling





WWW. ATK. PRO

由于产品不断升级,可扫码查看最新说明书 / As the product is constantly upgraded, you can scan the code to see the latest manual / 製品が絶えずアップグレードしてい るので、コードを読み取って最新の説明書を見ることができます/ 제품이 끊임없이 업그레이 드되기 때문에 코드를 스캔해서 최신 설명서를 볼 수 있다