




TM

USA Item #1010749793  
Canada Item #1001852747  
Model #24SV24171

# USE AND CARE GUIDE

---

## 5FT SKELLY DOG

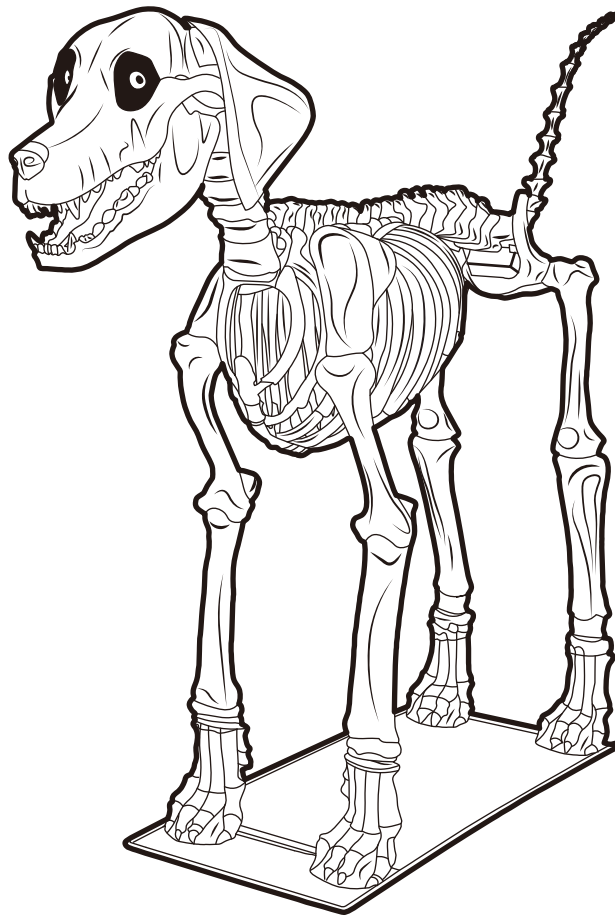

Need assistance with your animatronic? Please have a copy of your receipt ready and email the SVI customer experience team ([customerservice@svius.com](mailto:customerservice@svius.com)) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

**1-855-HD-HOLIDAY (1-855-434-6543)**  
**HOMEDEPOT.COM**

---


### THANK YOU


*We appreciate the trust and confidence you have placed in Home Depot through the purchase of this 5ft Skelly Dog. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents Holiday!*

# Table of Contents

Safety Information . . . . .	2	Assembly. . . . .	5
Warranty . . . . .	3	Operation. . . . .	9
Pre-Assembly . . . . .	3	Care and Cleaning . . . . .	11
Tools Required . . . . .	3	Specifications . . . . .	11
Package Contents . . . . .	4	Troubleshooting . . . . .	11
		Service Parts. . . . .	11

# Safety Information

 **BATTERY WARNING:**  
Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries. Do not mix old and new batteries. Rechargeable batteries to be removed from the product before being charged. Only batteries of the same or equivalent type as recommended are to be used. Rechargeable batteries are only to be charged under adult supervision. Non-rechargeable batteries are not to be recharged. Batteries are to be inserted with the correct polarity. Remove batteries if consumed or if product is to be left unused for a long time. The supply terminals are not to be short-circuited. Dispose of batteries safely. **DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK**


 **NOTE:** This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

- Please use the adapter supplied by manufacturer.
- Please assemble item according to instructions. Connect all wires according to matching color.
- Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep flammables away from the adapter, as it heats up during operation. Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

 **WARNING**

- Don't climb or pull on product.
- Do not add to or modify unless accessory is designed for product
- Assemble and place the product on level surfaces only.
- Don't push or tilt product.


 **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

 This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

# Warranty

The 5ft Skelly Dog is intended for seasonal use and does not have a warranty. In the event you experience a technical malfunction, damage, or missing parts upon purchase, please contact customer service (as noted on page 1 and 12) within 90 days of the date of purchase. The customer service team will assist you with troubleshooting / replacement parts depending on the availability of the item. Replacements do not cover normal wear and tear, damage incurred due to misuse, parts not assembled or installed in accordance with the instruction manual, repairs or alternations made outside source, store display products, third party purchases, or full product replacements. All part requests must be accompanied with proof of purchase.

# Pre-Assembly

## PLANNING INSTALLATION

Estimate installation time: 1 Hour

请工程师确定

 
Number of people required: 2 - 3 People

## TOOLS REQUIRED



M5 hex wrench (included)


请工程师确认



Small phillips  
screwdriver (not included)

# Pre-Assembly (continued)

## PACKAGE CONTENTS

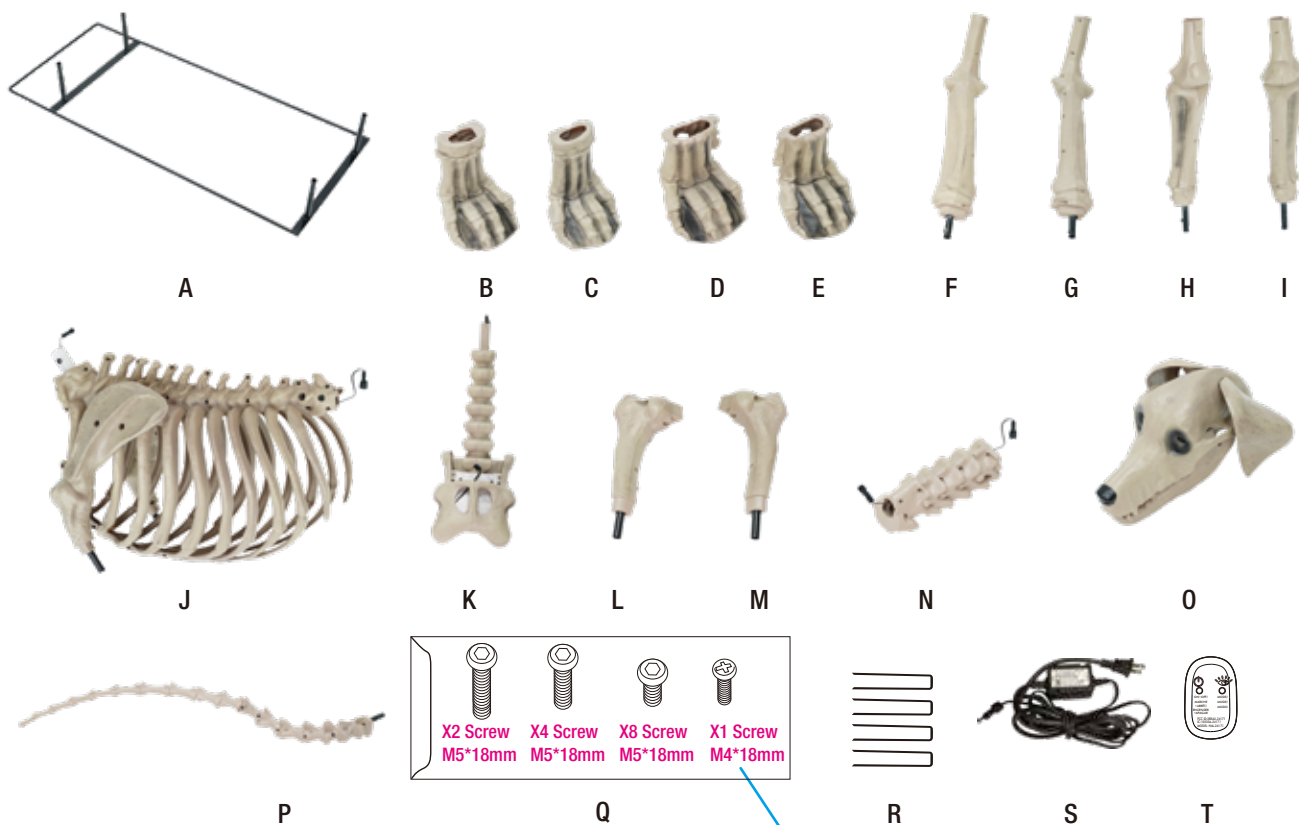

请工程师确认

Part	Description	Quantity
A	Base	1
B	Right Foot	1
C	Left Foot	1
D	Right Lower Support Pole	1
E	Left Lower Support Pole	1
F	Right Shin	1
G	Left Shin	1
H	Upper Support Pole	1
I	Right Femur	1
J	Left Femur	1
K	Pelvis	1
L	Spinal Support	1
M	Rib Cage	1
N	Right Humerus	1
O	Left Humerus	1
P	Right Forearm	1

Part	Description	Quantity
Q	Polybag with Small Parts	1
R	Stakes	4
S	Adapter *	1
T	Remote Control	1


请工程师确认

Power Adapter \* Spec  
 Input: 120V~60Hz  
 Output: 5.9V 1.5A  
 Wattage: 8.85W

# Assembly


## 1 Placing the feet

- Place the Right Foot (B) and Left Foot (C) onto their corresponding pole on the Base (A).

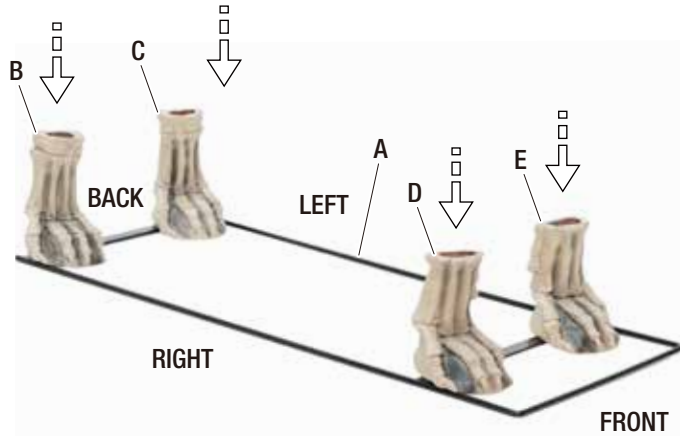


## 2 Attaching the lower support poles

- Connect the Right Lower Support Pole (D) and the Left Lower Support Pole (E) to their corresponding pole available on the Base (A).

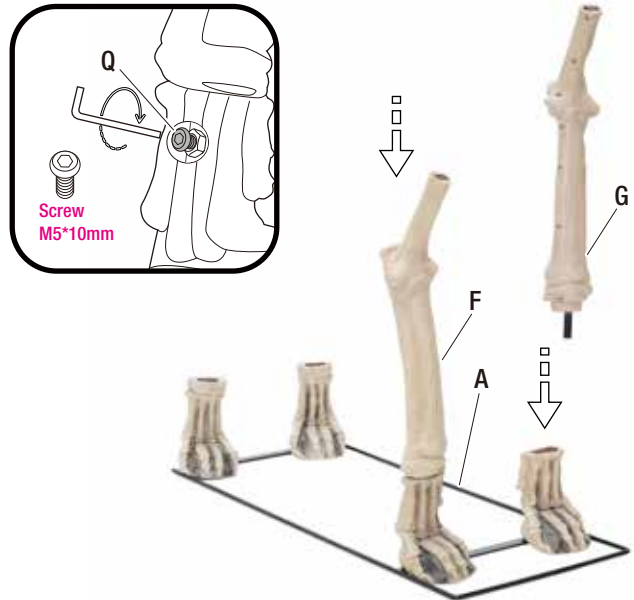

## 3 Placing the shins

- Slide the Right Shin (F) over the Right Lower Support Pole (D) and slide the Left Shin (G) over the Left Lower Support Pole (E).

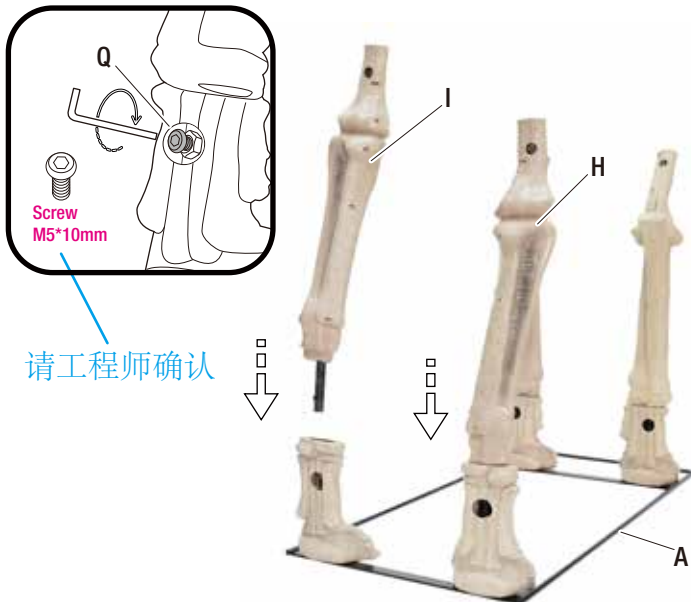


请工程师确认


## 4 Attaching the upper support poles

- Attach an Upper Support Pole (H) to both the Right Lower Support Pole (D) and the Left Lower Support Pole (E).

**NOTE:** After connecting the wires, hide the excess inside the available cavity at the bottom of the Rib Cage (J).

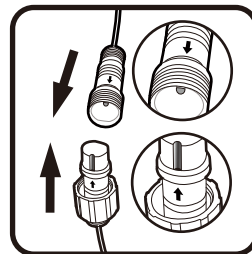

**NOTE:** When connecting cables, ensure that the arrow indicators on each cable end are lined up with and pointing at each other. There is also a groove and a rod like protrusion by these arrows that fit into each other. Then firmly press the cables together. Rotate the cable cap clockwise onto the threading of the corresponding cable until firmly in place.




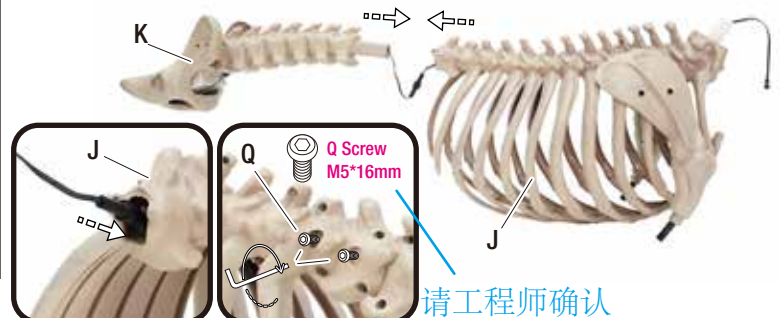


请工程师确认

## Assembly (continued)

### 5 Placing the feet


- Place the Right Foot (B) and Left Foot (C) onto their corresponding pole on the Base (A).

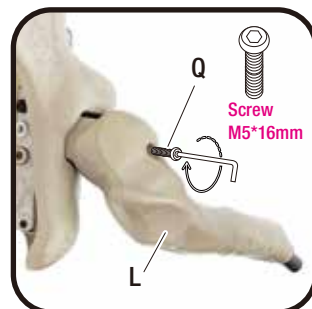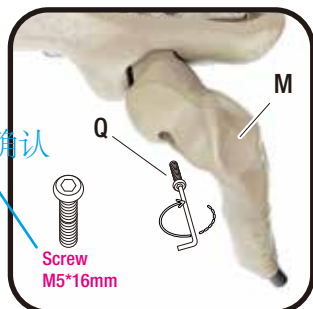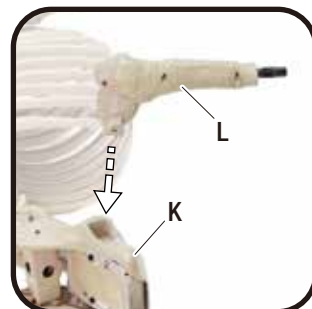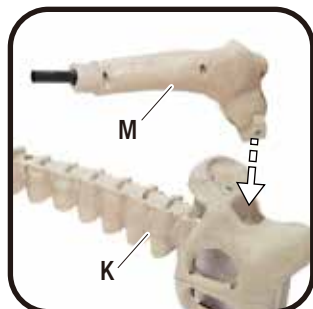

请工程师确认

### 6 Placing the shins

- Slide the Right Shin (F) over the Right Lower Support Pole (D) and slide the Left Shin (G) over the Left Lower Support Pole (E).

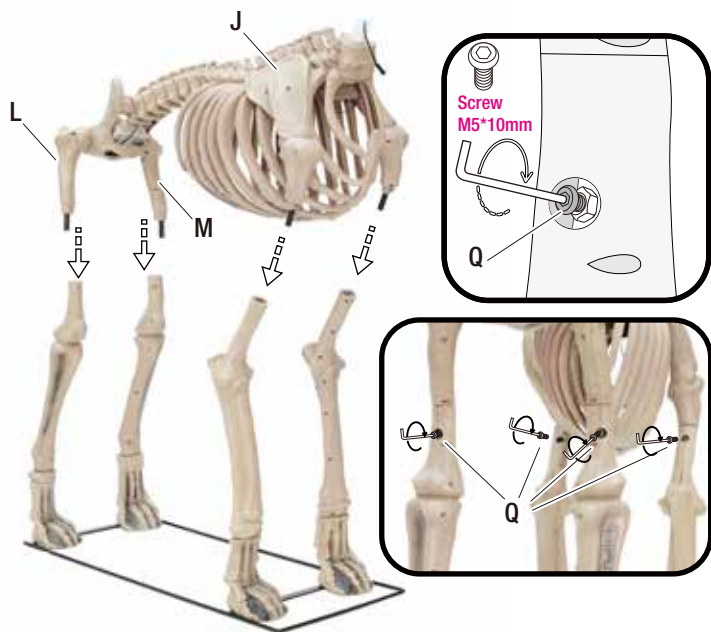


### 7 Attaching the upper support poles

- Attach an Upper Support Pole (H) to both the Right Lower Support Pole (D) and the Left Lower Support Pole (E).



**NOTE:** After connecting the wires, hide the excess inside the available cavity at the bottom of the Rib Cage (N).

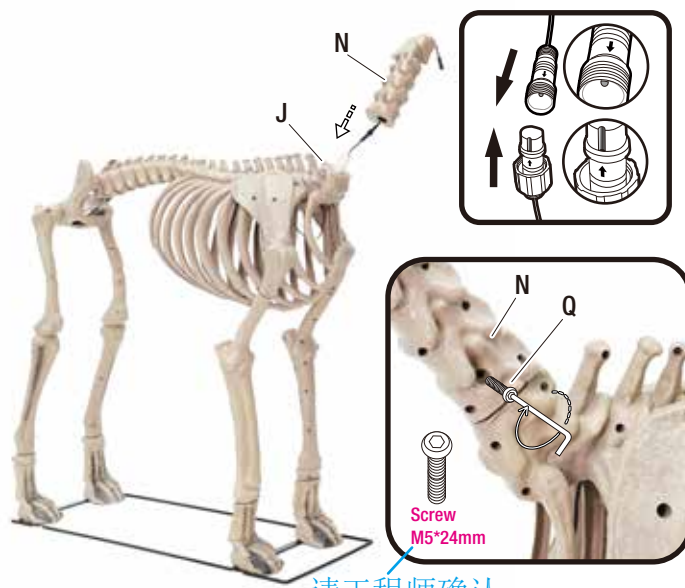

请工程师确认


# Assembly (continued)

## 8 Placing the feet

- Place the Right Foot (B) and Left Foot (C) onto their corresponding pole on the Base (A).



**NOTE:** After connecting the wires, hide the excess inside the available cavity at the bottom of the Rib Cage (O).

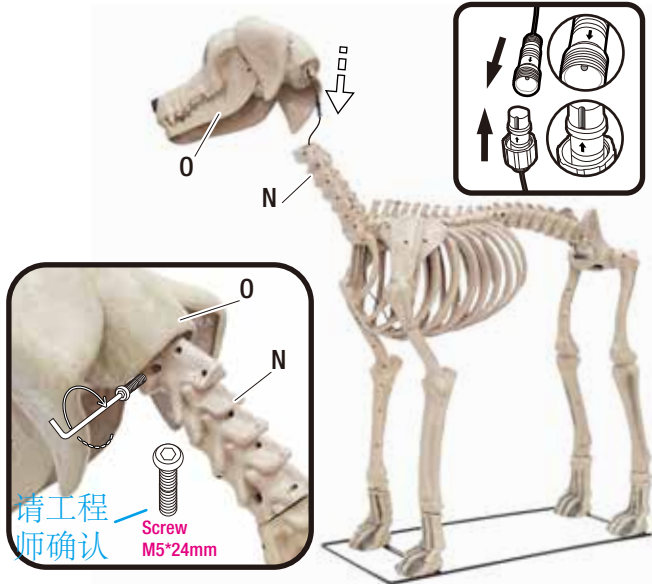


## 9 Attaching the lower support poles

- Connect the Right Lower Support Pole (D) and the Left Lower Support Pole (E) to their corresponding pole available on the Base (A).



**NOTE:** When using the adapter while batteries are in the product, the power will be sourced from the adapter only. However, it is advised to remove the batteries from the product when using the adapter.

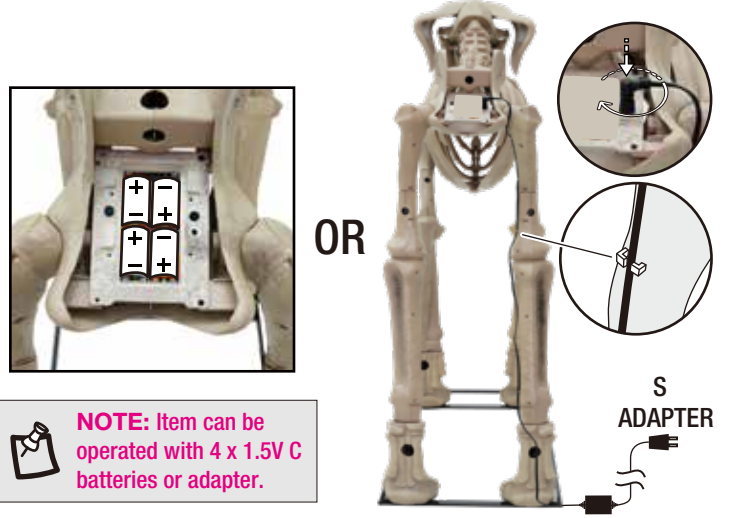


## 8 Placing the feet

- Place the Right Foot (B) and Left Foot (C) onto their corresponding pole on the Base (A).



**NOTE:** 尾巴有两种安装方式自由切换。

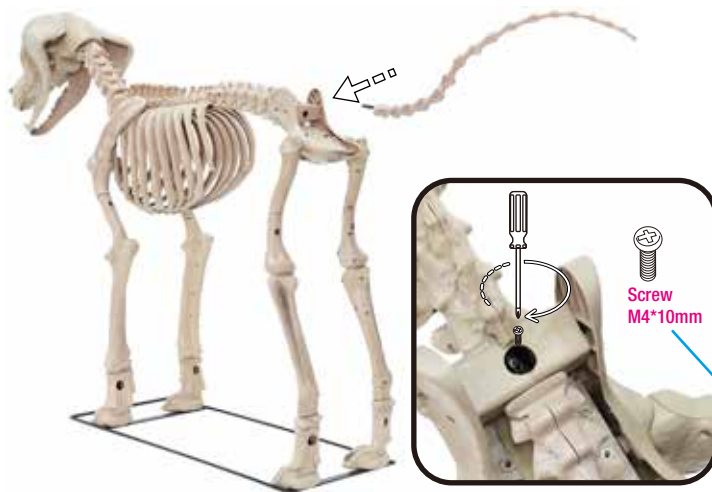


OR



### 9 Attaching the rib cage

- Slide the Rib Cage (M) over the Spinal Support (L). Then connect the cable from the Rib Cage (M) to its corresponding cable from the Pelvis (K). Then fit the Rib Cage (M) onto the Pelvis (K). Your 5ft Skelly Dog is now fully assembled. Plug in and turn on to let the fun begin!

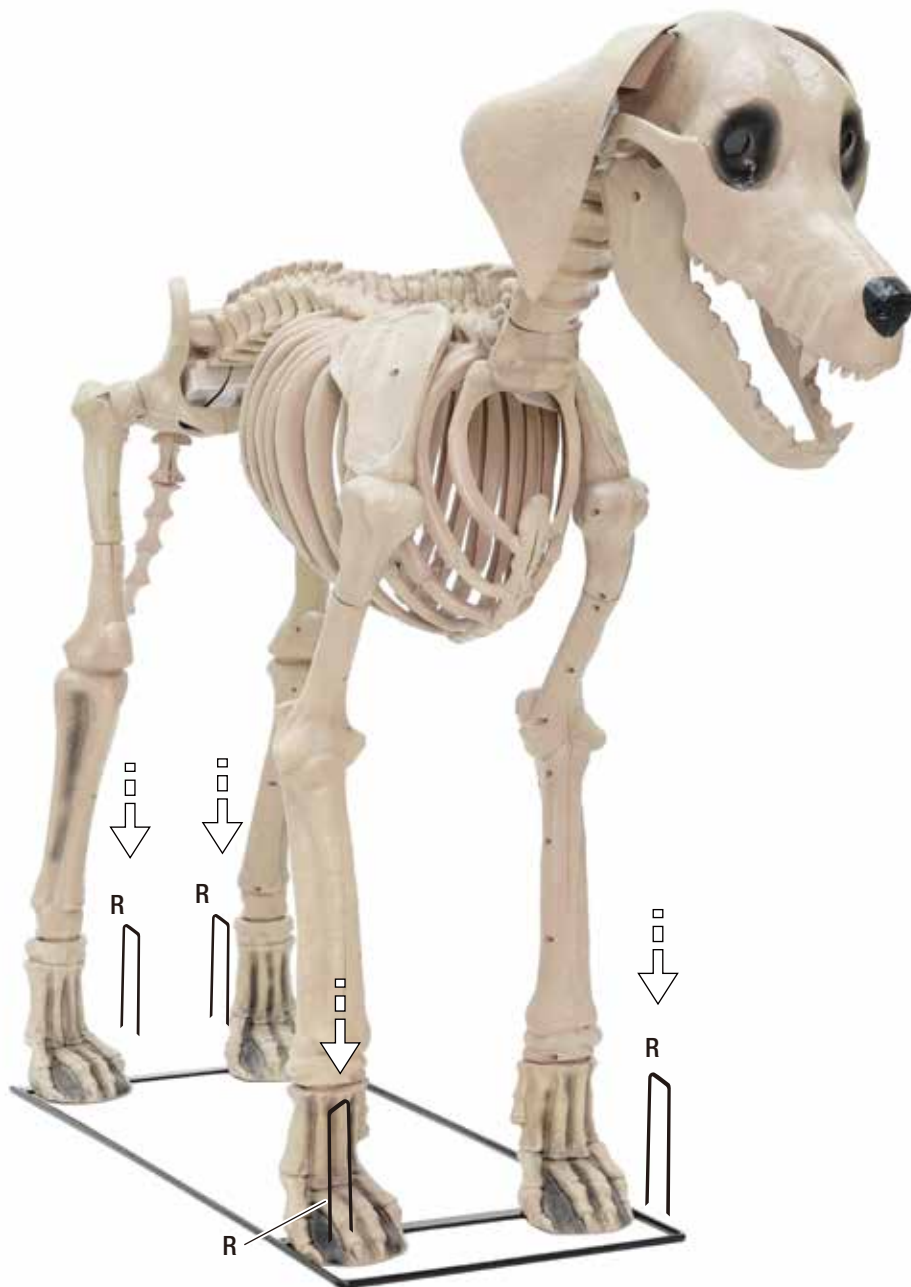




# Operation

## 1 Controls

**OPERATION INSTRUCTIONS - CONTROL BOX:**  
**The 5ft Skelly Dog can either be powered by an adapter or batteries. Plug the power adapter into a standard power outlet or insert 4 x 1.5V C batteries into the battery box. To turn on the 5ft Skelly Dog, press the button underneath the Pelvis once. Press the button again to switch to the Timer setting. Press the same button a third time to turn the item Off.**

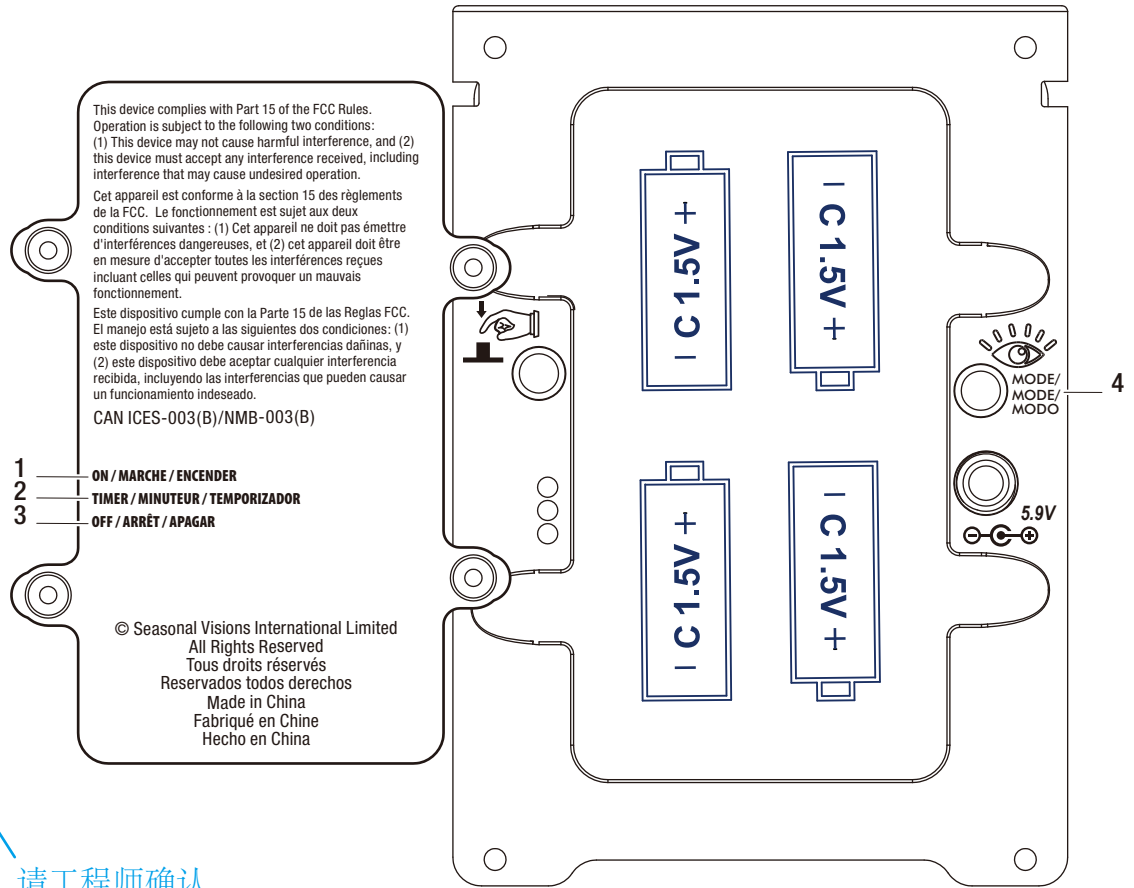


请工程师确认

**NOTE:** The 5ft Skelly Dog has 3 different function settings (ON, TIMER and OFF) and 8 different Eye Options (MODES) to chose from - see images on box. Settings and Eye options can be controlled at the Control Panel or by using the Remote Control. Timer/Sensor setting is only available on the Skeleton Control Panel, located on the underside of the Pelvis.



**NOTE:** Requires 4 x 1.5V AAA batteries (Included) \* You will need a small Phillips head screwdriver (Not included). Locate the battery compartment on the product. Remove the battery compartment cover by using a small Phillips head screwdriver to unscrew the screw. After removing or installing the batteries, place the battery compartment cover into position, and secure the battery cover. If 5ft Skelly Dog is being stored while not in use, please remove battery.



Button	Function Description
1 ON / MARCHÉ / ENCENDER	Press middle button once to activate the LCD eyes indefinitely until the settings are changed.
2 TIMER / MINUTEUR / TEMPORIZADOR	Press middle button twice to activate the LCD eyes for an 18 second function cycle when the Infra-red (IR) sensor is activated. The Infra-red (IR) sensor has a range of up to 4 m/13 ft. and will activate when someone comes within an 80-degree angle from left to right as well as from above and below.
3 OFF / ARRÊT / APAGAR	Press middle button a third time to turn LCD eyes OFF, or if using the Step Pad for activation, each press activates the 5ft Skelly Dog for an 18 second cycle.
4  MODE/ MODE/ MODO	Corner button toggles through 8 LCD eye options.





**NOTE:** The 5ft Skelly Dog is compatible with external timers and preserves its setting when the power is turned OFF/ON.

## 2 Remote control



This Remote Control allows one to change the settings of the 5ft Skelly Dog from up to 20 ft away. The Remote Control has an indicator light that lets you know if its working.

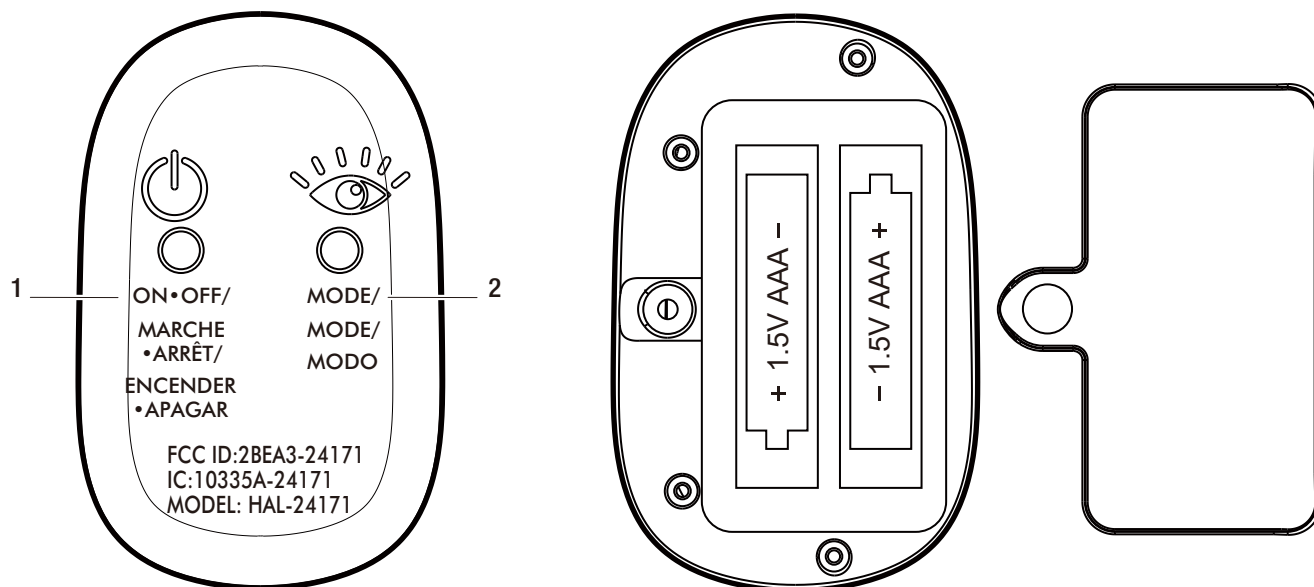

Button	Function Description
1 ON • OFF / MARCHE • ARRÊT / ENCENDER • APAGAR	This button turns the 5ft Skelly Dog on and off.
2  MODE/ MODE/ MODO	This button toggles through the 8 different LCD eye displays for the 5ft Skelly Dog.



**NOTE:** Timer setting can only be chosen from the 5ft Skelly Dog Control Panel, not with Remote Control.



**NOTE:** Requires 2 x 1.5V AAA batteries (Included)

\* You will need a small Phillips head screwdriver (Not included).

Locate the battery compartment on the product. Remove the battery compartment cover by using a small Phillips head screwdriver to unscrew the screw. After removing or installing the batteries, place the battery compartment cover into position, and secure the battery cover. If Skeleton is being stored while not in use, please remove battery in Remote Control.

请工程师确认

## Care and Cleaning

### □ General Cleaning

Wipe with a clean, damp cloth. If packing, allow 5ft Skelly Dog to fully dry before putting back in the box.



**NOTE:** When not in use, store this product in its original packing. Keep away from heat and moisture. Remove batteries from Remote Control.

## Specifications

### Power Adapter Spec

<b>Input:</b>	120V~60Hz
<b>Output:</b>	5.9V 1.5A
<b>Wattage:</b>	8.85W

请工程师确认

## Troubleshooting

Problem	Solution
The LCD eyes are not lighting up or are not functioning properly (cannot switch between eye options).	Ensure that all cables are firmly connected to their corresponding cables. Make sure that the adapter is plugged into a live outlet and that the adapter is plugged firmly into the adapter receiver. If the issue persists, contact customer service.
The item does not turn on when activated.	Make sure that the adapter is plugged into a live outlet. Also make sure that the adapter is firmly plugged into the adapter receiver. If the issue persists, contact customer service.
The Remote Control is not working.	Make sure you are within a 20 ft. range of the 5ft Skelly Dog. If the issue persists, replace the batteries in the Remote Control with fresh batteries (2 x 1.5V AAA). If there is still a problem with your Remote Control, contact customer service.
The sensor is not working.	Make sure the sensor is not aimed at an area that is either a heat source or any drafty areas. The Infra-red sensor works by detecting changes in temperature and these environments can affect its function. Make sure nothing is blocking the sensor and that the sensor cable is firmly plugged into its corresponding cable. If the issue persists, please contact customer service.

## Service Parts

Replacement parts are available for most parts listed on page 4, but supplies are limited and restrictions do apply. Additional parts (wiring, hardware, etc.) may also be available.

Please retain your receipt or proof of purchase from The Home Depot.

Contact Customer Support for details or if you have any question about assembly or operation. Contact information is at the front and back of this manual.



TM

Need assistance with your animatronic? Please have a copy of your receipt ready and email the SVI customer experience team ([customerservice@svious.com](mailto:customerservice@svious.com)) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

**1-855-HD-HOLIDAY (1-855-434-6543)**  
**HOMEDEPOT.COM**

Retain this manual for future use.