

KB-BC70

FCC ID:2BEF7-KB-BC70

Manual de operación



KB-BC70 Altavoz BT

User Manual

Common problems and solutions

1. After playing for a long time, the device often turns off automatically, the problem may be that the battery is low, please charge and try again.
 2. Stuttering in Bluetooth mode may be beyond the effective BT connection distance.
 - 3, BT unpaired.
 - A) check if the speaker is in the state of searching, or restart,
 - B) too many Bluetooth peripheral devices make it difficult to search.
- Disable other BT devices.

Precautions

1. Please store and use the product in a normal temperature environment.
2. Do not expose the product to rain or moisture.

3. Please do not drop it to avoid damage caused by dropping the product.
4. Please do not disassemble, repair and modify this product by yourself.
5. The product has a built-in lithium battery, please do not discard it or put it into fire, otherwise it may cause danger.

Warning and safety attentions:

When working with a USB port, the device connecting the production of a USB plug, and the USB plug should be placed in an easy plug Position.

1. Please use the product in a cool and dry place, keep away from windows, heat sources, and avoid rain and sunlight.

2. Do not use metal or other objects to insert them from the machine holes, the product should not be exposed to water droplets and splashing, and measures such as rain, moisture and water resistance should be taken to avoid short circuits, resulting in fire, electric shock and other unsafe factors.

Do not place open flames on the machine, such as lighted candles, cigarettes and similar lighted objects, combustible gases, liquids or flammable substances that can generate heat should be placed 5 meters away from the machine to avoid fire or damage to the machine and other unsafe factors.

Use only the voltage and current specified by the machine port. It is dangerous to connect and use higher voltage than the specified value,

and it may cause fire and damage to the machine.

5. Please do not turn on the machine for a long time, please disconnect the power connection during go out or Thunder.

Instructions

1.On/Off Volume Adjustment

A, use knob to turn on and off.

B. Knob use to adjust volume.

2.Bluetooth connection

A. After entering Bluetooth mode, search with a mobile phone or other device, and make pairing connection with Bluetooth device name "L6", enter Bluetooth playing mode after pairing has been successful.

B. After the device is successfully paired, the next time it enters Bluetooth mode, it will perform an automatic back-to-back for 10 seconds, and the back-to-back timeout enters the pairing state.

Bluetooth call

When receiving call notification, press Short > To answer, press Long to reject, press Short > i to hang up during the call.

4.TF card/flash cards

Insert TF card into TF card slot, the system will automatically switch to card reading mode, insert flash cards into flash card slot, the system will automatically switch to card reading mode.

5.charge

Connect the USB plug of the micro charging cable to the USB power port with DC 5V and connect the micro charging head to the DC 5V socket of the machine to start charging while the red indicator light is on.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference

(2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm(8 inches)during normal operation.

That changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.