 
 


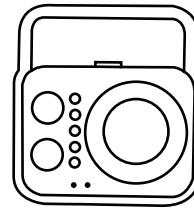


# KARAOKE MACHINE 2-MIC MUSIC STATION

AGES  
6+


## CONTENTS

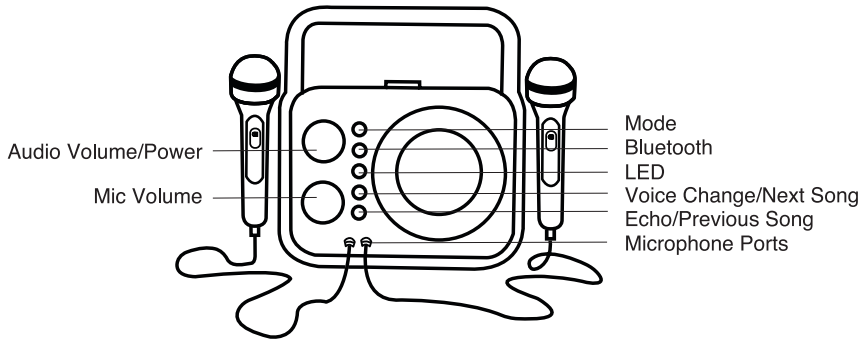

 
1 Karaoke Machine

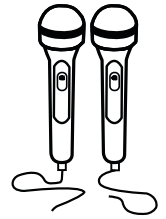

2 Wired Microphones

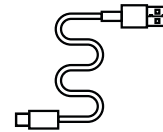 

1 USB-A to USB-C Charging Cable

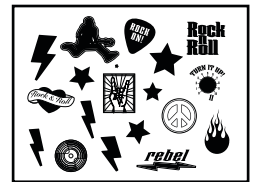 

1 Sticker Sheet

### SAFETY WARNINGS: READ BEFORE USE

- Adult supervision required.
- Karaoke machine and microphones are not water resistant. Do not expose to liquids other than to a damp cloth.
- Never transport the karaoke machine with a device on it.
- Always perform with the microphones while standing with 8 feet of the karaoke machine.
- Do not ingest any items included in this set.
- Use this product only for its intended purpose. Do not use attachments of any kind.
- Inspect product before every use. If product appears damaged in any manner, discontinue use and discard immediately.
- Put this product into its package when not in use and store in a cool, dry location protected from direct sunlight.

### BATTERY WARNINGS: READ BEFORE USE

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Model No.: 1017490



Geoffrey's Toy Box is a mark of TRU Kids Inc.

© 2023 TRU Kids Inc.

Distributed by and © 2023 MerchSource, LLC. Irvine, CA 92618.

All rights reserved.

For customer support, please visit [www.msccustomercaare.com](http://www.msccustomercaare.com) or call 1-800-374-2744.

Printed in China.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE. Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Computers, tablets, Smart Phones, and music players must have built-in BLUETOOTH® wireless technology to connect. This product is not affiliated with or endorsed by any of the above mentioned, referenced or pictured trademarks, companies or devices.



# WARNING:

 
 
 
CHOKING HAZARD – Small Parts.  
Not for children under 3 years of age.



# KARAOKE MACHINE 2-MIC MUSIC STATION

AGES  
**6+**

## GETTING STARTED

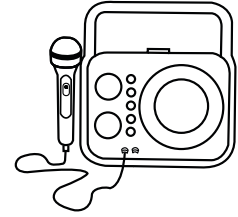
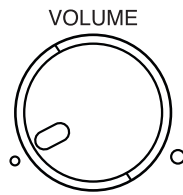
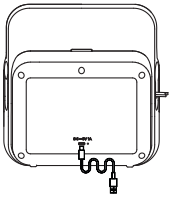


1. Insert the included USB-C cable into the charging port. Insert the USB-A side into a power source. The LED near the charging port will turn on.

2. Once fully charged, the LED will turn off. Disconnect the cable and turn the volume dial clockwise to turn on the karaoke machine. To turn off, turn the volume dial counterclockwise until you feel a click and cannot turn it anymore.

3. Make sure the microphones are turned off, and plug them into the microphone ports. NOTE: If you use the microphones while the karaoke station is charging, you may hear feedback.


## CONNECTING YOUR DEVICE

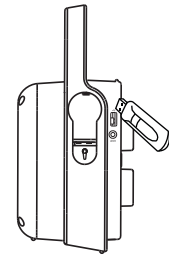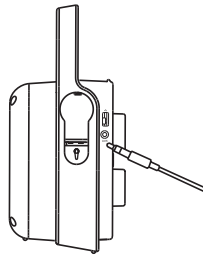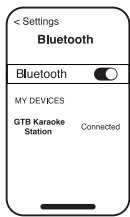   

1. The karaoke machine will default to Bluetooth mode. Open the Bluetooth menu on your device and select "GTB Karaoke Station" from the available devices.

2. To connect a device using an AUX cable (not included), plug one end of the AUX cable into your device and the other into the AUX jack in the side of the karaoke machine.

 3. To play music from a USB drive, plug the USB flash drive into the USB-A port on the side of the karaoke machine.




4. To disable Bluetooth functionality, press the button with the Bluetooth icon on the karaoke machine. Press again to turn Bluetooth functionality back on.

5. To change between Bluetooth, AUX, or USB mode, press the MODE button on the karaoke machine.

6. Once connected, play music on your device, adjust the volume using the volume dial on the karaoke machine or your device and prepare for your grand performance!


## KARAOKE MACHINE CONTROLS

 

1. Turn the microphones on and turn the microphone volume dial to the desired sound level.

2. Press the LED button to turn off the LEDs. Press again to turn back on.

 3. Change your voice's tune with the 5 different voice changers by pressing the VOICE button. After the 5th voice changer, pressing again will return your voice to normal.

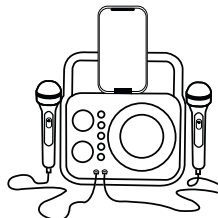

4. Add a dramatic effect to your performance by adding an echo by pressing the ECHO button. Press again to disable.

5. If you are reading lyrics off of a phone or tablet, prop the device up between the device holder and handle on top of the karaoke machine. NEVER MOVE THE KARAOKE MACHINE WITH A DEVICE ON TOP.

6. Change the song by using your connected device. If you are using a USB drive, press-and-hold the VOICE button to go to the next song or the ECHO button to go to the previous song.

## TIPS

- Flip down the microphone holders on the side of the karaoke machine.
- The karaoke machine will go to sleep after 15 minutes of no activity. To wake it up, you will need to turn the karaoke machine off and back on again.
- If you use the microphones while the karaoke station is charging, you may hear feedback.