2.1 TV Soundbar Speaker

User Manuel ZSK-B01



2.1 home audio spaker

 



Model No.: ZSK-B01






Made in china



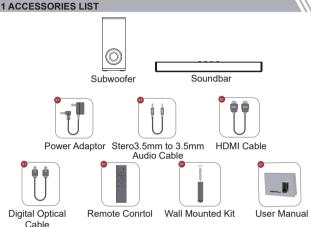

2 SOUNDBAR CONTROLS

 


Control Panel

- "○": Power Button
 - Long press to power on / Hold for 3 seconds to power off. Short press to switch channels: ARC-OPT-USB-AUX-BT(Press to switch to Bluetooth channel and enter pairing mode. see led showing "BT"use mobile phone to searching:ZSK-B01 to connect device)
- 2 " ": Long press previous song/short press volume down.
- ③ " □ ":Long press to off "BT" short press to play/pause.
- 4 "-+ ":Long press next song / short precs volume up.


Remote control

- "O"Power Button

 Press to power on / Short press to power on
- " + " Volume Up
- "▶■" Play / Pause
- "
 "
 Previous song
- 6 "₩" Next song
- a "-" Volume Down
- " MODE" Press button to change mode BT/ARC/OPT/AUX/USB
- **6** "UNPAIR" Press BT unpaired
- "MUSIC" Press button music mode
- "MOVIE" Press button movies mode
- "NEWS" Press button news mode

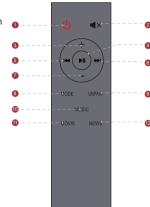

3 CONNECT TO SUBWOOFER

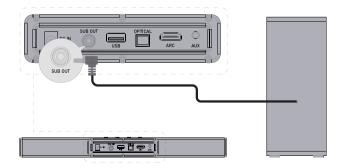

4 CONNECT TO TV VIA HDMI ARC



Step 1: Step 2:

Connect one end of the Then connect the other end HDMlcable to the ARC to the ARC port of the soundbar, remote control to select"HD port on theback of your TV.




Step 3:


Press "MODE" button on the MI(ARC)" input.

When your TV is connected to a stereo. ARC (HDMI) mode will automatically switch to this mode if the TV has its own recognition. If not, go to the TV and choose settings-sound-find ARC (HDMI) or OPT RCA AUX, remember that the stereo also needs to select the corresponding MODE in MODE, in order to be the sound source normal access audio playback sound

5 CONNECT TO VIA OPTICAL/AUX

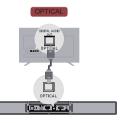

OPTION1:OPTICAL

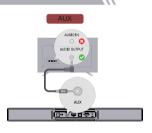

OPTION2:AUX

Make sure the TVs port is OPTICAL OUT connect both sides of the cable to OPTICAL.for both the TV and the soundbar. Make sure the optical plug is inserted correctly as it shows in the picture.Do not insert the plug upside down and break the optical.

Note: If audio is playing from the internal TV speakers, mute or minimize the TV volume.

Connect the 3.5mm to 3.5mm Audio Cable to your TV's AUDIO OUT port. Not support AUDIO IN port on TV. Note: Please remember to unplug the AUX cable from TV and Soundbar when you want to switch to other mode.

In Optical Mode: If there is no sound, try setting the TV audio output to PCM: TV Setings > HomeSettings > Sound > Digtal Audio Output > PCN

6 CONNECT TO BLUETOOTH

 
- Press the " \(\cap \)" button on the soundbar or remote control to enter Bluetooth pairing mode.
- Open your phone's Bluetooth settings, find and select "ZSK-B01" to connect the soundbar. Note: of it's already in the Bluetooth mode and connected, press and hold " buton for 3 seconds to disconnect the current device and connect to new device manually on your mobile phone / PC / TV.

 






8 WALL MOUNT INSTALLATION







9 SPECIFICATIONS

Model Number:	ZSK-B01
Input:	AC 110-240V ~50/60hZ
Output:	20V~~2000mA
Soundbar Drivers:	(1.2'*3.8")*2(Soundbar)+ 5.25"(Subwoofer)
Frequency Response:	45Hz-18kHz
Standby Power:	< 0.5W
Operating Temperature:	0℃-45℃//32F-113F

Bluetooth Vision:	5.3
Soundbar:	W 400*H38*76D (MM)
Subwoofer:	W270*H115*270D(MM)
Packaging:	L383*W165*H445 (MM)
Net Weight:	3.3kg/7.28lbs
Gross Weight:	4.2kg/9.26lbs

IMPORTANT SAFETY INSTRUCTIONS



CAUTION: To reduce the risk of electric shock, do not open the device. there is no party inside for the user. Refer all servicing to qualified personnel.



The lightning with the arrow symbol in the triangle is a warning sign alerting the user to dangerous voltage" inside" the unit.



The exclamation point in the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD.DO NOT EXPOSE THIS APPLIANCE TORAIN OR MOISTURE.

IMPORTANT

- -The use of apparatus in moderate climates.
- -The marking plate is located on the bottom of unit.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.
- Ensure that the ventilation openings is not covered with items such as newspapers tablecloths.curtains, etc.
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Do not expose this appliance to dripping or splashing water
- Do not place objects filled with liquids, such as alass, vase on the device



🋪 If in the future, you need to get rid of this product, please note that Wasteelectrical products should not be disposed of with household wasteRecycling facilities exist. Check with your municipality or ask your dealerfor advice. (Directive for Waste ■ Electrical and Electronic Equipment)

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- •Reorient or relocate the receiving antenna.
- •Increase the separation between the equipment and receiver.
- •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- •Consult the dealer or an experienced radio/TV technician for help.
 Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.
 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

2.1 テレビスピーカー

取扱説明書 ZSK-B01



2.1 home audio spaker






モデル::ZSK-B01



® (€ ĽK ROHS 💆 🗘

Made in china


1部品構成表

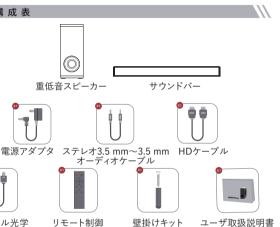

2 サウンドバー制御

ディジタル光学

 ロープ本



コントロールパネル


❶ "○": 電源ボタン

電源をオンにする/3秒間押し続けて電源をオフにする切り替えチャンネル:ARC-OPT-USB-AU X-BT(押すとBluetoothチャンネルに切り替えてペアリングモードに入ります。led表示を参照して、携帯電話を使ってZSK-B01接続デバイスを検索してください)


- ③ "▷Ⅲ":長押しで"BT"を閉じ、短押しで再生/ 一時停止します。
- 4 " ♣":長押しする1曲、短押音量プラス

リモコン

- (り"電源ボタン 押して開く/押して開く
- ② "ब×" ミュートスイッチ
- ③ "+"音量が増す
- 🤰 "ы" 再生/一時停止
- ⑤ "҆҆҆҆҆҆҆҆҆҆҆҅҆҆҆҆҆҆҆҆҆҆҅҅҆ "前の曲
- ⑥"艸"次の歌
- ⋒ "ー"音量降低
- 『MODE"ボタンを押してモード
 BT/ARC/OPT/OUT/USBを変更する
- "UNPAIR" BT未ペアリングを押す
- "MUSIC" キー音楽モード
- "MOVIE" キー映画モード
- ⑩ "NEWS" ニュースモード

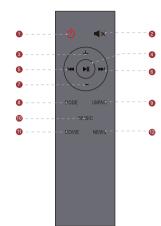


3サブウーファに接続

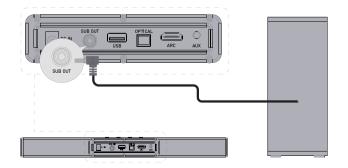

4 HDMI ARCでテレビに接続する





 


ステップ1: HDMIケーブルの一端を テレビ背面のARCポート に接続します。

ステップ2: と次に、もう一方の端をストリットプスピーカーのARCポートに接続します。

ステップ3: リモコンの"MODE"ボタンを押 して"HDMI(ARC)"入力を選択

音声を設定してARC(HDMI)またはOPT RCA AUXを見つけるには、ステレオはまたMO DEの中で適切なMODEを選択する必要があり、音声のになることができます。テレビがステレオに接続されているとき、テレビに独自の識別機能があれば、ARC(HDMI)モードは自動的にこのモードに切り替わります。ない場合は、TVに移動し、通常のアクセス音声再生を選択してください

5 OPTICAL/AUX を介して接続

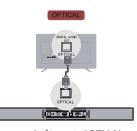

オプション1:OPTICAL



オプション2:AUX

- ●TVSポートがOPTICAL OUTであることを確認し、ケーブルの両側をテレビとスピーカーのOPTICALに接続します
- ●光学プラグが図のように正しく挿入されていることを確認します。CDが破損しないようにプラグを逆さまに挿入しないでください。注:内蔵テレビスピーカーでオーディオが再生されている場合は、テレビの音量をミュートまたは縮小します。
- ●3.5 mm~3.5 mmオーディオケーブルを TVS AUDIOOUTポートに接続する
- ●テレビのAUDIO INポートはサポートされていません注意:他のモードに切り替えたい場合は、テレビとスピーカーのAUXケーブルを外してください。

光学モードで:音声がない場合は、TVオーディオ出力をPCMに設定してみてください:TV 設定>ホーム>設定> 音声>デジタルオーディオ出力>PCN

6 Bluetooth に接続

 
- ●スピーカーまたはリモコンの"○"ボタンを押すと、Bluetoothペアリングモードに入ります。
- ●携帯電話のBluetooth設定を開き、スピーカーに接続するには「ZSK-B 01」を選択します。 注:Bluetoothモードで接続されている場合は、"○"ボタンを3秒間押して現在のデバイスを切断してから、携帯電話/PC/TVに手動で新規機器に接続する。

 






8壁取付け







9 仕 様

モデル:	ZSK-B01
投入:	AC 110-240V ~50/60hZ
産出:	20V~~2000mA
ストリップスピーカドライバ:	(1.2'*3.8")*2(ストリップスピーカ)+ 5.25"(サブウーファ)
バー周波数応答:	45Hz-18kHz
スタンバイ電源:	< 0.5W
動作温度:	0℃-45℃//32F-113F

Bluetoothビジョン	5.3
サウンドバー:	W 400*H38*76D (MM)
サブウーファ:	W270*H115*270D(MM)
ほうそう:	L383*W165*H445 (MM)
ネットウェイト:	3.3kg/7.28lbs
もうじゅうりょう:	4.2kg/9.26lbs

重要なセキュリティの説明

に警告 感雷危険開けないでください

警告:感電の危険を減らすために、本機を開けないでください、機内は使用者の接触を禁止します。すべて参照合格者にサービスを提供する。

A

三角形の矢印記号を持つ稲妻は警告マークであり、使用者に危険電圧があることを警 ・告する"単位"内。



三角形の感嘆符は警告マークであり、製品に付属する重要な説明に注意するようユーザーに警告します。

警告:火災や電気ショックの危険を防ぐために、本機を雨や湿気のある場所に置かないで ください。

重要な:

- -穏やかな気候条件下で計器を使用する。
- -マーキングプレートはユニットの底にあります。
- 十分な換気を確保するために、マシンの周囲に少なくとも5センチの距離があることを確認します。
- 通気口が新聞やテーブルクロスなどに覆われていないことを確認します、カーテンを閉める、待って。
- 火をつけたろうそくのような覆いのない火元を設備に置かないでください。
- 本器具を水滴やスパッタリングに曝さないでください。
- ガラス瓶や花瓶など、液体を満たしたものを設備に置かないでください。
- 将来、この製品を処理する必要がある場合は、廃棄された電子製品は家庭廃棄物 回収施設があります。市政当局またはディーラーにお問い合わせください。(廃棄物 命令電気及び電子機器