



USER GUIDE


WORMHOLE Portable Tattoo Printer

N202007



■ Appearance and components

Indicator lights and button operation

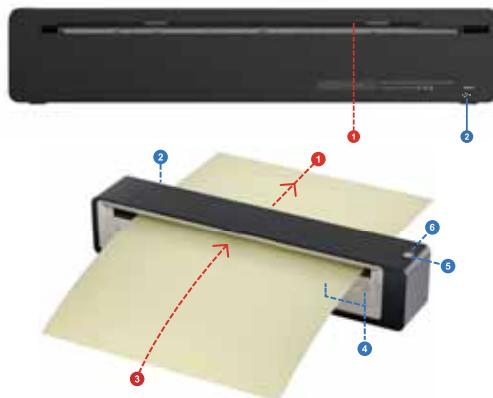

1. Paper outlet	4. Paper scale(A4)
2. Charging port (Type-C/USB)	5. On/Off button (long press)
3. feeder	6. Power Light/Bluetooth Light

Light and Button	Situation
Power light	The status light is on when the device is turned on
Charging light	The red light is on when the device is charging, and off when fully charged
Bluetooth light	The blue light blinks when Bluetooth is not connected, the blue light stays on when the connection is successful

2


■ Operating instructions

Notes on paper placement


1. Long press the power button to turn it on.



2. Take out the transparent protective page.

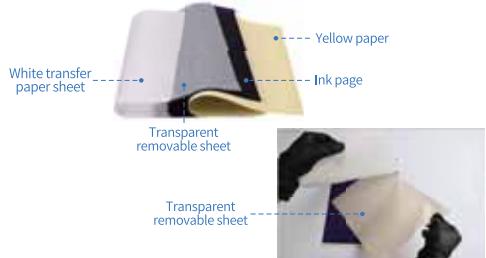

3. Insert the transfer paper, align the scale with the yellow page facing up and the machine will automatically suck in the transfer paper.

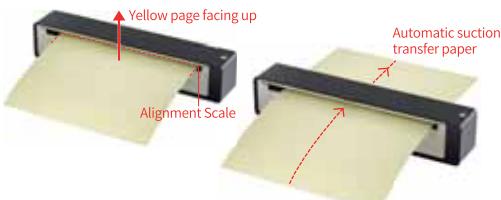

4. After installing the transfer paper prepare your mobile phone (iOS / Android) to connect to the machine.
Start printing the pattern you want.




Type	Example	Example	Recommend
Line Pattern			
Shadow Pattern			
Gradual change Pattern			
Colorful background Pattern			

! The quality of the transfer paper will affect the printing effect.
(The quality of the transfer paper is determined by the uniformity of the ink sheet.)

■ Intelligent interconnection

Smart phone connection printing operation

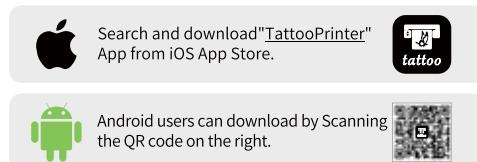

After downloading the app, turn on Bluetooth and Location and connect to the printer. All other operations are the same as iOS.



Download the
"TattooPrinter" App.



Open the App

5



Scan QR Code Enjoy Service and Promotion

<https://www.facebook.com/groups/wormholetattoo>



Click in the upper left corner to connect to Bluetooth.



Connection printer name
N202007
Default PIN: 0000



Click "Edit" to adjust the size and position of the picture.



Click on the print icon in the upper right corner.



Click Album




Select a picture to print

6



You can adjust the parameters, Select Print.

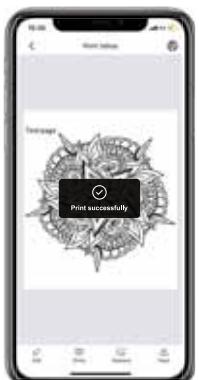

Print successfully appears
Wait 3-5 seconds,
paper starts to come out.

7

Technical support

Technical service support



Type-C for Connection/Data transmission/Printing



USB TYPE-C

This printer can use the attached TYPE-C cable to connect and print with the computer.

However, we do not recommend using a computer to connect the machine to print, the effect of connecting the computer to print is not as clear as the phone connection to print, and the process is very complicated. Because everyone's computer system and program is different, the installation of the printer driver is prone to bugs, and may not be normal in the computer use of the error. Please understand clearly before you use it.

Using a cell phone for Bluetooth connection is more convenient and faster, easy-to-print operation. Please use your cell phone to connect to use our printer.

If you are in great need of using a computer to use this printer, please contact our official technical team to send you a tutorial and software download address to connect the computer to guide you to install it.

If you're in trouble

Q: The default PIN for connecting to the printer is: "0000" but if entered "0000" or it shows PIN error can not be connected, how do I need to solve it?

A: It may be due to the conflict between the program of the mobile phone and the printer, resulting in the confusion of the PIN program. Please contact our official technical team, and we will send you a tutorial to successfully modify the password connection.

8

Precautions

Common problem

Problems	Causes	Solutions
No pattern after printing	①The transparent protective sheet in the middle of the transfer paper is not removed. ②The transfer paper is not inserted correctly.	①Remove the transparent protective sheet from the transfer paper. ②Follow the instructions to insert the transfer paper correctly.
Printing blur	Printer is not cleaned for a long time and consumables are bad	Clean the printer rollers and thermal bar with a non-oven cloth with alcohol
The printer keeps making noise	The paper warehouse cover is not fastened or the paper is not properly placed.	Cover the cover or put the paper correctly
The printer automatically turns off/Printings intermittently	Battery depletion	Charging soon

If you're in trouble

Printing precautions

1. It is recommended not to print in high humidity and dusty areas.
2. If the print head is too hot after printing, do not touch it directly.
3. Do not touch the print head when changing print paper.
4. To prevent static electricity from damaging the print head, do not touch the print head.

Precautions during charging

1. Do not forcefully insert or remove the charging cable.
2. Please disconnect the power after charging.
3. Please use the original power cord to charge, otherwise the printer may overheat, catch fire, and burn out.
4. Do not charge in high temperature environments.
5. If the wrong type of battery is replaced, there is a risk of explosion. It is prohibited to replace the battery without permission, as replacing the battery without permission will lose the warranty.

9

Equipment parameters

Basic parameters

Effective printing width 210mm	Resolution 203dpi
Size(MM) 263*45*52	Battery capacity 2500mAh
Connection mode USB+Bluetooth	Input 5V --- 2A
Paper size A4 Tattoo transfer paper	Support system Android & iOS & Windows



**The size is measured manually, please refer to the actual product

Contacts

If you have any questions about this tattoo printer, please feel free to contact us in these ways.

Find us on

Website:

Europe: www.wormholetattoo.com

The rest of world: www.wormholetattoosupply.com

Email:

Global: support@wormholetattoosupply.com

Facebook @Wormholetattoo

YouTube @Wormhole Tattoo

Instagram @wormholetattoosupply

Pinterest @wormholetattoo

WhatsApp: Text to +8613386501516

