


ESL AP Quick Start Guide

1. status light

产品图示

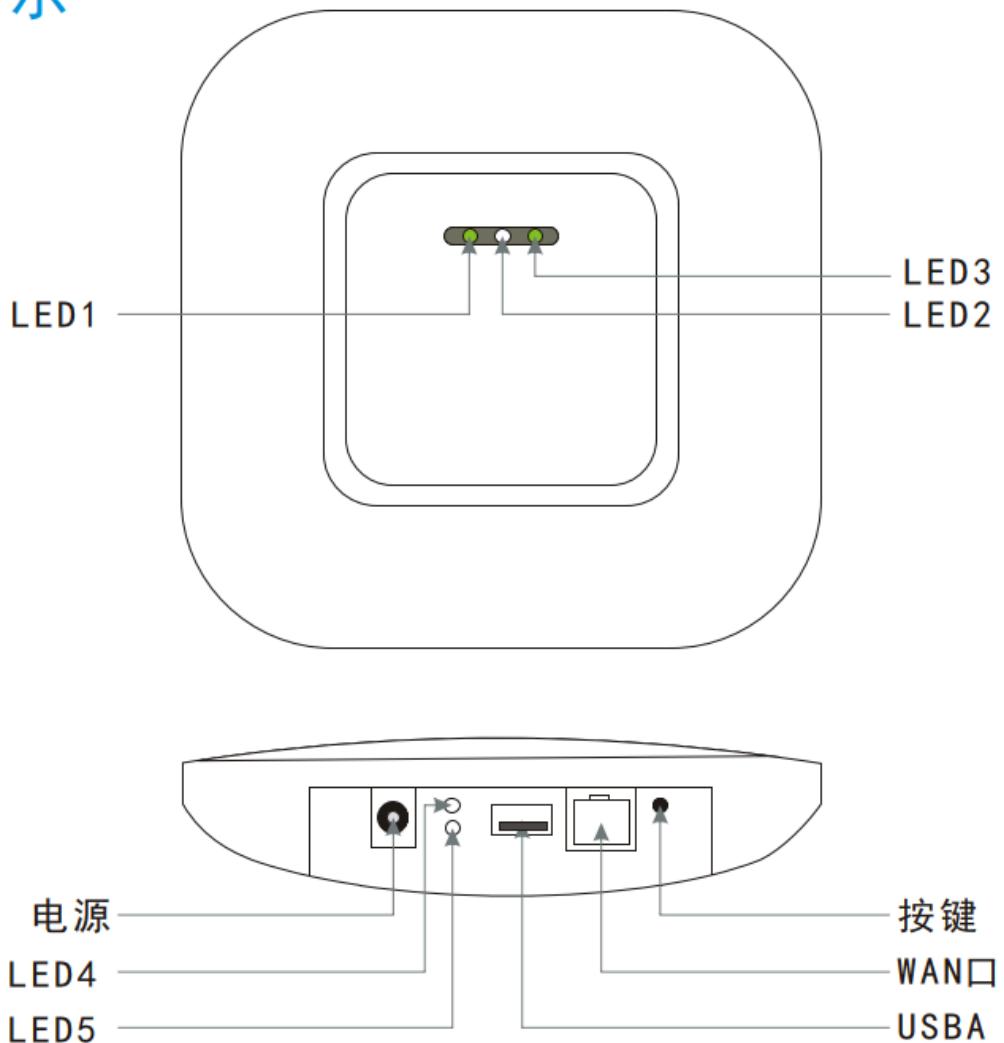

LED1: Not used temporarily

LED2: ESL transceiver status light

white flash Monitor price tag broadcast

green flash Send power management

flashing blue idle

purple flash Read and write price tags

LED3: Network status light

red The network cable is not plugged in and the base

station WIFI is not connected to the hotspot.

blue The network cable is plugged in or the base station WIFI is connected, but cannot connect to the Internet (external network)

green Can connect to the Internet normally (external network)

LED4, LED5: motherboard power indicator light

2. Base station network settings

1. Wired Internet access

1.1 DHCP dynamic IP Internet access

1.1.1 Power on, connect the Internet cable, wait for LED2 white light to flash, other lights do not flash.

1.1.2 Search WIFI on mobile phone or computer: woap-xxxx (default)

1.1.3 Connect your mobile phone or computer to the base station WIFI. The default password for the base station WIFI is: 12345678.

1.1.4 Browser opens: 192.168.66.1 (default)

1.1.5 Log in to the base station background, username: root, password: 123456 (default)

1.1.6 Select menu:network > Interface > WAN

1.1.7 Protocol selection:DHCP client (if you are already a DHCP client, no operation is required in the following steps)

1.1.8 Click the button:Switch protocol

1.1.9 Click the button:Save & Apply

View network lights

If the upper-level network segment is also 192.168.66., please connect to the base station hotspot to set the gateway IP of other network segments.*

1.2 Static IP Internet access

1.2.1 Power on, plug in the Internet cable, wait until the white LED2 light flashes, other lights do not flash.

- 1.2.2 Search WIFI on mobile phone or computer: woap-xxxx (default)
- 1.2.3 Connect your mobile phone or computer to the base station WIFI. The default password for the base station WIFI is: 12345678.
- 1.2.4 Browser opens: 192.168.66.1 (default)
- 1.2.5 Log in to the base station background, username: root, password: 123456 (default)
- 1.2.6 Select menu: network > Interface > WAN
- 1.2.7 Protocol selection: static address
- 1.2.8 Click the button: Switch protocol
- 1.2.9 **Enter the IPv4 address:** The network segment is allowed by the superior and is not in use.
- 1.2.10 **Enter IPv4 subnet mask:** 255.255.255.0, You don't need to fill in the others.
- 1.2.11 Click the button: Save & Apply
View network lights

2. WIFI Internet access

- 2.1 Turn on the power, wait for LED2 white light to flash, other lights do not flash
- 2.2 Search WIFI on mobile phone or computer: woap-**** (default)
*(*Note: If the hotspot is intermittent, please reset the network settings and try again)*
- 2.3 Connect your mobile phone or computer to the base station WIFI. The default password for the base station WIFI is: 12345678.
- 2.4 Log in to the base station background, username: root, password: 123456 (default)
- 2.5 Select menu: network > Wireless
- 2.6 **Select mode:** Select bridge/trunk
- 2.7 **Click the button:** Scan and wait for the scan to complete
- 2.8 **Opt in:** Choose the WIFI you want to connect to
If the WIFI you want is not found, repeat step 2.7

2.9 **Enter STA password:** Enter the password for the base station to connect to WIFI

2.10 **Click the button:** Save & Apply
View network lights

3. Base station configuration

1. Turn on the power, wait for LED2 white light to flash, other lights do not flash
2. Search WIFI on mobile phone or computer: woap-xxxx (default)
3. Connect your mobile phone or computer to the base station WIFI. The default password for the base station WIFI is: 12345678.
4. Log in to the base station background, username: root, password: 123456 (default)
5. Select menu: Electronic price tag ➤ Base station configuration
Start configuring the base station (host address, store number, user, password, please consult after-sales)

4. language settings

1. Turn on the power, wait for LED2 white light to flash, other lights do not flash
2. Search WIFI on mobile phone or computer: woap-xxxx (default)
3. Connect your mobile phone or computer to the base station WIFI. The default password for the base station WIFI is: 12345678.
4. Log in to the base station background, username: root, password: 123456 (default)
5. Select menu: System ➤ System ➤ Language and interface (Language and Style) ➤ Language (Language)
6. Choose a language

7. click button: Save & Apply

5. troubleshooting

1. Question: Are the three yellow-green lights flashing at the same time?

Answer: Generally, the base station has just been powered on, the system is restarted or reset, and the three lights will flash together for about 30 seconds before returning to normal.

2. Question: Does the WIFI of the base station come and go?

Answer: How to set up bridge mode wirelessly? This is usually caused by the base station not being able to connect to the hotspot. Please unplug the network cable and reset the network settings.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

ISED Statement

- English: This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

- French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. L'appareil numérique du ciem conforme canadien peut - 3 (b) / nmb - 3 (b).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé.

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.