

# User Manual



V1.0

## A. APP Download

As shown in the figure, use the QR code below with your phone to download the YOLO app, install it, and register to log in.



## B. Introduction to Buttons



## C. QR code distribution network

When using a wireless camera, it is recommended to turn on your phone's WiFi.


1. Open the YOLO app to complete account registration, and click the "Y" button on the homepage.
2. Use your phone to scan the QR code of the camera label. The label of the camera is usually located at the bottom or side of the shell.



As the AP function is supported and enabled, please pay attention to the difference between the QR code used for the distribution network and the QR code used for the distribution network.

Set the WiFi used by the device.

1. Connect your phone to 2.4GHz WiFi.
2. Confirm the WiFi name in the app and enter the correct password.

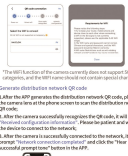

The QR code of the camera label is used for adding QR code to the distribution network. After the QR code is scanned, the device will automatically connect to the distribution network.

After the QR code is scanned, the device will automatically connect to the distribution network.

## Completing the addition

1. The app will automatically add devices.
2. After adding, you can check the status of the device and set device names.



## D. AP hotspot distribution network

1. Click the "Y" button on the home page. Please click "hot" button.
2. Select "Create Hotspot" on the device "Message" page. Click on "hot" for page conversion.



## Use Device

In the device list, you can view the added camera and click to view the real-time preview screen.



## Hot Spot

The Hot Spot function is supported and enabled. Please pay attention to the difference between the QR code used for the distribution network and the QR code used for the distribution network.

1. Open the YOLO app to complete account registration, and click the "Y" button on the homepage.
2. Use your phone to scan the QR code of the camera label. The label of the camera is usually located at the bottom or side of the shell.

As the AP function is supported and enabled, please pay attention to the difference between the QR code used for the distribution network and the QR code used for the distribution network.

Set the WiFi used by the device.

1. Connect your phone to 2.4GHz WiFi.
2. Confirm the WiFi name in the app and enter the correct password.