

HYUNDAI

HY-Y18

True Wireless Bt Earphones

Packing list

	True Wireless Bt Earphones × 1		Instruction Manual & Warranty Card × 1
	Type-C Charging cable × 1		Earphones Hanging Chain × 1

Product diagram

Product Specifications

BT version: 5.4
BT effective distance: >10m
Horn Diameter: Φ13mm
Battery capacity: 35mAh (Earphones)/300mAh (Charging Case)
Music playback time (80% volume): 5-6H (Earphones)/20H (Charging Case)
Charging time: 1.5H (Earphones)/1.5H (Charging Case)

Charging indication

- Before charging, Please turn off the earphones first
- Plug the USB end into the DC5V charger socket, connect the Type-C end to the earphones charging port, RGB lights single-color cycle breathing flash (red yellow green cyan blue purple and red sequential breathing flash for a cycle), Blue light stays on for a long time when fully charged and goes off immediately when the charging cable is unplugged
- Low battery alert for earphones voltage below 3.3V; Battery Low reminder every minute.
- Auto power off when the battery level is lower than 3.1V

Product Operating Instructions

Power on

- When the earphones is in power off, long press the earphones to touch the button for 3 seconds, flash after the white light is on for 1 second

Power off

- When the earphones is powered on, long press the earphones touch button for 5S and earphones power off

Pairings

Method 1: When the earphones is off, press and hold the left and right touch key buttons for 3 seconds to turn on, the earphones automatically enters the pairing state

Method 2: Open the mobile phone to search the bluetooth device name, click the device name "HY-Y18", completing the connection

Method 3: Take out the earphones from the charging case, enter the pairing state automatically, open your mobile phone to search for bluetooth equipment name click on the device name link to complete the link

Status of the earphones LEDs

Power ON	White light on for 1 second, power on to white light fast flash
Power OFF	White light blinks 3 times to power off
Connected device	Indicator light off
Disconnect	Main unit white light blinking, vice ear white light off
Earphones Low Battery Alert	White light blinks 5 times fast (10 second intervals)

Charge Indicator Status

Charging case Discharge	Earphones charging	1. Earphones light: Earphones white light is always on 2. Charging case light display: RGB lights single-color cycle breathing flash (red yellow green cyan blue purple and red sequential breathing flash for a cycle), two cycles after the extinction / fully charged after extinction
	Earphones fully charged	1. Earphones light: Earphones white light off 2. Charging case light display: RGB lights single-color cycle breathing flash (red yellow green cyan blue purple and red sequential breathing flash for a cycle), off when fully charged
Charging the charging case	Charging	RGB lights single-color cycle breathing flash (red yellow green cyan blue purple and red sequential breathing flash for a cycle)
	The case is fully charged	Blue light stays on for a long time and goes off immediately when the charging case is unplugged.

Voice prompt

Power ON	Power on
Power OFF	Power off
Connected device	Connected
Disconnect	Disconnected
Earphones Low Battery Alert	Battery low
Game/music mode switching	Game mode/Music mode

Function Operation

Conventional mode

- Voice assistant: Long press left ear function key 2S to activate (except for incoming call status)
- Volume +: Click on the right ear touch button/maximum volume tone: du du
- Volume -: Click on the left ear touch button/minimum volume tone: du du
- Game/Music Mode: Long press the right ear function key 2S to switch between game and music modes

Music mode

- Music Play/Pause: Double-tap the left/right earphones function keys
- Previous song: Three-click left ear touch button
- Next song: Three-click right ear touch button

Call mode

- Answer/hang up call: Double-click the left/right earphones touch button
- Reject a call: Long press the left/right earphones touch button 2S refuse to pick up the call

Clear pairing records

When the earphones is in unconnected, 5 click the left or right earphones to touch the button, power off after 5 times of white light flashing, after reopening, automatic pairing left and right earphones

Names and contents of hazardous substances in products

Part Name	Harmful substances					
	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
Diphenyl ether	○	○	○	○	○	○
Small structural parts such as housings	○	○	○	○	○	○

This table is prepared according to the provisions of SJ/T11364
○: means that the content of harmful substances in all homogeneous materials of the part is below the limit requirement of GB/T26572.
X: indicates that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit specified in GB26572.
The parts marked with "X" in the table are all unable to achieve the substitution of harmful substances due to the limitation of global technology development level.

This table is prepared in accordance with the provisions of SJ/T11364
Printed circuit board components*: including printed circuit boards and their parts, electronic components, etc.;
Depending on the product model, the product you purchase may not contain all of the above components.

Electrical and electronic products sold in the People's Republic of China must be marked with this logo, the number within the logo represents the product's environmental life under normal conditions of use.

Certificate of Approval
Product No.: _____
Production Time: _____
QC: _____

Warranty statement

Disclaimer
This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are for reference only, and the content will also be updated on the web at any time without additional separate notice.

Warranty statement:
The product attached to this document is guaranteed as follows: if the product is within 12 months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged, can be repaired free of charge or replaced with a new one if the manufacturer confirms that it cannot be repaired/repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchased by the sales ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 13(13) months. You apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled-out valid sales invoice.

The above guarantee does not apply to the following situations:
1. Exceeding the validity period of the three packs;
2. Altering the warranty card and product code does not match the product body;
3. Causes caused by misuse or improper transportation, use, maintenance or storage obstacles or damage;
4. Failure or damage caused by force majeure (such as earthquake, war, disaster, etc.); or accident pad;
5. The zipper and lower buckle are damaged due to excessive force;
6. Disconnection or tearing caused by excessive load;
7. Any damage caused by sharp objects;
8. Products with signs of burning or flooding;
9. Damage caused by unauthorized disassembly;
10. Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of the product.
11. If the original identification label of the product is changed or damaged, this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should check on the spot and raise objections to any discrepancies. The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law.

Service supervision hotline: 400-885-8808

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.