 
 



1.Product Summary | 产品概览

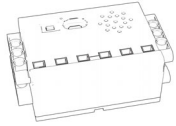

Smart Creative Module
主控模块



 Remote Control
遥控器



USB Charging Cable
专用USB充电线





Building Blocks Instructions
搭建手册




Building Block Parts
积木零件包

2.Product Description | 产品介绍

2.1 Smart creat module | 主控模块

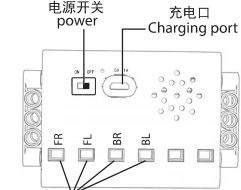  


4X L Motors
L型电机

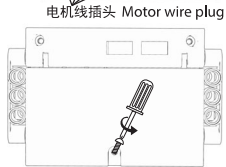 


电机线插头 Motor wire plug

 安装电池方法:
按图将螺丝松开, 打开遥控器电池盖, 装入 600mAh 7.4v 充电电池。

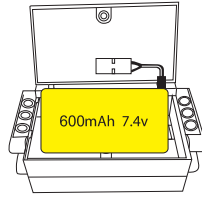


2.2 Remote Control | 遥控器

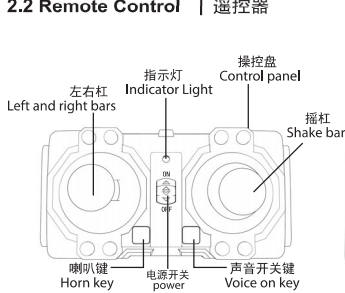 

左右杠 Left and right bars
指示灯 Indicator Light
操控盘 Control panel
摇杠 Shake bar
喇叭键 Horn key
电源开关 power
声音开关键 Voice on key

 安装电池方法:
按图将螺丝松开, 打开遥控器电池盖, 按照正确的正负极性装入2节 1.5V "AAA" 非充电电池。

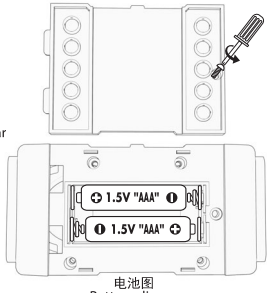

Battery diagram

NOTE | 注意事项

Precautions Smart creative module is not removable and must not subject the product to mechanical shock. Smart creative module contains batteries, away from heat sources, fire sources and locations above 60 °C. Smart creative module cannot be charged for a long time to avoid danger; The USB charging cable is an electronic component and cannot be used for play. This product contains small parts and is prohibited for use by children under the age of three to avoid the risk of suffocation.
主控模块不可拆卸, 不得使产品受到机械冲击:
主控模块包含电池, 远离热源、火源以及高于60 °C的场所:
主控模块不能长时间充电, 以免发生危险:
专用USB充电线为电子元件, 不可拿来玩耍:
本产品含有细小零件, 禁止三岁以下儿童使用, 以免发生窒息危险

Battery warning

- Non-rechargeable batteries are not to be recharged,
- The batteries should be charged under adult supervision,
- Different types of batteries or new and used batteries are not to be mixed,
- Batteries are to be inserted with the correct polarity(+ and -),
- Exhausted batteries are to be removed from the toy,
- The supply terminals are not to be short-circuited.

*The remote control function keys vary with the product series.
*遥控器功能按键随产品系列不同有所差异。

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver,
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause Harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

3.Method Of Operation | 操作说明

3.1 On/Off | 开/关机

Turn on the machine. flash the green light, set up the frequency, and the green light is always on.
开机, 闪绿灯, 对上频, 绿灯长亮。

NOTE:

Please turn off the power and use it outside. It is forbidden to work for a long time. It will stop when the working state is longer than 10-15 minute, Second, you need to charge the Smart

注意: 主控模块使用后需关闭电源, 请勿长时间待机; 在10-15分钟之后启动电池保护, 停止主控模块工作, 重新启动需要对主控模块进行充电操作, 才能恢复正常工作。

Connector Connects to the charging port of the main control module, and USB connects to the interface of the computer. The INDICATOR of the USB charging cable is on during charging, and the indicator is off after charging. The charging time is about 60 minutes, please remove the connector after charging.

接头连接主控模块充电口, USB连接电脑端接口, 充电时USB充电线指示灯亮, 充电完成后USB充电线指示灯熄。充电时间大约为60分钟, 充电完成后请拔出接头。


NOTE: The charging input voltage should not exceed 5V and the current should not exceed 1A.

注意: USB充电接口输入电压不能超过5V, 电流不能超过1A。

3.2 Remote Control Operation | 遥控手柄操作

Remote control operation install the battery before using it, the indicator light will flash, then the indicator will light Long bright. (AAA Battery 2)
使用前请按正确方式安装电池, 安装后指示灯闪烁, 连接成功后长亮。(AAA电池2节)

 Direct ion button control: Front, Back, Left, Right.
遥控器按键控制前、后、左、右方向。

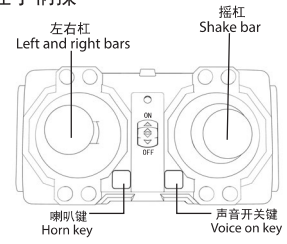

左右杠 Left and right bars
摇杠 Shake bar
喇叭键 Horn key
声音开关键 Voice on key


3.3 Link Operation | 连接操作

First turn on the power, then install the battery, At this time.the remote control light is Long bright and connected.

首先打开主控模块开关, 再安装遥控手柄电池, 按下操控盘任意按键, 当遥控手柄指示灯长亮时, 连接成功。

NOTE: if the product has not been used for a long time, it is recommended to remove the battery of the remote control handle.

 注意: 如长时间没使用产品, 建议拆卸遥控手柄电池。

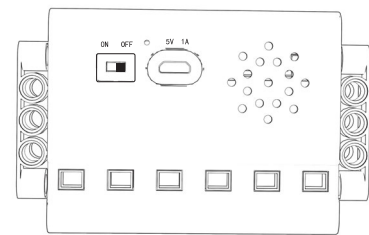

Operting Instructions 通用智能积木操作说明书

Frequency band: 2405MHz~2475MHz
The maximum RF Power: 2.36dBm

Hereby, [GuangDong XinYu Technology Industrial Co.,Ltd], declares that this [107308] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

86-754-85513333 Liang@xq-toys.com

该说明书含有重要信息, 必须给予保留!