

iCam365快速操作手册
WiFi摄像机



请参见封面上方二维码下载
“iCam365”App

A 连接设备



下载APP
使用手机的“扫一扫”功能扫描二维码，下载并安装“iCam365”APP

连接电源
将设备连接电源，等待1分钟后设备开始亮灯显示

B 添加设备

 


01. 登录“iCam365”APP 02. 添加设备 03. 扫描机身二维码 04. 等待自动识别 05. 选择设备连接的WiFi，并输入密码 06. 等待设备配置网络 07. 添加成功，设备名称 08. 完成设备添加后，你的首页

App在平板电脑，可用以App Store

C 功能说明

App在平板电脑，可用以App Store



D 常见问题

问题	解决方式
添加设备不成功怎么办?	检查网络环境是否正常，并且可以正常连接网络，然后再次尝试添加。
如何设置手机通知权限?	在手机的“设置”->“通知”->“通知”->“应用通知”中，勾选“iCam365”应用的通知权限。
如何设置手机省电模式?	在手机“设置”->“电池”->“省电模式”中，勾选“iCam365”应用，以允许其在省电模式下运行。
拍摄不清晰，如何设置?	关闭手机省电模式，调整相机分辨率并选择大于等于1080P的分辨率，并选择最佳的拍摄位置。
拍摄画面是无视频卡顿现象?	1. 检查网络带宽是否充足，网络带宽不足时，调整带宽。 2. 检查手机存储空间是否充足，存储空间不足时，清理手机存储空间。 3. 检查手机性能是否良好，性能不佳时，升级手机性能。
看不到摄像头画面怎么办?	确认摄像头是否正常工作，确认摄像头是否正常工作，并检查摄像头是否正常工作。



Scan QR code to download the app

A Connect the device

Download the app

 
Use the "Scan" function of your mobile phone to scan the QR code and download and install the "iCam360" APP.

Connect power

Connect the device to the power supply and wait for about 1 minute.

Warning:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device complies with the safety requirements for compliance with the user's country. Changes to safety rules are approved by the party responsible for compliance with the user's country.
To operate this equipment, users need to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to an electrical outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Note: This device and its accessories must be used in accordance with any other notices or instructions.
FCC Exposure Statement
To ensure compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20 cm from the radio part body. This error and its accessories must not be installed or operated in conjunction with any other antennas or accessories.



B Add device

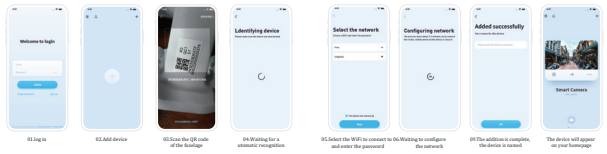

App will be updated continuously, and the interface is subject to change.

C Function Description

  App will be updated continuously, and the interface is subject to change.

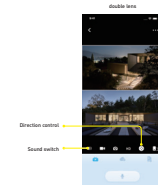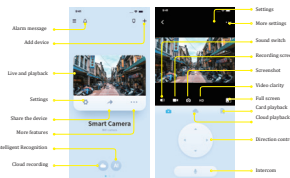

App will be updated continuously, and the interface is subject to change.

D Common problem

Problems	Solution
What should I do if the device is unacceptably added?	Check whether the WiFi password is correct, and the network can be connected correctly. Don't add the camera, and add a regular power connection.
How to download video?	Click the "Record Screen" button during playback, and click the red button after recording, and the video file will be saved to the phone.
What if the display device is blurry?	First confirm whether the power supply and network are normal, and there is no problem with the power supply of the camera and recording. If this camera is still blurry, download the app.
The memory card is full, what should I do?	No manual processing is required. When the remaining memory card capacity is less than or equal to 10%, the camera will automatically overwrite the oldest video file.
The memory card shows no memory card or abnormal.	If the camera does not support the memory card, it needs to be replaced with a memory card that supports the camera. The camera card must be formatted after the camera is replaced. Please refer to the user manual for the correct operation. If the card is still not recognized, the card may be damaged or the camera theory. Contact the supplier to replace the device.
What should I do if I cannot receive the warning message?	Confirm whether the system has turned off the message push permission of WeChat. If it is turned off, please go to the "Message notification" permission of the phone settings and check whether the message push is turned off in the device settings. Contact the supplier to replace the device.