


## E6 Portable Karaoke Microphone Speaker Set User Manual



Enjoy Karaoke Enjoy happy time

### Speaker Function Instructions

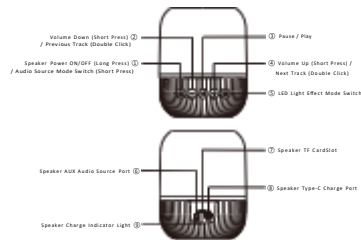

- Speaker Power Button:**  
Long press to power on/off the speaker.  
Short press to switch between modes.  
Double-click to enter/exit TWS (True Wireless Stereo) mode.
- Volume Down Button (-):**  
Short press to decrease the volume.  
Long press to go to the previous track.
- Play/Pause Button (▶/⏸):**  
Short press to play/pause.  
Long press to disconnect Bluetooth from the phone.
- Volume Up Button (+):**  
Short press to increase the volume.  
Long press to go to the next track.


- Light Effect Button (5):**  
Short press to switch between light effect modes.  
Long press to toggle the light on/off.
- AUX Port:**  
Connect external devices using the AUX interface.
- TF Card Slot:**  
Insert a TF card to play audio files.
- Type-C Charging Port (8):**  
Use the Type-C port for charging the speaker.
- Charging Indicator (9):**  
Red light stays on during charging.  
Red light turns off when the battery is fully charged.

### Speaker Basic Functions

Speaker Function	Button Name	Button Operation	Indicator or Prompt Sound
Speaker Power On/Off	① Speaker Power Button	① Speaker Power Button	① Speaker Power Button
Play/Pause	③ Play/Pause Button	Single click	-
Volume Up/Down	④ Volume Up Button (+) / ⑤ Volume Down Button (-)	Single click	At maximum or minimum volume, a prompt indicates that the volume is adjusted to the maximum or minimum.
Fast Volume Increase/Decrease	④ Volume Up Button (+) / ⑤ Volume Down Button (-)	Long press "+" or "-" for 2 seconds	-
Next/Previous Track	④ Volume Up Button (+) / ⑤ Volume Down Button (-)	Quickly press "+" or "-" twice	-
Disconnect Bluetooth	③ Play/Pause Button	Long press for 2 seconds	Bluetooth disconnected, can be used to switch to another device
Switch Source Input Mode	① Power Button	Single click	Bluetooth/AUX/TF Card mode

Light Effect Mode Switch	Light Effect Button	Single click	Colorful light effect / Single-color alternating light effect / Gradient light effect / Colorful breathing light effect / 5 light-color breathing light effect / Adaptive light effect
--------------------------	---------------------	--------------	--

### Microphone Function Instructions

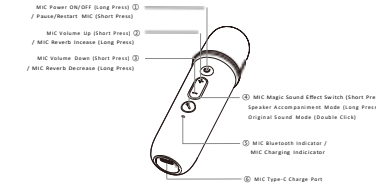

- MIC Power Button:**  
Long press for 2 seconds to power on/off the microphone.  
Short press to mute the microphone.
- Volume Up Button (+):**  
Short press to increase the microphone volume.  
Long press to increase the reverb effect.

- Volume Down Button (-):**  
Short press to decrease the microphone volume.  
Long press to decrease the reverb effect.
- MIC Button:**  
Short press to eliminate the original sound.  
Long press to switch to special vocal effects (Magic Voice).
- MIC Charging Indicator:**  
Red light stays on during charging.  
Red light turns off when the microphone is fully charged.
- MIC Type-C Charging Port:**  
Use the Type-C port for charging the microphone.

### Microphone Basic Functions

Microphone Function	Button Name	Button Operation	Note
MIC Power On/Off, Auto Connect/Disconnect to Speaker	① MIC Power Button	Long press	Microphone connected (Blue light steady/flashing)
Pause/Restart Mic	① MIC Power Button	Single click	Mute/Unmute
Microphone Volume Up/Down	② Volume Up Button (+) / ③ Volume Down Button (-)	Single click	-
Reverb (Echo) Increase/Decrease	② Volume Up Button (+) / ③ Volume Down Button (-)	Long press	Increase/Decrease reverb effect
Original Sound (Human Voice)	④ MIC Button	Double click	-
Vocal Removal (Accompaniment, Eliminate Original Sound)	④ MIC Button	Long press	-
Auto Shutdown	④ MIC Button	Automatically shuts down after 10 minutes of no connection	Microphone off

### Speaker Function Explanation

Function Mode	Operation Instructions
Bluetooth Mode	Bluetooth Connection: By default, the speaker is in Bluetooth mode upon startup. In other modes, short press the "Power Button" to switch to Bluetooth mode. Enable Bluetooth on your phone, scan for "E6," and pair after which a connection prompt will be heard. Playing Music: Open the music player on your phone and play a song. Bluetooth Reconnection: After the initial connection between Bluetooth and the phone, it has a memory function. Upon the second startup, it will automatically reconnect, or manually reconnect through the phone's Bluetooth settings. Bluetooth Disconnection: Disconnect Bluetooth from the phone or long press the play button.
TF Card Mode	Insert a TF card, and in other modes, short press the power button to switch to TF card playback mode.
AUX Mode	Insert a 3.5mm audio cable, and in other modes, short press the power button to switch to AUX mode. Connect the other end of the 3.5mm plug to a computer/MP3 player or phone. In this mode, there is no next/previous track function.
TWS Mode	Turn on two speakers, double-tap the power button on one speaker to enter TWS searching to connect to the other speaker. There will be a prompt sound upon successful connection. After connecting to TWS, open the phone's Bluetooth settings to connect to the speaker for TWS use.
Wireless Microphone	The Bluetooth speaker and microphone will automatically pair and connect upon startup.
Speaker/Microphone Charging	While charging, the red light is on. It will turn off when the battery is fully charged.
Auto Shutdown	In Bluetooth mode, the speaker will automatically shut down if not connected for 10 minutes.
Reset Function	Perform a speaker reset by long-pressing the power button for 8 seconds.

### Microphone Function Explanation

Mode	Button Name	Button Operation	Note
Microphone Disconnection	-	Microphone leaves speaker >10m	Mic disconnected, blue light flashing
Microphone Reconnection	-	Mic returns within <10m	Mic reconnected, blue light steady
Switch to KTV Sound Effect	④ MIC Button	Single click	KTV Sound Effect
Switch to Original Sound Effect	④ MIC Button	Single click	Original Sound Effect
Switch to Monster Sound Effect	④ MIC Button	Single click	Monster Sound Effect
Switch to Kids voice effect	④ MIC Button	Single click	Kids voice effect
Switch to Female Voice Effect	④ MIC Button	Single click	Female Voice Effect
Switch to Male Voice Effect	④ MIC Button	Single click	Male Voice Effect
Switch to Minion Sound Effect	④ MIC Button	Single click	Minion Sound Effect
Switch to Duck Sound Effect	④ MIC Button	Single click	Duck Sound Effect
Switch to Squirrel Sound Effect	④ MIC Button	Single click	Squirrel Sound Effect

### Product Specifications

Parameter	Speaker	Microphone
Bluetooth Version	5.3V	5.3V
Speaker Power	8W	-
Operating Voltage	3.7V	3.7V
Power Adapter	DC 5V/1A	DC 5V/300mA
Battery Life	5H	7H
Charging Time	2.5H	1.5H
Usage Distance	10M	10M

### Package List

- Speaker \*1
- Microphone \*2
- Microphone Windshields \*2
- TF Card \*1
- Portable Pouch \*1
- Type-C Charging Cable \*1
- AUX Audio Cable \*1
- User Manual \*1

### Notes

- Before using this product, please carefully read and save the user manual for future reference.
- Keep away from heat, open flames, and direct sunlight. Avoid inserting sharp objects or metal into the product to prevent short circuits.
  - Do not attempt to repair the product on your own; professional or factory repair is required.
  - Stop using the product if it becomes overheated or damaged, or if it falls into liquid.
  - Charge the product before use, and do not overcharge. Typically, 2-3 hours of charging is sufficient.
  - For long periods of non-use, there may be some battery discharge; charge the product if needed.
  - Children should use the product under adult supervision.
  - Use a standard 5V DC adapter for charging; using other types of adapters may damage the product.
- If you have any questions or feedback, please contact us at [serve@moudou.cc](mailto:serve@moudou.cc).

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.