

说明书
 物料编号：
 材质：128克铜版纸
 尺寸：64x80mm（折叠后）
 要求：四色印刷+风琴折

正面

80.00 mm

Wi-Fi camera

 
Manual

Please read the Manual carefully before using the product and keep it properly.

64.00 mm

Connection Instructions


Connect the power interface and the power socket with the power cord.

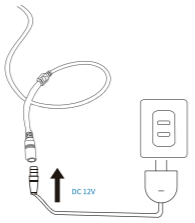

01

Installation guide

 1 Choose a location
 Please install the camera in a location where the field of view is not blocked, and make sure that the location of the camera has a good wifi signal.

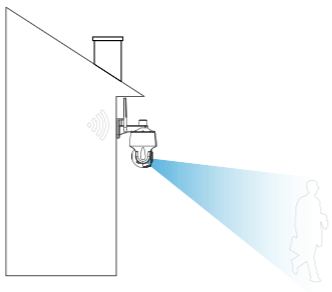

02

Voice broadcast instructions

Device status	Voice broadcast
Normal start	Network connection is successful, please open the APP to add a device
Normal reset	The reset is complete, the device is about to restart
Abnormal reset	Reset failed, please reset after connecting to the Internet or delete the device on the APP
QR code network configuration	Identify broadcast ding-
Alarm broadcast	Alarm sound


Camera reset

- When the camera is powered on, press and hold the reset button for 3-5 seconds until you hear a voice prompt and a prompt sound of "reset is complete, the device will be restarted soon", that is, the reset is successful.

03

Device connection

1 Download the APP
 Scan the QR code below to download and install the APP.

 


2 Register and log in to the APP
 (1) Please register an APP account and log in.
 (2) If you have already registered, please log in directly.

04

Connection method--Bluetooth


- Find the device Bluetooth, and click "Connect."
- Click "+Add," the page jumps to figure 2.
- 2-1. Find the device Bluetooth, and click "Connect."
- 2-2. Find the device Bluetooth, and click "Connect."

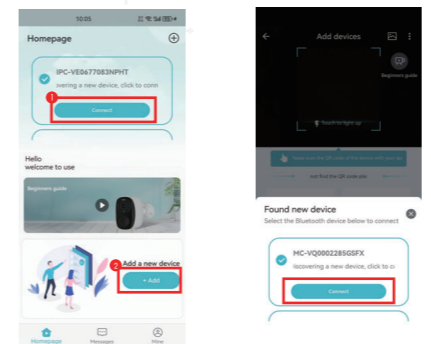

05

Connection method--Scan the QR code

 
- Find the device Bluetooth, and click "Connect."
- Click "+Add," the page jumps to figure 2.
3. Select WiFi, enter the correct password, and click "Next."
4. Waiting for connection.

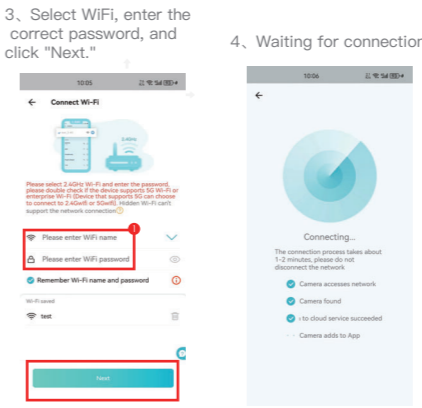

06

Connection method--Scan the QR code

 
- Click "+*" to add device.
- Scan the QR code on the camera label.
3. Upon hearing a sound or seeing the indicator light flashing, check and click "Next."
4. Select WiFi, enter the correct password, and click "Next."

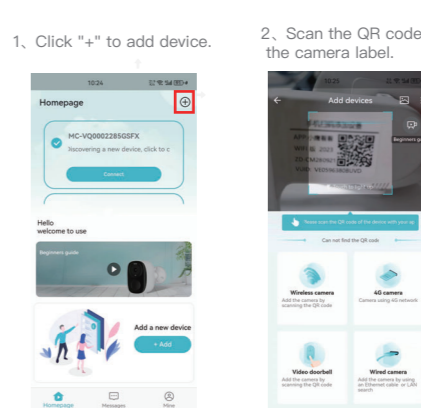

07

Connection method--Scan the QR code

 
3. Upon hearing a sound or seeing the indicator light flashing, check and click "Next."
4. Select WiFi, enter the correct password, and click "Next."

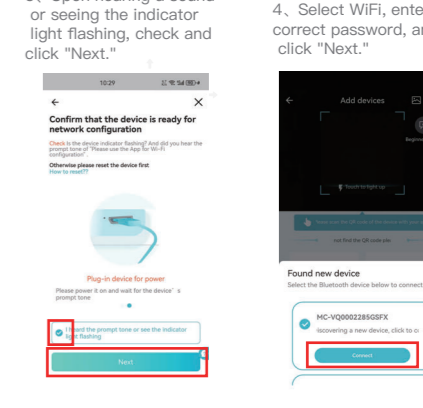

08

 
反面

5. Align the QR code with the camera.



09


6. Click on the input box, customize the device name, and click "Get started."

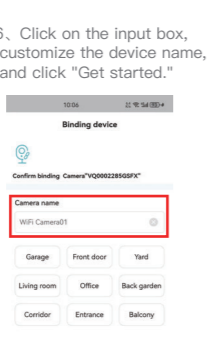

10


Open permission of Device sharing, the person being shared can set the function of the device. If the permission is turned off, you can only watch the video, and cannot set the function.

 Device sharing

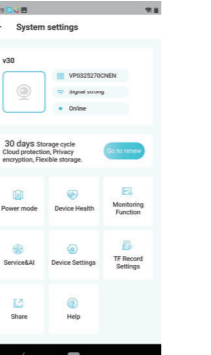


11

Linkage correction



12

 
Function settings



13


Camera linkage

When you click a position on the gun screen, the ball screen will turn to the gun screen. When there is an error in the corresponding position of the screen, using the camera linkage function Correction position

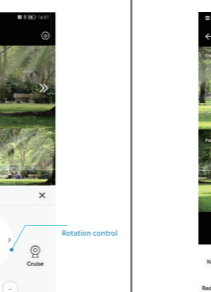

14

Camera linkage



15

FAQ

- How do I invite family and friends to use my camera together?**
 A: Open the APP and select your camera in the home page. Click "Share" in the camera settings to enter the sharing page, and a QR code will be automatically generated. Your friends can open the app and gain some access by scanning the QR code in their phone.
- Why doesn't the Wi-Fi name appear when I connect to Wi-Fi?**
 A: On Apple devices with iOS 13 and above, you need to turn on the "Location Permission" of the app in the system settings and change it to "Allow while in use".
- Will the camera display a red light after turning on the night vision function?**
 A: The built-in IR LED lights, when the night vision is turned on, the camera only displays some faint red lights, but the picture quality is still clear in the dark environment.
- What are the requirements for Wi-Fi?**
 A: Please use 2.4GHz wireless network. The device does not support 5GHz wireless networks. At the same time, please set the Wi-Fi authentication method to WPA2-PSK or other lower-level security methods, and need to set a password.

16

FAQ

- How far should the camera be from the router?**
 A: After testing, the Wi-Fi connection distance can normally reach 150 meters in an open area. But the actual situation depends on the strength of the Wi-Fi and its surroundings (thick walls, electromagnetic devices, large metal objects can all cause interference to the Wi-Fi signal). If the camera connection is weak or unstable, place the camera as close to the router as possible.
- What should I do if the equipment fails?**
 A: Long press the power button to restart the camera. If there is no response, you can open the USB silicone cover at the bottom of the camera, long press the reset button to reset, and then long press the power button to restart the camera.
- Can't add a camera for the first time?**
 A: When adding a camera for the first time, make sure the camera is powered on and the working status light is Blue flashes slowly. Or hear "Please use the App for WiFi configuration" from the camera.
 2) The camera only supports 2.4GHz WiFi and does not support 5G frequency band. Please do not use 5G WiFi to configure the network.
 3) When adding a camera, ensure that the network is smooth, and it is recommended to operate close to the router.
 4) If the QR code network configuration is unsuccessful, try to use the AP network configuration (the mobile phone can be automatically added after connecting to the WiFi hotspot issued by the camera and returning to the App); the password should not be set as complicated as possible, and it does not contain special characters such as "!"
 5) If the two methods are still unable to connect to the Internet, it is recommended to restart the router and try again.
 6) Provide the nameplate label of the router.
- TF card not recognized?**
 A: After inserting the TF card into the TF card slot of the camera, check whether the capacity of the TF card is displayed in the "System Settings" - "TF Card Recording Settings" of the device in the APP. If it prompts "No TF card detected", it means that the TF card recognition failed.
 1) Please use brand TF card.
 2) The TF card can be recognized by the computer normally.
 3) Only FAT32 format is supported.
 4) The recommended TF card capacity is between 2-128G.
 5) It is recommended to use a high-speed TF card of Class 4 and above.
 6) Try to insert and unplug the TF card several times.
 7) It is recommended to try another TF card.
 8) It may take some time for the camera to recognize the TF card. After inserting the card, wait for about 30S before observing.

17

Warranty Card

User name: _____
 Address: _____
 Telephone: _____
 Fax: _____
 Post code: _____
 E-mail: _____
 Product model (Model): _____
 Production Number (S/N): _____
 Production Date: _____
 Purchase Date: _____
 If you have other requirements, please fill in below:

 Dealer: _____ Telephone: _____
 Distribution unit: (seal)

QUALIFIED CERTIFICATE
 QC: PASS

18

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.