

Smart Wireless Doorbell

User Manual



33
Melodies



Memory
function



Learn up to
15 transmitters



volume adjusted
4 levels



Operation Guide



Plug the doorbell receiver into the AC outlet, the receiver rings "Dingdong" once and the LED indicator flash, means that the receiver has entered working mode.



Tear off the back glue of the doorbell transmitter and stick it on the wall. Press and hold for more than 5 seconds to release it.



After confirming that the transmitter is firmly fixed, press the transmitter, the receiver will emit a melody means that the transmitter working normally.

This wireless doorbell has a power outage memory function, power off and restart will remember the ringing sound of a bell for the last time.

Setting and adjustment



Volume adjustment
Press the [Volume] button to adjust volume, 4 levels optional.

Setting

Select Song
Press the [Select Song] button to choose melodies, 33 songs optional.

Add doorbell transmitter



short press the [Setting] button . The doorbell receiver will beep once and release your hand. Press the button on the transmitter, and the receiver will "Dingdong" once, means pair successfully.

Note: The product has been pair before leaving factory, and users do not need to operate the configuration.

Enforce clean



pull the doorbell out from the socket, long press the [Volume] button and plug in the doorbell for 3 seconds. The doorbell receiver will beep once indicate all the transmitter and detectors were deleted successfully.

After restore factory settings, all the accessory without songs. At this time, select the songs you want first. Long press the [Select Song] button for 3 seconds, the doorbell receiver emits a beep to trigger the button to learn. In this way, the accessory has music memory function. All the accessory always maintains the learning songs no matter how the music is switched.



Short press the [Setting] button . The transmitter can switch music at any time. But add the PIR motion sensor to the doorbell receiver is welcome mode, add the door and windows sensor is alarm mode. This is fixed and unchanging.

If you want to learn Multiple doorbell transmitters, continue to trigger other doorbell transmitters, after learning, press the [Volume] key once to exit the learning. After exiting, you can trigger the transmitter you just learned to test whether the learning is correct, learning infrared is the welcome mode, and learning door sensor is the alarm mode.

Technical Parameters



- 1.Working Voltage: AC 100-240V
- 2.Working Current: <100mA
- 3.Wireless Frequency: 433MHz
- 4.Working Temperature: -10°C—50°C
- 5.Wireless Distance: 100meters (Open area)
- 6.Receiver Size: 97*48*17mm (Not include plug)
- 7.Volume Decibels: 20-100db (4 levels adjustable volume)



- 1.Working Voltage: 3V (CR2032 button battery)
- 2.Working Current: 8mA
- 3.Wireless Frequency: 433MHz
- 4.Working Temperature: -10°C—50°C
- 5.Transmitting Distance: 100meters (Open area)
- 6.Transmitter Size: 79*40*11mm

Package List



Doorbell receiver



Transmitter



Adhesive patch



User manual

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.