


 **PRECISIONPRO®**

# TITAN ELITE

SLOPE RANGEFINDER

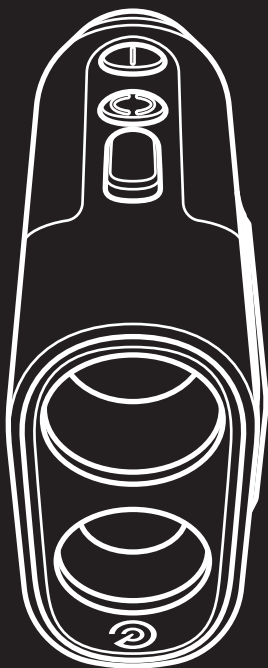

**PRODUCT MANUAL**

TITAN  
ELITE




# TABLE OF CONTENTS

- Product Overview
  - Main Parts
  - LCD
  - Charge Port
  - Yards to Meters
- Bluetooth On/Off Button
  - Turning Bluetooth On and Off
  - Battery Life
- Charging Your Titan Elite
- Using Your Titan Elite
  - Point and Shoot Function
  - Visual Target Lock Function
- Connecting To The App
  - Starting Your Round
- Using The App Connected Features
  - GPS Distances
  - Find My Titan
  - MySlope

# PRODUCT OVERVIEW

## Main Parts

1. Power/Laser Button
2. Screen Switch Button
3. Slope Switch
4. Adjustable Eye Piece
5. Magnetic Grip
6. Charge Port Cover

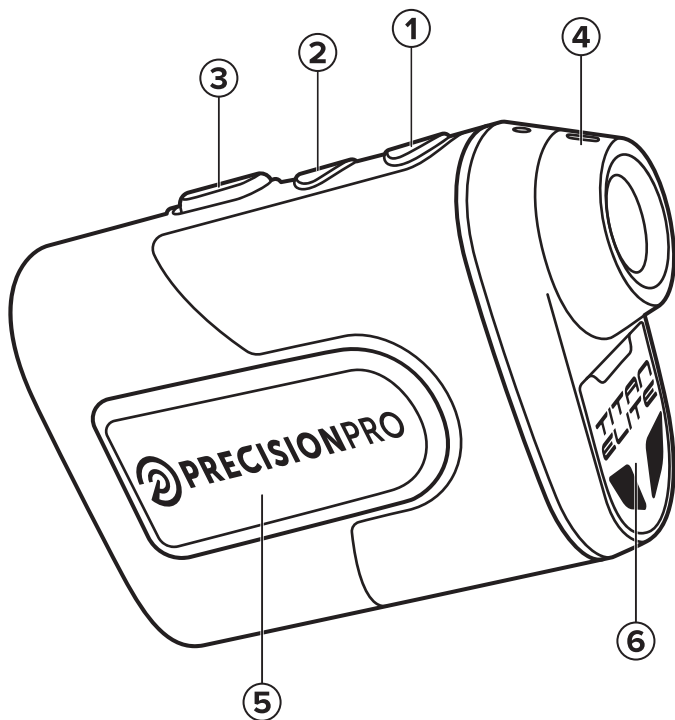


# PRODUCT OVERVIEW

## LCD


### Laser Screen:

1. Aiming Reticle
2. Visual Target Lock Rings
3. Non-Slope Distance
4. Slope Adjusted Distance
5. Yards/Meters Indicator
6. Battery Level Indicator
7. MySlope® Indicator
8. Bluetooth Icon

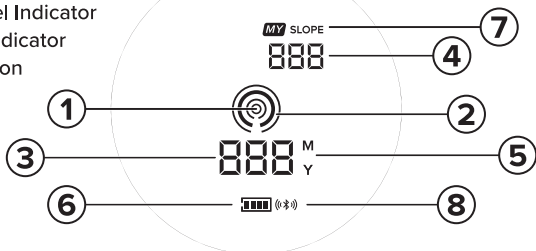

### GPS Screen:


1. Front Distance
2. Center Distance
3. Back Distance
4. Hole Number

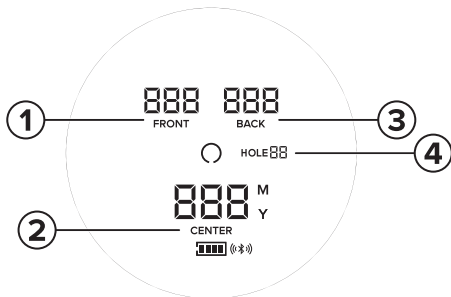

# PRODUCT OVERVIEW

## Charge Port


1. Bluetooth On/Off Button
2. Charge Status Light
3. USB-C Charge Port
4. Serial Number Sticker

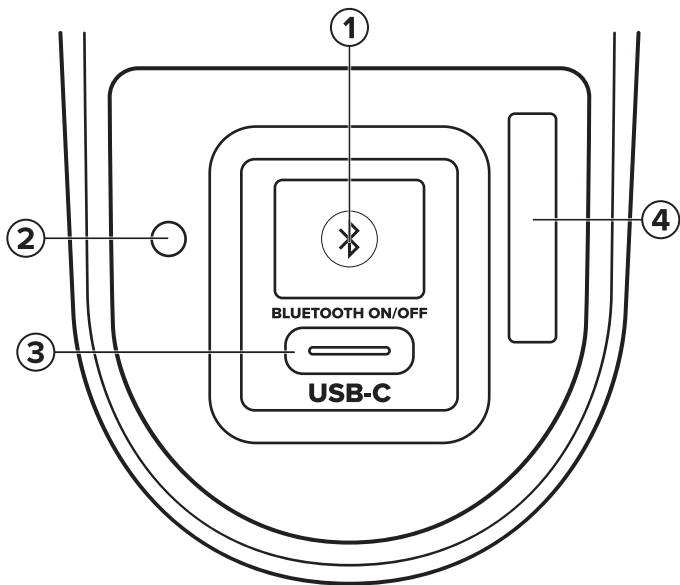


# PRODUCT OVERVIEW

## Changing from Yards to Meters / Meters to Yards

1. Make sure the LCD is off.
2. Hold the Laser Button and Screen Switch Buttons for 5 seconds.

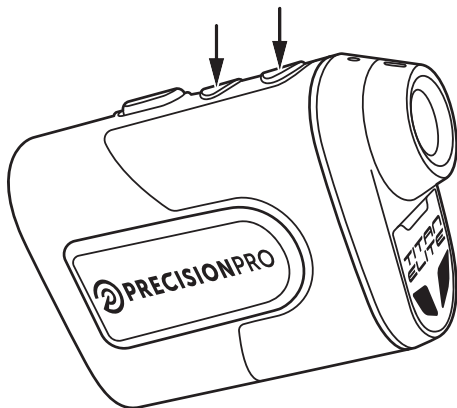


3. You will see the Y change to an M or the M change to a Y.

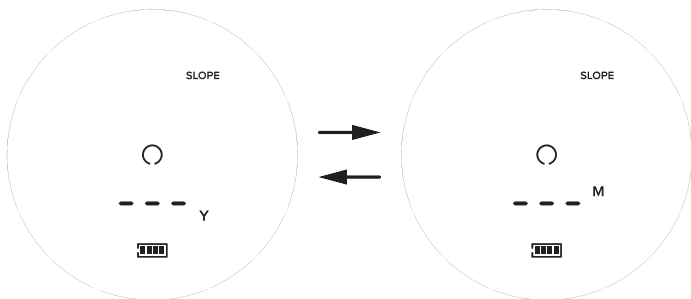

# BLUETOOTH ON/OFF BUTTON

Turning Bluetooth On and Off

Press and release to turn Bluetooth on and off:

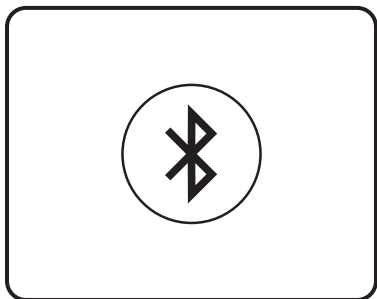

**BLUETOOTH ON/OFF**

Turn on the LCD to confirm if Bluetooth is on or off:



Bluetooth ON



Bluetooth OFF




# **BLUETOOTH ON/OFF BUTTON**

## **Battery Life**

If Bluetooth is turned on, the battery will last for 10+ rounds.

If Bluetooth is turned off, the battery will last for 40+ rounds.

**TITAN  
ELITE**

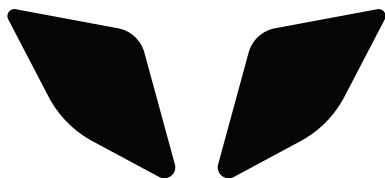


# CHARGING YOUR TITAN ELITE

## USB-C


Charge Status Light:

- Flashing when charging
- Solid when fully charged

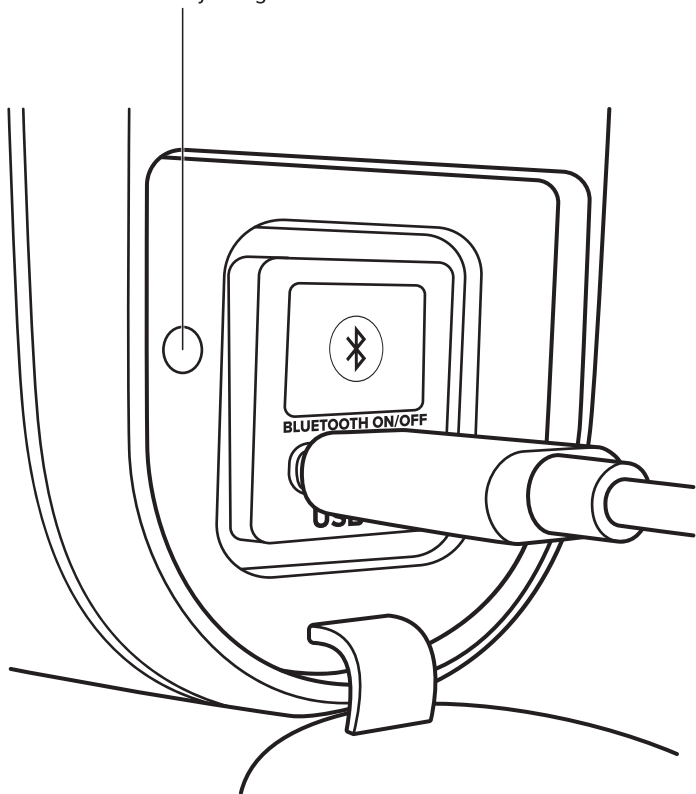


# USING YOUR TITAN ELITE


## Point and Shoot Function

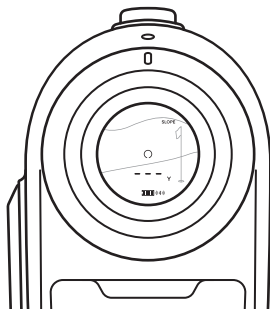

1. Turn LCD On by pressing the Power/Laser Button one time.

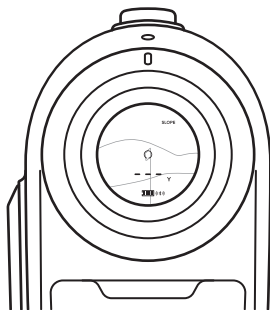

2. Position the Aiming Reticle over your intended target.

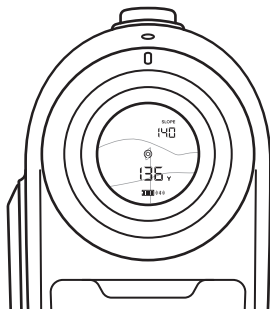


3. Press and release the Laser Button to shoot the distance to your target. The Center Circle will appear, distances will be displayed, and you will receive a pulse vibration, indicating that you have locked onto a target.


You can use this function to shoot the lips of bunkers, edges of water, or trees at the dog leg as well!

# USING YOUR TITAN ELITE


## Visual Target Lock Function

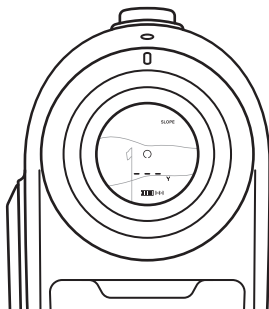

1. When the LCD is on, position the Aiming Reticle to either side of your intended target. In this case, we are aiming for the flag!

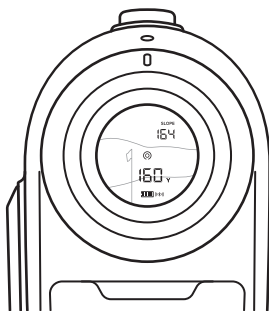

2. Press and hold the Laser Button to receive the distance to the background. During this time, the center circle will flash as the Titan waits for you to move the Aiming Reticle over the flag. Keep holding the Laser Button!

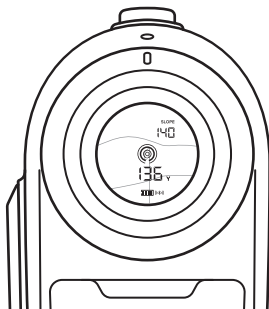

3. As you are holding the Laser Button, move the Aiming Reticle over the flag. The Titan will recognize your target and provide a pulse vibration along with a visual ripple effect around the Aiming Reticle. This indicates that you have successfully locked onto the flag!

# CONNECTING TO THE APP

## Starting Your Round

1. Open the Precision Pro Golf App.
2. Power on your Titan by pressing the Laser Button.
3. Verify Bluetooth is on by locating the Bluetooth Icon in the LCD.
4. Select the Titan in the app and follow the connection steps.

## Starting Your Round

1. Select the course you are about to play.
  - a. This may autofill based on your live location.
  - b. If your course does not autofill, manually type in the course.
2. If the course is not listed or not working properly, submit the course information here:  
<https://precisionprogolf.com/pages/course-mapping-update-request>
3. Our mapping team will get this added to our course data base.

# USING THE APP CONNECTED FEATURES

## GPS Distances

Press the Screen Switch Button to view distances to the Front, Center, and Back of the green of the hole you are currently playing.

Here is an example of what you will see:



Press the Screen Switch or Laser Button to go back to the Laser Screen if you want to shoot another yardage.

# USING THE APP CONNECTED FEATURES

## Find My Titan

You will receive a notification that will let you know that you may have lost your Titan 2 minutes after the connection with your phone is broken.

If you purposely disconnected and still have your Titan, you can clear this notification.

If you lost your Titan, you can open the notification to enter the Find My Titan interface. You can also access this feature by going to the Devices tab, selecting the Titan, and clicking on the “Find My Titan” button.

Your live location is marked by the blue dot. The red dot you see marks the last location that you were in before your Titan disconnected from your phone.

As you move closer to your last connected location and come into connected range, the Titan will automatically reconnect to your phone. If you see that you have reconnected to your Titan but still cannot see it, you can press the “PING TITAN” button in the app, which will make the Titan beep twice to help you locate where it could be.



# USING THE APP CONNECTED FEATURES

## MySlope®

MySlope® provides you with a personalized slope measurement based off of your ball flight data.

You will need your ball speed, launch angle, and spin rate in order to set up MySlope.

Navigate to the “MySlope” tab within the app to learn more about this feature and how to set it up.

# FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

## FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.



**ESCAPE THE ORDINARY**

TITAN  
ELITE





**ESCAPE THE ORDINARY**