

SoundBar Speaker J-RGB49 User Manual



SPECIFICATION

1. Product name: Wireless Speaker
2. Function : BT/TF/USB/AUX-In/FM/RGB
3. Bluetooth version :5.0
4. Rated Power : 5W*2
5. Playing time: 3~4 hours
6. Transmission Distance : 10M
7. Horn size :52mm*2
8. Impedance: 4 ohm
9. Battery capacity :1200mAh
10. Charging time: about 2 hours
11. Charging voltage: 0.5A DC5V/USB POWER
12. Frequency response: 160hz-18khz
13. Material : ABS+Iron net
14. Product size :372(L) * 70(W) * 55(H)mm
15. Weight: 556g
16. Packing list



USER'S MANUAL



AUX Cable




USB Cable

SPEAKER

COMPONENTS & FUNCTION

PLS KINDLY CHECK THE FUNCTION INDICATOR BEFORE USE THE SPEAKER SYSTEM

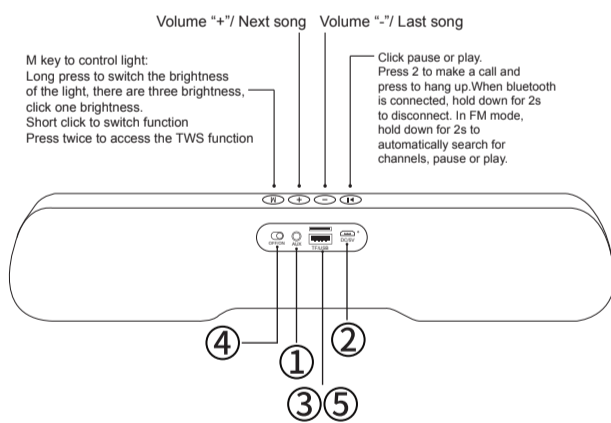

- | | | | |
|---|-----------------|---|-------------|
| 1 | 3.5mm AUX Input | 2 | DC 5V Power |
| 3 | TF Play | 4 | OFF/ON |
| 5 | USB Play | | |

(SoundBar J-RGB49) USER'S MANUAL

I. Bluetooth Mode

1. Bluetooth Version: Bluetooth JL5.0, support HSP, A2DP, AVRCP profiles, with voice prompts. Bluetooth pairing name: J-RGB49.
2. Rotate the volume knob to turn on the speaker, then the blue color indicator light is on with voice prompts.
3. The blue color light will flash by 100ms, and the speaker is on pairing status, use the device to search "J-RGB49", then it will connect and pair automatically. If there is a password needed, it is "0000". After connected successfully, there will be voice prompts. The blue color light will flash by 1000ms when the speaker is in use. Once the device is connected successfully, it will be automatically paired when re-used next time.

II. AUX Mode

1. Connect the device with the 3.5mm aux cable and the speaker will enter into the AUX mode with voice prompts.
2. The blue color indicator light is on in Aux mode.

III. Charging Mode

1. Charge the speaker with the charging cable. (Wall charger is also available as long as it is 5V adapter).
2. The red color indicator light is on when it is on charging mode, and the light is off when fully charged.

IV. Low battery protection

1. When the battery is lower than 3.3v and lasts for 15s, the speaker will issue the warning, and when the battery is lower than 3.1v and lasts for 15s, the speaker will issue the warning and turn off itself.

V. TWS Setting

1. To Begin Pairing, bring two RGB49 speaker in proximity of each other within 1m distance and switch on the Power.
2. Long press the Pause button of one speaker, and a voice prompt will be heard like di di di then release your finger from button waiting two speaker pairing themselves.

VI. Disable TWS setting

1. Switch the mode of one of the speaker to TF or FM by pressing M, then the TWS will get disconnected.
2. If you wish to establish TWS Connection again - switch the mode back to BT mode and it will then connect automatically.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.