

second to display the current battery level information, with four levels: 100% - 70% - 40% - 10% . The corresponding colors of the logo light are

white - green - orange - red.

## 在使用和操作设备前,请阅读并遵守下面的注意事项,以确保设备性能最佳,并避免出 1、请在温度0°C~35℃范围内使用本设备,并在温度-10°C~+40℃范围内存放设 备及其配件。当环境温度过高或过低时,可能会引起设备故障。

2、本设备及其配件可能包含一些小零件,请将设备及其配件放置在儿童接触不到 的地方。儿童可能在无意之中损坏本设备及其配件,或吞下小零件导致窒息或其 3、请避免设备及其配件雨淋或受潮,否则可能导致火灾或触电危险。 4、请将设备及其电池远离火源、高温和太阳直射。禁止电池扔入火中、禁止拆解、 跌落、挤压或改装电池,禁止异物插入、穿刺电池,禁止将电池浸入水或其它液 体中,避免电池遭受外部冲击和压力,引起电池漏液、过热、起火或爆炸。 5、请勿自行更换电池,否则可能会损坏电池,导致电池过热、起火和人身伤害。 6、请勿擅自拆卸、改装设备(含更换内置电池)及配件,否则该设备及配件将不在 7、请按当地规定处理本设备、电池及其它附件,不可将它们作为生活垃圾处理。

若电池处置不当可能会导致电池爆炸。

手柄可以通过有线/蓝牙/接收器连接电脑、安卓电视及安卓电视盒,畅玩平台上面 、有线模式支持Xinput和Dinput,自动识别PC和安卓平台; Z、监对模式以另外问题的问题は、 3、连接Dongle接收器使用,默认Xinput模式;长按Select+Start键5秒后松手释放,LOGO灯光变冰粉灯切换为Dinput模式;

## 二、基本功能 、手柄蓝牙模式连接PC电脑/安卓设备: ①配对:关机状态下,长按X+Home 3秒,冰蓝色灯快闪;

2、手柄震动一下,logo键紫色灯常亮,Switch识别即为连接成功。

连接到Switch时不支持截图、录像、陀螺仪与NFC识别。

、手柄连接Dongle接收器

①配对:关机状态下,长按Y+Home 3秒,蓝灯快闪;

①短按HOME键进入回连状态(关机前的模式);

过的模式可以直接连接成功,不需要重新配对;

未充满电时,冰粉灯呼吸指示,充满恢复常亮);

把Dongle连接PC电脑/安卓设备识别后,按一次Dongle配对键,

③手柄连接成功,冰蓝色灯常亮(切换到Dinput模式,冰粉灯常亮)

④后续回连轻点Home即可自动连接,如需重新配对接收器,需手柄

动0.5秒提示。手柄如需切换到Dinput模式,长按手柄SELECT-

Y+Home 3秒使得配对灯快闪,同时按下接收器配对键进入重新对码方

## 2短按A/X/Y+Home键开机,进入对应模式的回连状态,配对成功 手柄通过USB线连接到PC电脑/安卓设备,手柄连接成功,冰蓝色灯常 亮(当电池未充满电时,冰蓝色灯呼吸指示,充满恢复常亮),马达震 START键5秒切换到Dinput模式,切换成功,手柄冰粉灯常亮(当电池 手柄支持有线连接到Switch(此连接方式需要连接到Switch主机底座或 1、将手柄开机,使用附赠线材,一端接入Switch主机,另一端接入手

三、按键组按键布局

### 注:连接到Switch时,ABXY的键值自动映射为Switch默认位置布局。 游戏功能键 13个: A/B/X/Y/LB/RB/LT/RT/SELECT/START/LS/RS/HOME (LS/RS是左右握杆下压键,LT/RT为霍尔线性扳机,其余为数字按键) 产品功能键 1个: TURBO (连发) 震动马达 2个(独立控制) 1、装箱清单

#### 七、Shift功能(左摇杆与十字键功能切换) 同时按下Turbo键+Select键+LS键开关shift功能,切换成功紫色灯闪烁 3次,马达震动0.5秒提示,提示后恢复模式灯常亮。关机会记忆最后一 **\、摇杆无死区模式** 手柄首次开机默认中心点死区为5%。 上次设置的死区模式。 九、摇杆输出轨迹切换

五、TURBO功能设置

六、马达功能

#### ④充电时手柄是待机状态。 同时按下TURBO+LS/RS 2秒,可分别打开或关闭左/右无死区模式,打 开或关闭成功,马达震动0.5s提示;关机会记忆,重新连接设备会默认 首次开机默认输出轨迹为左摇杆xbox微菱形,右摇杆为纯圆。同时按下 xbox菱形输出轨迹二者切换,每次调整成功后马达震动0.5s的提示。 掉电有记忆,上电连接默认上次设置输出的轨迹。

连发功能设置可进行:手动连发→自动连发→取消连发,循环切换。

例如,按住Turbo加相应的功能键,相应功能键实现手动连发,再次按

总共有三档调节,12次/秒,30次/秒,50次/秒。档位设置成功,有灯光

总共有四档调节,0-30%-70%-100%,设置成功当前档位强度震动提

闪烁和马达震动强弱提示,Turbo速度越快,灯闪越快,马达震动越强。 十二、关机

压相同组合, 相应功能键实现自动连发功能, 再次按压相同组合, 相应

①Xinput模式下,可设置A,B,X,Y,LT,RT,LB,RB,十字方向键

②Dinput模式下,可设置A,B,X,Y,LT,RT,LB,RB,十字方向键

①Turbo+右摇杆上,Turbo速度加快一级; ②Turbo+右摇杆下,Turbo速度减慢一级;

Turbo速度档位关机记录, 出厂默认12次/秒

Turbo+左摇杆上,马达震动强度加强一级; Turbo+左摇杆下,马达震动强度减弱一级;

示1秒,关机记录档位,出厂默认100%强度。

③有Turbo功能触发时,LOGO模式灯闪烁提示

④高档12Hz闪烁,中档6Hz闪烁,低档3Hz闪烁。

该手柄带马达功能,使用压敏马达,可调节马达震动强度

# 十四、复位功能 SELECT+START+LS/RS 2秒,可分别将左/右摇杆的输出曲线在纯圆/

十、SELECT和START氛围灯

提示,无线模式关机)

连状态60秒内连接不成功关机。

⑥长按HOME键5秒关机;

板无任何按键/摇杆动作, 手板自动关机。

手柄在充电状态下,拔掉充电线,手柄自动关机

Turbo键加左摇杆往左1秒,震动并关闭氛围灯

Turbo键加左摇杆往右1秒,震动并开启氛围灯

十一、恢复默认设置功能(操作成功: 有线模式马达震动

长按LS+RS 键5秒,马达震动强度恢复为100%,摇杆恢复为有死区模式,

 
TURBO速度为12次/秒,Shift功能恢复正常手柄状态,氛围灯打开状态,

清除蓝牙配对信息(不清除接收器连接信息,开机默认进入回连接收器

①手柄关机状态下,短按home进入回连状态(休眠前模式),配对/回

②手柄不同模式连接成功马达震动0.5s提示,无线连接状态下5分钟手

④手柄在连接状态下,电池电压低于3.35V(误差+-0.05V),手柄自



#### 静态电流 电池电量 充电电压 $350 \pm 50 \text{mA}$ 充电时间 (理论 ≤2小时 理论使用距离 ≥9小时 理论无线续航时间 回报率

本说明书取代以前提供的所有信息。

些依法不能通过合同或其他方式排除或限制的责任。

10.0全球联保服务

11.0—般条款

用于您产品的全球联保服务政策。

12.0产品保修信息: 服务支持信息

雷神网站: www.thunderobot.com

妥善保留上述信息备用。

内容均不影响根据法律规定的不能通过合同放弃或限制的消费者法定权利。

本文件项下的保修服务仅适用于在中国大陆司法管辖区境内(不包括香港、

法定保修范围之外的保修及法律允许另行规定的内容,按本文件执行。

量保证。本文件所提及的时限,按法律有关时限的规定解释。

雷神网站服务支持页面,查阅相关产品的具体《产品保修信息》。

十三、低电压提示/低电压关机/充电器充电		特别说明	
①手柄在连接状态下,手柄电池电压低于3.5V(误差+-0.05V)时,手	十七、摇杆&扳机校准	● 本说明书提供的所有信息均准确和可靠,公司不承担任何违规操作和	
柄自动低压提示,红色灯慢闪。 ②手柄在连接状态下,手柄电池电压低于3.35V(误差+-0.05V)时,	每次手柄升级时,或是手柄出现摇杆轨迹错误或者扳机数值错误时,建 议使用该矫准操作。	使用所造成的后果。 <ul><li>● 因官方系统、游戏、游戏平台升级或变更等不可抗拒的因素造成部分</li></ul>	
手柄自动关机。 ③关机状态下充电器充电,红灯呼吸指示,充满熄灭。	①进入:关机状态下,按START+TURBO+HOME,指示灯冰蓝灯和 红灯交替闪烁:	游戏或无法连接操作,公司协助解决异常问题。对此公司保留最终解	
③充电保护:电池在温度高于45℃或者低于-10℃时,停止充电。 ④充电时手柄是待机状态。	②校准:R-3D,L-3D缓慢摇动2圈,扳机缓慢按压2次; ③退出:按SELECT直接退出:	释权。 ● 本说明书中提到的规格如有更改,书面作出说明。	

十六、手柄通道灯指示汇总

人、电 <u>量</u> 查询功能
开机状态下,同时长按Turbo+start键1秒,显示当前电池电量信息, 档位100%~70%~40%~10%,LOGO灯颜色对应为冰粉−绿色 色−红色。

④手柄正常关机后,校准的数据会保存在FLASH中:

#### SECURITY INFORMATION 十九、产品参数 BEFORE USING AND OPERATING THE EQUIPMENT, PLEASE READ AND 工作电压 FOLLOW THE PRECAUTION BELOW TO ENSURE THAT THE EQUIPMENT IS 工作电流 ≤60mA PERFORMING BEST AND TO AVOID DANGEROUS OR ILLEGAL SITUATIONS. ≤30mA 1. Please use this device within a temperature range of 0°C to 35°C and store the device and its accessories within a temperature range of -10 $^{\circ}\text{C}$ to +40 $^{\circ}\text{C}$ . Extreme high or low temperatures may cause device malfunctions. 2. This device and its accessories may contain small parts, please keep them out

		of reach of children. Children may unintentionally damage the device and its	
充电时间 (理论)	≤2小时	accessories, or swallow small parts leading to choking or other dangers.	
理论使用距离	10m	3. Please avoid exposing the device and its accessories to rain or moisture, as it	
理论无线续航时间	≥9/\\\	may cause fire or electric shock hazards.	
	13 1 3 13	4. Please keep the device and its batteries away from heat sources, high	
回报率	有线——500Hz、 蓝牙/2.4G——160Hz	temperatures, and direct sunlight. Prohibit throwing the batteries into fire,	
		dismantling, dropping, squeezing, or modifying the batteries, prohibiting foreign	
明		objects from being inserted or puncturing the batteries, and prohibit immersing	
		the batteries in water or other liquids, to avoid external impact and pressure on	
		the batteries, in order to prevent battery leakage, overheating, fire, or explosion.	
		6. Do not dismantle or modify the device (including replacing the built-in battery)	
书提供的所有信息均准确和可靠,公司不承担任何违规操作和		and accessories without authorization, otherwise, the device and accessories	

will not be covered by our company's warranty. 7. Please dispose of this device, batteries, and other accessories according to 法连接操作,公司协助解决异常问题。对此公司保留最终解 local regulations. Do not treat them as household waste. Improper battery disposal may lead to battery explosion.

#### Xinput Mode Pairing: ◆ Pairing: In the power-off state, press and hold X + Home for 3 seconds, and he light will flash quickly in ice blue. Open the Bluetooth interface a device named "Xbox Wireless Controller". Click to connect. The gamepad is successfully connected when the light is constantly on in ic blue, and the motor will vibrate for 0.5 seconds as a prompt.

◆ Pairing: In the power-off state, press and hold A + Home for 3 seconds, and the light will flash quickly in white.

Open the Bluetooth interface of your comp a device named "THUNDEROBOT G30S". Click to connect.

The gamepad is successfully connected when the light is constantly on in white, and the motor will vibrate for 0.5 seconds as a prompt. Pairing: In the power-off state, press and hold Y + Home for 3 seconds, and the blue light will flash quickly.

After the Dongle is recognized by the PC/Android device, press the Dongle pairing button once, and the indicator light will flash quickly.

The gamepad is successfully connected when the light is constantly on in ice blue (switch to Dinput mode, white light is constantly on), and the motor will vibrate for 0.5 seconds as a prompt.

For subsequent reconnection, simply tap the Home button to automatically connect. If you need to re-pair the receiver, press and hold Y + Home on the gamepad for five seconds to make the pairing light flash quickly, and Iltaneously press the receiver pairing button to re-establish the conne Wireless Mode Switching:

◆ Short press the HOME button to enter the reconnection state;

I. Product Overview

II. Basic Functions

2) Bluetooth mode supports Xinput/Dinput;

ne gamepad can be connected to a computer. Android TV, and Android TV

Wired mode supports Xinput and Dinput and automatically recognizes PC an

3) When connected to the Dongle receiver, it defaults to Xinput mode. Press and hold the Select + Start buttons for 5 seconds and release to switch to Dinput mode.

1) Gamepad Bluetooth Mode Connection to PC/Android Devices:

d/bluetooth/receiver, allowing you to play games on various platforms.

be connected directly without re-pairing. 3) Wired Mode: Connect the gamepad to a PC/Android device via a USB cable. The gamepad is successfully connected when the light is constantly on in ice blue (when th is not fully charged, the light will indicate breathing, and it will return to constant on when fully charged). o switch to Dinput mode, press and hold the SELECT + START buttons for 5  $\,$ seconds. The gamepad is successfully switched to Dinput mode when the ligh constantly on in white (when the battery is not fully charged, the light will indicat breathing, and it will return to constant on when fully charged).

of the corresponding mode. If the mode has been successfully paired before, it can

## III. Layout

GAMING
FUNCTION 13: A/B/X/Y/LB/RB/LT/RT/SELECT/START/Ls/Rs/HOME

VIBRA MOTOR 2: (Independent control)

◆ Gamepad \*1;

1m USB-C data cable \*1;

◆ 2.4G Dongle receiver \*1;

IV. Packaging and Accessories

◆ User manual / Warranty card / Certificate of compliance \*1

V. Turbo Function Setting automatic continuous shooting → cancel continuous shooting, and cycle through For example, by holding down the Turbo button and the corresponding function button, the corresponding function button will perform manual continuous shooting. Pressing the same combination again will activate automatic continuous shooting, and pressing the same combination again will cancel continuous shooting.

In Xinput mode, the following buttons can be set: A, B, X, Y, LT, RT, LB, RB, D-pad. In Dinput mode, the following buttons can be set: A, B, X, Y, LT, RT, LB, RB, D-pad. **Turbo Speed Adjustment:** Turbo + Right Joystick Up: Increase the Turbo speed by one level. oo + Right Joystick Down: Decrease the Turbo speed by one level. There are three levels of adjustment: 12 times/second, 30 times/second, and 50 times/second. When the Turbo speed level is set successfully, there will be blinking

XII. Power Off the blinking lights and the stronger the motor vibration. The default Turbo speed is When Turbo functionality is triggered, the logo mode light will blink. High speed blinks at 12Hz, medium speed at 6Hz, and low speed at 3Hz. VI. Motor Function

zone mode will be applied when reconnecting the device.

be applied when reconnecting the device.

IX. Joystick Output Curve Switching

ight joystick is pure circle. Press and hold SELECT + START + Ls/Rs simultaneously for 2 seconds to switch

Each successful adjustment will be indicated by a 0.5-second vibration.

The setting will be remembered after power-off, and the last set output curve will

econds, the gamepad will power off. If the gamepad is in wireless connection mode and there is no button/joystick ction for 5 minutes, the gamepad will automatically power off. ) If the gamepad is in charging state, unplugging the charging cable will cause the amepad to power off. This gamepad is equipped with a motor function and uses pressure-sensitive motors, allowing you to adjust the motor vibration intensity. If the gamepad is in connection state and the battery voltage is lower than 3.35V 5V), the gamepad will automatically power off. urbo + Left Joystick Up: Increase the motor vibration intensity by one level. Turbo + Left Joystick Down: Decrease the motor vibration intensity by one leve There are four levels of adjustment: 0-30%-70%-100%. When the current levels of adjustment: 0-30%-70%-100%. set successfully, there will be a 1-second vibration to indicate the intensity leve The default intensity setting is 100%.

ess and hold the HOME button for 5 seconds to power off. XIII. Low Voltage Warning/Shutdown/Charging VII. Shift Function (Switching between Left Joystick and D-pad Functions) Press and hold the Turbo button + Select button + Ls button to switch the shift function. The successful switch will be indicated by the purple light blinking three times and a 0.5-second vibration. After the prompt, the mode light will return to

±0.05V), the gamepad will automatically display a low voltage warning with a If the gamepad is in connection state and the battery voltage is lower than (±0.05V), the gamepad will automatically power off. 3) When the gamepad is in power-off state, the red light will indicate breathing during charging and will turn off when fully charged. constant on. The last setting will be remembered after power-off. Charging protection: Charging will stop when the battery temperature is abov VIII. Joystick Dead Zone Mode 45°C or below -10°C.
5) The gamepad is in standby mode during charging. ress and hold TURBO + Ls/Rs for 2 seconds to turn on or off the dead zone m

XIV. Reset Function for the left/right joystick. A successful switch will be indicated by a 0.5-second vibration. The setting will be remembered after power-off, and the last set dead When the gamepad encounters an abnormality, you can press the RESET button on the back of the gamepad to perform a reset. XV. Firmware Upgrade The default output curve for the left joystick is Xbox micro-diamond, and for the

X. SELECT and START Ambient Light

he setting will be remembered after power-off.

XI. Restore Default Settings

wireless mode power-off):

Turbo + Left Joystick Left for 1 second: Vibrate and turn off the ambient light

Shift function to the normal gamepad state. The ambient light will be turned on

Bluetooth pairing information will be cleared (receiver connection information will not be cleared, and the default mode after power-on will be reconnection to the

receiver). (Successful operation: Wired mode with motor vibration prompt,

1) In game pad power-off state, short press the HOME button to enter the reconnection state (mode before sleep). If not successfully connected within 60

The gamepad comes with the best settings from the factory. If there are any functional/performance updates in the future, you can use the firmware upgrade functional/performance updates in the ruture, you can use the infinivare upgraue program on your computer to upgrade the gamepad. The upgrade steps are as follows:

Connect the gamepad to the computer via USB, open the official Thunderobot firmware upgrade program, and press and hold the HOME + X + Y buttons for 5 seconds to enter upgrade mode. Follow the firmware prompts to complete the upgrade. This process does not connect to the internet or collect any data.

当手柄出现异常时,可通过按压手柄后面的RESET复位键进行复位。 ②打开电脑/安卓设备的蓝牙界面,搜索到蓝牙名为:【Xbox Wireless Controller】的设备,点击连接; ③手柄连接成功,冰蓝色灯常亮,马达震动0.5秒提示; 十五、关于升级 ①手柄出厂即为调教最佳状态。若后续出现功能/性能更新,可使用电脑 Dinput模式配对操作: 的固件升级程序升级手柄,升级步骤如下: ②手柄USB连接电脑,打开雷神官方提供的升级固件,长按HOME+X+ 一橙色 ①配对:关机状态下,长按A+Home 3秒,冰粉灯快闪; 【扫码回复:G30S,获取无线连接操作详解及全套视频教程】 2打开电脑/安卓设备的蓝牙界面,搜索到蓝牙名为。 Y键5秒进入升级模式。按照固件提示引导完成升级即可。该过程不会联 、手柄\*1; 2、1.5 m USB-C数据线\*1; 3、2.4G Dongle接收器\*1; 、说明书/保修卡/合格证\*1; 【THUNDEROBOT G30S】的设备,点击连接; ③手柄连接成功,冰粉灯常亮,马达震动0.5秒提示; FCC Statement XVI. Gamepad Channel Light Indicators Product Specifications 《废弃电器电子产品回收处理管理条例》 雷神产品标准保修承诺 This equipment has been tested and found to comply with the limits 雷神游戏手柄保修条款 Operating Voltage for a ClassB digital device, pursuant to part 15 of the FCC rules. ≤60mA These limits are designed to provide reasonable protection against Operating Current 雷神倡导环保和低碳的消费体验,建议拥有该产品的 本文件的任何内容均不影响消费者不能通过合同排除或限制的法定权利。如 电话或其他远程帮助方式来诊断和解决您的产品故障。如有些问题可通过您 产品实际支付价款的金额;②任何有关获得替代货物、技术、服务或权利的 harmful interference in a residential installation. This equipment 产品质量实行"三包"服务,产品质保期以购机日起保修1年。在质保 Standby Current ≤30mA generates, uses and can radiate radio frequency energy and, if not 用户在不需要此产品时,应遵守国家废弃电器电子产品 相关法律对本文件规定事项另有要求,在法律规定的范围内,按法律规定执 自己安装指定的软件更新或替换件方式解决,则我们会指导您获得和安装此 成本和费用;③数据损坏或丢失;④使用中断或延迟导致的损失。此责任限 期内,如因产品本身质量问题我公司提供免费维修、更换和退货服务。 istalled and used in accordance with the instructions, may cause 行。本文件中所称的"我们"是指雷神、产品销售商及服务提供商。 类软件更新或替换件。如上述方式不适用或无法解决问题,我们会按产品享制同样适用于产品销售商和服务商。这是雷神及产品销售商和服务商共同承 **Battery Capacity** 回收处理相关法律法规,将其交给当地具有国家认可的 销售人员承诺的产品之外的服务及附加的配置、赠品,不在本保修 harmful interference to radio communications. 有的保修服务类型安排服务。如服务商确认产品故障无法通过修理解决,您担的最高赔偿限额。以上责任限制仅在法律允许的范围内适用,不适用于那 服务范围内。 DC 5V Charging Voltage 回收处理资质的厂商进行回收处理,降低资源浪费,保 我们保证,在正常使用条件下,您购买的产品在保修期内将不会发生因不符 可凭服务商的维修记录要求更换。如产品既不能修复也无法更换,您可要求 However, there is no guarantee that interference will not occur in a 合质量要求导致的性能故障。本文件项下的保证是我们就产品作出的全部保 退货。为缩短服务周期,我们对某些故障产品可直接更换,不超过两次的此 **9.0其他权利** 350±50mA 护地球自然环境。 Charging Current particular installation. If this equipment does cause harmful 免责范围在质保期内,下列人为和不可抗力因素导致的产品故障不属于 证,将取代所有其他明示或默示的保证或条件,包括但不限于默示的关于适 类更换应视为修理。 terference to radio or television reception, which can be Charging Time (approx.) 免费维修、更换和退货服务范围。 determined by turning the equipment off and on, the user is 销性和适用于某些特定用途的保证或条件。上述保证仅适用于用户为自己使 5.0更换和退货 不能出示产品有效质保凭证,或产品原序列号标签有涂改、替换、撕毁 用目的而购买的出厂配置的雷神品牌产品。 Operating Distance (approx.) encouraged to try to correct the interference by one or more of the 除非另有规定,产品更换或退货由产品销售商负责。只有未经更改的产品方 following measures: -Reorient or relocate the receiving antenna. 现象,或产品没有序列号或质保凭证上的型号或编码与产品实物不相符 可更换或退货。购买日后十五(15)天内更换或退货的,产品随附物品及包 Wireless Battery Life (approx.) ≥9 hrs -Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from 自产品出厂日起算。发票日期晚于产品实际交付日的,保修期自实际交付日将成为您的财产。替换产品或部件可能不是新的,但将具有良好的性能,并 产品超出雷神公司规定的质保期限; Polling Rate BT/2.4G---160Hz that to which the receiver is connected. -Consult the dealer or an 未依据产品使用说明书或未依据说明书所指示的电脑工作环境使用、维 起算。但无论如何,产品保修期的起算日最迟不应晚于规定的宽限期届满日 至少在功能上与原产品或部件等同。 experienced radio/TV technician for help. To assure continued 护、保管所导致的故障或损坏: (见产品保修信息)。产品或部件经修理或更换后,在剩余保修期内继续享 在更换或退货前,您应:①卸下所有不属保修范围的物料;②确保产品或部 compliance, any changes or modifications not expressly approved 非雷神公司授权的维修人员对产品修理、更改或拆卸而造成的故障或损 有保修,剩余保修期不足三(3)个月的按三(3)个月计算,但保修期在一 件不受任何妨碍其更换或退货的法律义务或限制的制约;并且③如产品非您 (1)年以下的产品和/或部件,剩余保修期不足三十(30)天的按三十(30) 所有,您应向所有者取得允许我们为产品提供服务的授权。 ♦ All information provided in this manual is accurate and reliable, and the Responsible for compliance could void the user's authority to 意外事故或其他不可抗拒力造成的损坏。 6.0不保证的范围 npany assumes no responsibility for any consequences resulting from operate this equipment. (Example- use only shielded interface improper operation and use. 本文件项下的保证不适用于下列情况: ①因误用、意外、改装、不适当的物 cables when connecting to computer or peripheral devices). XVII. Joystick & Trigger Calibration This equipment complies with Part 15 of the FCC Rules. Operation is 理或操作环境、自然灾害、电涌及不当维护或保管导致的故障或损坏;②第 ◆ Due to uncontrollable factors such as official system upgrades, game changes, or game platform updates, some games may be partially unavailable or unable to connect. The company will assist in resolving any abnormal issues. subject to the following two conditions: Whenever the controller is upgraded, or when the joystick track or trigger values 三方产品、服务或行为导致的故障或损坏:③使用非指定软件造成的故障或 附录 1 产品性能故障表 are incorrect, it is recommended to use this calibration operation.

1) Enter: In the power-off state, press START + TURBO + HOME, and the indicator (1) This device may not cause harmful interference, and 损坏; ④产品使用过程中发生的脱色、磨损和消耗; ⑤产品可以不间断或无 The company reserves the right to make the final interpretation. (2) This device must accept any interference received, including 性能故障描述 错误地运行;⑥数据丢失或损坏。如产品或部件的原有识别标签被更改或去 light will flash alternately between ice blue and red. lack lack If there are any changes to the specifications mentioned in this manual, interference that may cause undesired operation. 2) Calibration: Slowly move R-3D and L-3D for 2 turns, and press the trigger slowly 除,本文件项下的保证将失效。产品及随附物料的齐备和外观完好不属保证 they will be documented in writing. ◆ This manual supersedes all previously provided information. 按键无法正常使用 范围,您应在接收产品时当场检验并对任何不符提出异议。 FCC Radiation Exposure Statement Exit: Press SELECT to exit directly. 4) After the controller is shut down normally, the calibrated data will be saved. 7.0使用个人信息 This equipment complies with FCC's RF radiation exposure limits 我们可能会保存、使用并处理您提供的保修问题和联系信息,包括姓名、电 set forth for an uncontrolled environment. This device and its 话号码、地址和电子邮件地址,仅用于提供规定的服务,我们可能会与您联 antenna(s) must not be co-located or conjunction with any other XVIII. Battery Level Inquiry Function 生修情况 エデ antenna or transmitter.

