



OASIS
MINI

Pause. Relax. Re-center

KINETIC SAND ART

U S E R M A N U A L

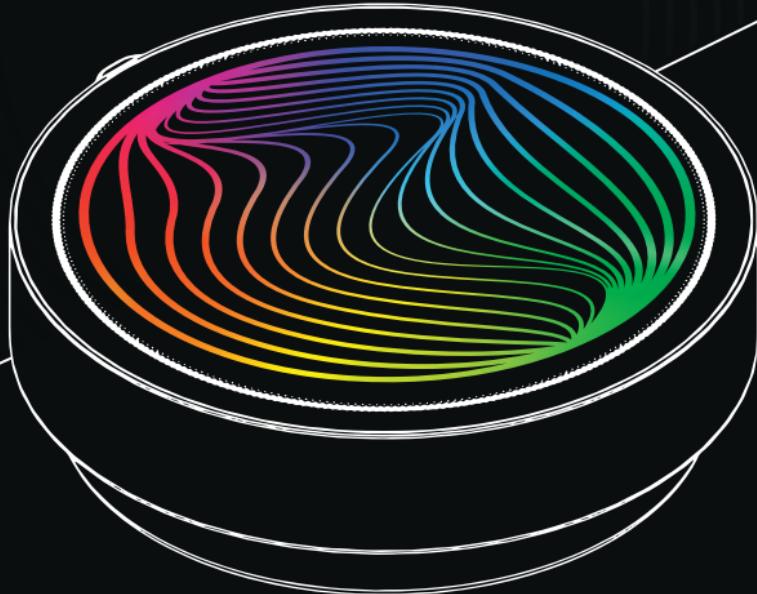


TABLE OF CONTENTS



	PAGE
1. INTRODUCTION	2
1.1 Product Overview	2
1.2 Key Features and Benefits	3
1.3 Safety Precautions	3
2. PACKAGE CONTENTS	4
3. GETTING STARTED	5
4. OPERATING INSTRUCTIONS	7
5. TROUBLESHOOTING TIPS	8
6. SAFETY GUIDELINES	9
7. WARRANTY INFORMATION	10
8. DIMENSIONS	11
9. NOTE	11
10. CAUTION	12
11. FCC & IC RADIATION EXPOSURE STATEMENT	12



Welcome to Oasis Mini, your portal to tranquility and creativity through mesmerizing kinetic sand art.

1.1 PRODUCT OVERVIEW

The Oasis Mini is an innovative kinetic canvas that combines art, technology, and relaxation into one compact, captivating experience. It uses a mobile app to allow users to create, share, and enjoy a myriad of serene sand patterns, all designed to offer a unique moment of calm in any setting.

1.2 KEY FEATURES AND BENEFITS

CALMING KINETIC ART:

The Oasis Mini provides a calming, mesmerizing experience as a small ball rolls silently through sand, carving intricate patterns.

APP-CONTROLLED CUSTOMIZATION

With a free mobile app available for both iOS and Android, users can choose from hundreds of patterns, adjust the lights, create playlists, and even upload their own designs for a personalized experience.

COMPACT AND QUIET DESIGN

Designed with a diameter of 9 inches and a height of 3 inches, the Oasis Mini fits neatly on most surfaces. Its operation is whisper quiet, ensuring it provides a soothing presence without disturbing the peace.

LIGHTING EFFECTS

With over 100 light modes, Oasis Mini can transform the mood of any room making it not only a source of relaxation but also a dynamic piece of decor that can match any atmosphere.

EASY TO SET UP AND USE

The process of setting up Oasis Mini is straightforward—simply add sand, smooth it out, and place the ball. Its user-friendly design ensures that anyone can begin enjoying the calming effects of kinetic sand art right away.

1.3 SAFETY PRECAUTIONS



Small Parts.
Not for children
under 3 years



Keep away from
water to prevent
damage.



Avoid placing heavy
objects on the
Oasis Mini.



Use only the provided
USB C cable and
power adapter.

2. PACKAGE CONTENTS



VISUAL REPRESENTATION OF INCLUDED ITEMS



OASIS MINI




SAND PACKET



METAL BALL



SAND RAKE CARD

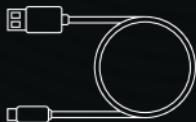

USB C CABLE



USB POWER ADAPTER

SETTING UP THE OASIS MINI



CONNECT THE USB C

Cable to the Oasis Mini, and plug the other end into the power adapter.



REMOVE THE GLASS COVER

Use the included sand smoothing card to remove the glass cover.

(The notch is a small rectangular cutout towards the rear of Oasis Mini. Insert the card between the notch and glass.)



ADD SAND

Tear open the sand packet and pour all of it into the center of Oasis Mini. Only use one packet at a time.



SMOOTH IT OUT

Use the card to smooth out the sand as evenly as you can



PLACE METAL BALL

Place the metal ball in the middle of Oasis Mini

OASIS CONTROL (APP)



SCAN TO
DOWNLOAD APP

available in the App Store
and Google Play Store



The App store is a registered
trademark of Apple, Inc.



Google Play and the Google Play logo
are trademarks of Google LLC

Need help?

Get in touch by emailing
support@grounded.so



QUICK TIPS

- 1 To ensure optimal performance and safety, please use only the power adapter provided with your Oasis Mini.
- 2 Only use materials provided through our store or recommended by us directly.
- 3 Some materials may not come in pre-measured packets. In these cases, use 5 teaspoons of material.
- 4 Always disconnect your Oasis Mini from power before cleaning or maintenance.

UNDERSTANDING THE REAR BUTTON FUNCTIONS

QUICK PRESS

Toggles your Oasis Mini between sleep and wake mode. Give it a try if your Mini is plugged in but doesn't appear to be awake.

HOLD FOR 3 SECONDS

Use this to reset your WiFi settings; particularly useful when changing to a new network.

HOLD FOR 8 SECONDS

Initiate a full reset; this function clears all files stored in memory, returning your Oasis Mini to its original settings.

ERROR CODES

If your Oasis Mini encounters an error, the LEDs will light up red. The number of LEDs helps to identify the type of error.

1. Memory Error. Attempt 8 second button hold
2. WiFi Error. Attempt 3 second button hold and “Add New Device” through the app
3. DNS Error. Attempt 3 second button hold and “Add New Device” through the app
4. Failed to open file. Power cycle device.
5. Not enough memory to perform the upgrade. Power cycle device.
6. Error while trying to upgrade. Power cycle and re-attempt upgrade
7. Error while trying to download the new firmware. Power cycle and re-attempt upgrade
8. Error while reading the upgrading file. Power cycle and re-attempt upgrade
9. Failed to start downloading the upgrade file. Power cycle and re-attempt upgrade
10. Error while downloading a pattern. Power cycle device.
11. Error while opening the file. Power cycle device.
12. Failed to delete a file. Power cycle device.
13. Error while opening the job file. Power cycle device.

If the problem persists, please contact our support team:

<https://support.grounded.so/>

GENERAL SAFETY PRECAUTIONS

- Keep the Oasis Mini away from children under 3 years of age due to small parts.
- Avoid placing the Oasis Mini near heat sources or direct sunlight to prevent damage.

AGE RECOMMENDATIONS

The Oasis Mini is suitable for users aged 8 and above. Adult supervision is recommended for younger users.

SUPERVISION REQUIREMENTS

Ensure that children are supervised while operating the Oasis Mini to prevent accidents.

POLICY

1. 2-year coverage against defects.
2. Repair/replacement by Kinetic Oasis LLC.
3. Original parts warranted.
4. Customer pays shipping.
5. No implied warranties.
6. Limitation of liability to purchase price, less shipping.

CONDITIONS

1. Covers only Products distributed/sold by Kinetic Oasis.
2. Damage from misuse, abuse, or disasters not covered.
3. Retain order number for warranty service.
4. No extension for replacement parts.
5. No warranty for third-party parts.
6. Exclusions: After-market modifications, misuse, acts of God, electrical issues, and typographical errors.

Contact support@grounded.so for warranty claims.

WARRANTY SITE

grounded.so/policies/refund-policy

8. DIMENSIONS



8. REQUIRED DISCLOSURE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- (a) Reorient or relocate the receiving antenna
- (b) Increase the separation between the equipment and receiver
- (c) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- (d) Consult the dealer or an experienced radio/TV technician for help.

6. CAUTION

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s) and Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC & IC RADIATION EXPOSURE STATEMENT

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

DÉCLARATION D'IC SUR L'EXPOSITION AUX RADIATIONS

Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Combustion, Inc. is under license. Other trademarks and trade names are those of their respective owners.