

 
M50 Smart Wi-Fi Doorbell Camera



Scan the code
to view the user manual


User Manual 1.0 - Outlet Version

Features

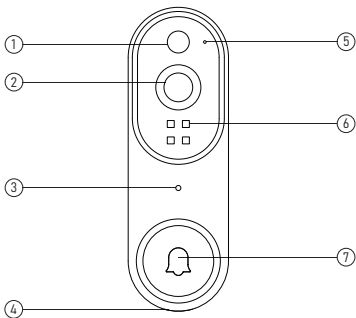

- 1. Motion Sensor
- 2. Wide-angle Lens
- 3. Indicator Light
- 4. Speaker

 - 5. Microphone
- 6. Infrared Lights
- 7. Doorbell Button

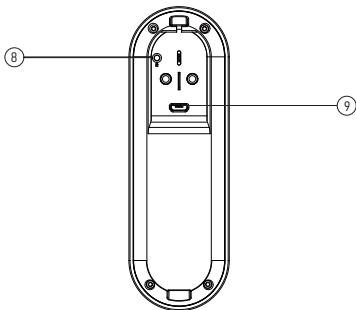


- 8. Reset Button
- 9. Micro USB Port (For Battery Charging)

In the box

1. 1080p Doorbell Camera
2. Mounting Bracket Removal Tool
3. Micro-USB Cable
4. User Manual
5. Wireless Chime

 Indicator light

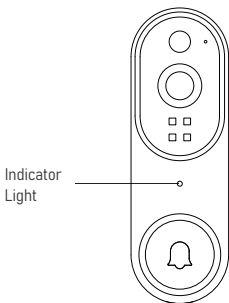

Flashing RED

The device is disconnected from Wi-Fi. It will attempt to reconnect automatically. If it fails, please reset the device and pair it again in the app.

Flashing RED and BLUE Alternately

Low battery. Please recharge the device.

Flashing BLUE

The device is recording.

Solid RED

The device is charging.

 
RED Light Turns OFF

When the device is fully charged.


Recharge your doorbell

1. Remove the mounting bracket

To do this, insert the included mounting bracket removal tool into the hole at the top of the doorbell. Push in until the bracket slides off.

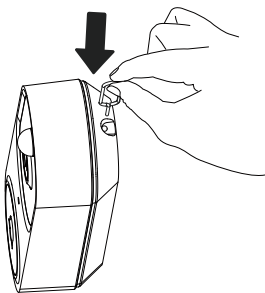


 2. Remove the battery tab

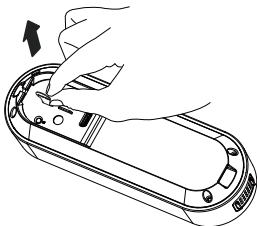

3. Recharge Your Doorbell Before First

 Use a standard micro-USB cable, such as the one provided in the box. Simply plug it into any 5V1A USB power source. Your doorbell camera may take approximately 8-10 hours to fully charge, depending on whether the USB cable is connected to a USB port or a wall outlet.

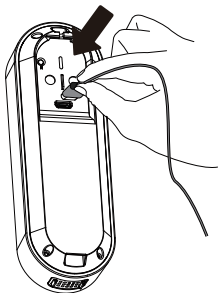

A solid RED light indicates that the doorbell is charging. When the doorbell is fully charged, the RED light will turn off.

 
Create an account in the Aiwit app

1. Scan the QR code provided or search for Aiwit in the Apple App Store or Google Play. Then download and install the app.




Android/iOS
App Download

2. Open the Aiwit app on your cellphone and tap Sign up.

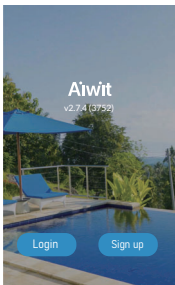


3. Enter your email address, set a password, and tap Sign up.

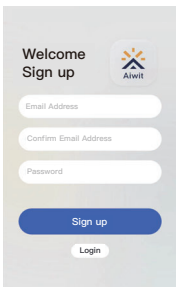


The screenshot shows a mobile app interface for signing up. At the top left, it says "Welcome Sign up". To the right is the Aiwit logo, which consists of a stylized sun with rays above a triangle containing the word "Aiwit". Below the header are three white input fields with rounded corners, labeled "Email Address", "Confirm Email Address", and "Password". At the bottom of the form is a large blue button labeled "Sign up" and a smaller white button labeled "Login".

4. Tap Please log in. (Note: You will also receive an email containing an activation link. Access this email and tap on the Activate Account link to verify.)

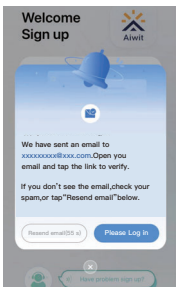


The screenshot shows the Aiwit verification screen. At the top left, it says "Welcome Sign up". To the right is the Aiwit logo. Below the header is a blue decorative graphic featuring a planet with a ring. In the center is a white envelope icon. Below the icon, the text reads: "We have sent an email to xxxxxxxx@xxx.com. Open your email and tap the link to verify." Below this, it says: "If you don't see the email, check your spam, or tap 'Resend email' below." At the bottom of the main content area are two buttons: "Resend email (55 s)" and "Please Log in". At the very bottom of the screen, there is a green chat bubble icon and a button that says "Have problem sign up?" with a close 'x' icon.

 5. Re-open the Aiwit app, enter your email address and password, and tap Log in.

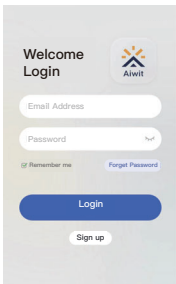


Set up your doorbell in the Aiwit app

1. Before setting up the camera, ensure your cellphone's Bluetooth () is turned on
2. Open the Aiwit app and sign in to your account.
3. To add your camera, tap the Add device icon (+).
4. Choose Video Doorbell and then select the M50 model.
5. Press and hold the doorbell button until the red light starts flashing. You will hear Entering pairing mode.
6. The device supports only the 2.4GHz Wi-Fi network. Navigate to your cellphone's Wi-Fi settings, connect to a 2.4GHz Wi-Fi network, and tap "Yes." (Note: 5GHz Wi-Fi is not supported).
7. For Connection Setup: Select your 2.4GHz Wi-Fi network name, input the password, and tap Next.
8. Tap Confirm.
9. Use the device's camera to scan the QR code on your phone.
10. Once you hear Device registration successful, you are all set.

Install your doorbell


1. Remove the mounting bracket

 To do this, insert the included mounting bracket removal tool into the hole at the top of the doorbell. Push in until the bracket slides off.

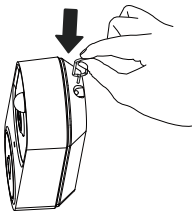


2. Prepare for mounting

 Mark the drill holes and use a bit to drill into your wall. Insert the anchors and secure your back plate with the provided mounting and screws.

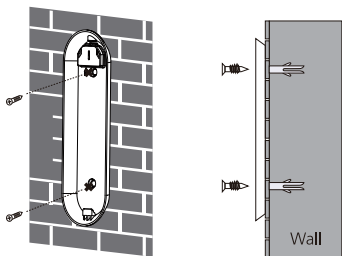

3. Reattach the doorbell

 
Place the doorbell back on by slotting it in at the bottom and clicking it into place.

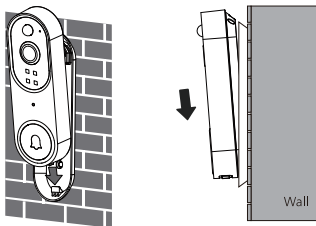


How to reset your doorbell

1. Remove the mounting bracket

 To do this, insert the included mounting bracket removal tool into the hole at the top of the doorbell. Push in until the bracket slides off.

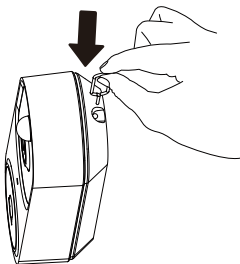

 
2. Press RESET button on the back of the doorbell

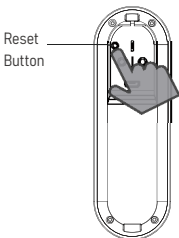

Set up your wireless chime


Connect the doorbell camera to the wireless chime and receive an instant alert in your home when someone rings the doorbell. The chime plugs into any outlet, allowing you to place it anywhere in your home.

 Wireless Chime

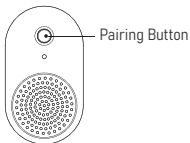


1. Plug the chime into an outlet and press the pairing button

 Before beginning the setup process, ensure that your video doorbell is connected to your phone. Then, plug the chime into an outlet and press the pairing button.

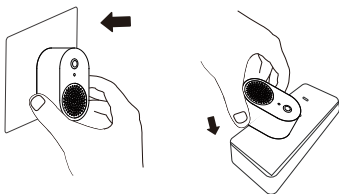


2. Set up your wireless chime

 Press the doorbell button to pair it with the chime.



 3. Press the doorbell button

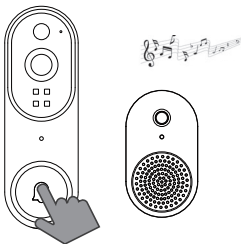

Press the doorbell button again to verify that the chime and doorbell are working properly.




Please note that the volume of the chime is not adjustable.

Frequently asked questions

1. How can I share the device with family members?

Open the Aiwit app and tap on Settings . From there, you can share  the device via QR code or email, and even transfer ownership of the device. The new user must first download the Aiwit app and create their own account.

2. Why can't I change the settings?

Only the owner account  can change settings, delete videos, and share the device. Shared accounts do not have these options.

3. How many users can view the device at the same time?

The owner account can share the device with up to 8 other accounts. Up to 3 users may view the video feed at once, but only 1 user can use the intercom.

4. Is the 5GHz Wi-Fi supported?

No, the camera only works with 2.4GHz Wi-Fi.

Please separate two Wi-Fi bands by giving the 2.4 GHz and 5 GHz networks each a unique separate SSID (network name). Then connect your device to the 2.4GHz Wi-Fi.

5. Why is my Wi-Fi signal weak?

Your camera may be too far from your wireless router, or there may be obstructions reducing signal strength. You might want to reposition your router or get a signal extender/repeater.

6. Why is the device offline?

The camera being offline means it is disconnected. There could be a few reasons for this:

- 1) The camera has run out of power. You will need to recharge it.
- 2) The Wi-Fi signal is weak, causing disconnection. Please improve your Wi-Fi signal and reconnect the device.
- 3) If the Wi-Fi is unstable, the device might go offline or get delayed frequently. You can try restarting the router and reconnecting the Wi-Fi to see if it helps. A good Wi-Fi connection is essential since the device is outside the house.

7. How can I adjust the human detection accuracy?

Open the Aiwit app and tap on Settings. Next, tap on Motion Settings. Here, you can select the desired human detection accuracy from three options: low, medium, and high. We recommend choosing medium. The high setting provides the strictest detection level, meaning the device will be triggered only when it is entirely certain that the moving object is a human. However, this stringent setting might cause the device to overlook a human figure, resulting in a missed notification.

High Accuracy - The device will record videos less frequently, ensuring maximum battery life.

Medium Accuracy - Medium battery life.

Low Accuracy - The device will record videos more frequently, leading to the shortest battery life.

 
 
If the areas you're monitoring experience excessive or repetitive motions, like children playing in the yard, you may receive numerous alerts, which can rapidly deplete the battery of devices. The human detection accuracy settings are designed to help you receive the notifications you want while preserving battery life.

8. How can I enable notifications on my phone?

- 1) Open the Aiwit app. From the Device page, tap the Settings icon, then tap the Motion Detection icon. Here, you can choose whether to turn Motion Alerts on or off.
- 2) Open your phone's settings. Navigate to "App Management" and "Notification Settings," then locate the Aiwit app. Ensure all permissions and notifications are enabled for the Aiwit app.

Contact us

If you require further assistance, feel free to reach out to our support team. Email us at service@aiwit.cc or use the Aiwit app's support feature. Please include your product's model and the retailer's name. Thank you.

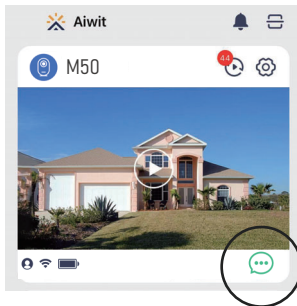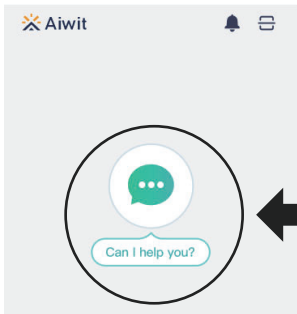

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.