 


Instruction Manual

Robot Vacuum Cleaner

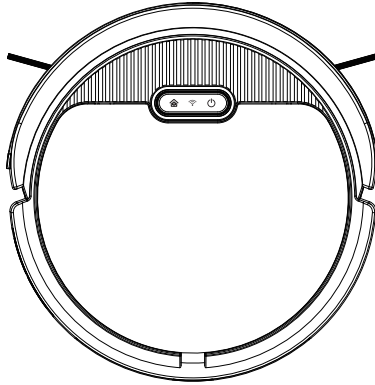

Model: V3

The instructions shall be kept properly
for any technical support
please contact us

CONTENT

1. Safety Instruction	01
2. Composition	03
3. Specification	06
4. Robot WiFi Instruction	07
5. Use	11
6. Mop Install Manual	15
7. Charging Operations	16
8. Maintenance	17
9. Common Errors	20
10. Problem and Solution	21

1. Safety Instruction

1.1 Safety instructions

- *This robot is not suitable for individuals with physical, mental, or cognitive disabilities (including children), those without prior operating experience, or those without sufficient knowledge of the robot (To use, please use it under the supervision or guidance of the person specially responsible for their safety.)
- * Please take care of children and do not allow them to use this robot without supervision.
- * Read the safety instructions and operating instructions before using the robot.
- * Please pay attention to all warnings related to the battery, power adapter, robot, and operating instructions. .
- * Follow all actions and usage instructions.
- * As the robot version is constantly iterated and upgraded, the specific functions are subject to the physical objects received.

 
1.2 Using restrictions

- This robot is only used for ground cleaning in the home environment, do not use for outdoor (such as open balcony), non-floor (such as sofa), commercial or industrial environment.
- This robot can only use the original battery, charging dock and adapter, otherwise it may cause robot damage or fire caused by high pressure.
- Before use, please pack away the wire on the ground to avoid dragging.
- Please put away fragile items and debris (such as vases, etc.) from the floor to avoid obstruction or minor collisions with the robot while it is running, which may cause damage to valuable items in the house.
- Do not place any objects, including children or pets, on the robot while it is stationary or in motion.
- Please clean the maintenance host and recharge dock while it is turned off or unplugged.
- Do not use it in an environment without a guardrail if it is suspended or elevated, to avoid the risk of the robot accidentally falling and causing personal injury,
- Do not use the robot in an environment above 45 C or below 0 C.
- Do not let the robot absorb hard or sharp objects (such as waste repair, glass, nails, etc.).
- Do not pour any liquid into this robot.
- Do not lay the robot on its side.
- Do not let the human body, fingers and other parts close to the machine when robot is working.
- Do not place the robot near sources of heat or flammable, explosive, or corrosive items.

1.3 Battery and charging

- Only charge indoors.
- Ensure the robot is charged in a dry condition.
- Do not use any third-party batteries, adapters, or charging docks.
- Do not remove, repair, or modify the battery and charging dock without permission.
- Do not place the charging dock close to heat sources (such as radiators, etc.).
- Ensure that the power adapter matches the standard socket voltage.
- Do not charge damaged or leaking batteries.
- Do not abandon the discarded battery at will. Before discarding the robot, turn off the power supply and remove the battery from the robot for proper disposal.
- Do not use a power adapter with damaged wires or connector. If the wire or plug is damaged, it must be repaired by the manufacturer or a professional.
- If you need to transport the robot, ensure that the main unit is turned off and recommend using the original package box for protection.
- If not in use for an extended period, please fully charge the robot, turn off the engine, and store it in a cool and dry place. Charge it at least once a month to avoid battery damage.

1.4 About children safety

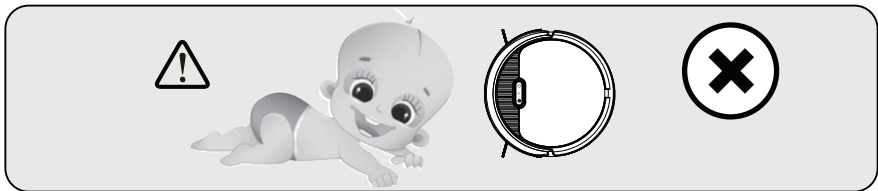

- Do not allow children to use alone.
- Do not allow children to play with the product's package, otherwise it may cause suffocation.

1.5 About the battery












1. This robot is limited to the manufacturer's battery.
2. The battery must be taken out when discarding.
3. If you need to replace the main battery, please contact our after-sales service department if you use the wrong type of battery.
4. If the battery leaks and accidentally let the liquid stick to the skin or clothing, immediately wipe it with a dry cloth.

2. Composition


2.1 Package list

Item	Description	Quantity
1	Robot Vacuum	1 pcs
2	Charging Dock Station	1 pcs
3	Adapter	1 pcs
4	Instruction Manual	1 pcs
5	Side Brushes	4 pcs
6	Mop+Velcro	1 set
7	Cyclone Dustbox+ Water Tank(Inside Mackine)	1 pcs
8	Hair Collecting Box	1 pcs
9	Mop plate	1 pcs
10	Remote control (batteries not included)	1 pcs

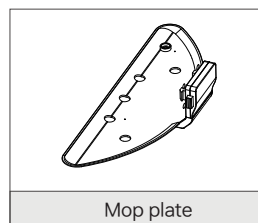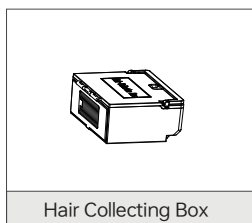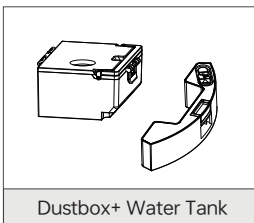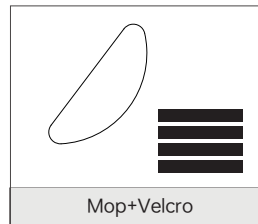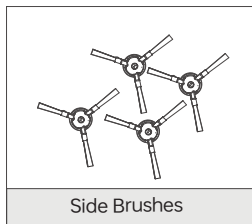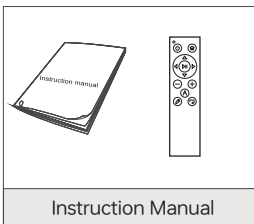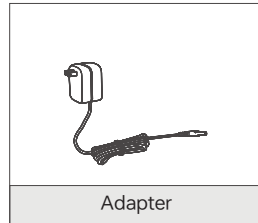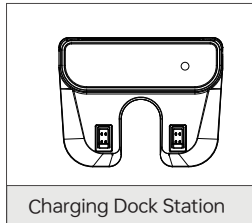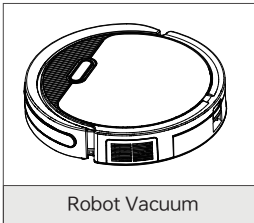         


2.2 View

 
Top

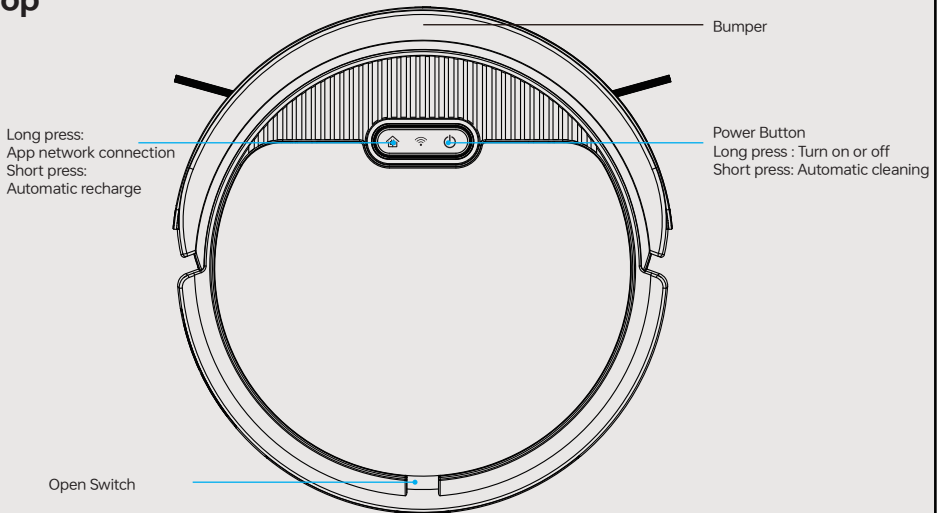

Bottom

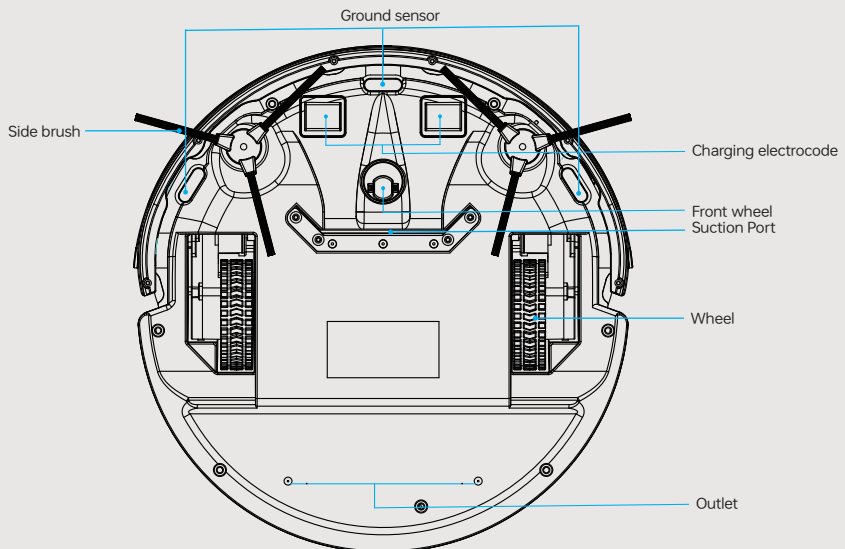 


Side structure

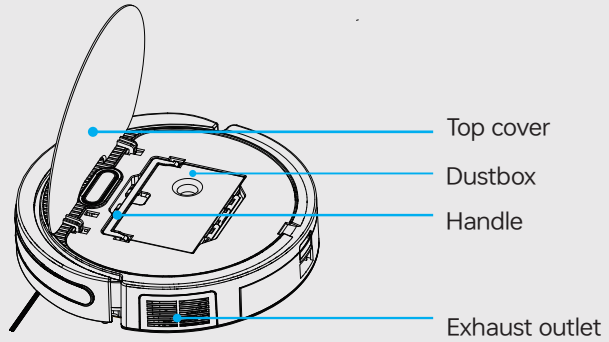 


Dusbox + water tank



 
HEPA-cover



HEPA filter

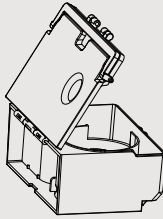 


Dustbox

 

Water tank

 Charging dock station

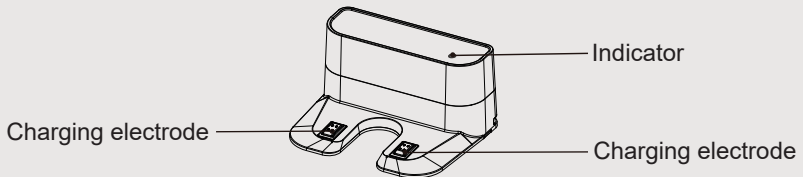

3.Specification

Model	V3
Voltage	DC11.1V
Rated Power	30W
Battery Type	Rechargeable lithium battery
Battery Capacity	4500mAh
Charging Time	5H~6H
Working Time	90-120min
Work Temperature Range	0°C~ 45°C
Work Humidity Range	≤90% RH
Cyclone Dustbox Capacity	500mL
Hair Collection Box Capacity	650mL
Water Tank Capacity	100mL
Noise	≤65dB
Size	310 X 310 X 76mm

4. Operation guide

4.1 App installation


Scan the QR code on your mobile phone to download the Smart Life app (common to Apple and Android) or search for "Smart Life" in the mobile app store to download, install, register an account and log in.



4.2 App connection

The host supports two network configuration methods: WiFi quick connection and Bluetooth network distribution.

Note: This device only supports 2.4GHz WiFi connection.

When your phone's Bluetooth is turned on, in the robot standby mode, press and hold the recharge button for  3 seconds. You will hear the host beep. At the same time, please release the button. The WiFi indicator light will continue to flash quickly. At this time, the machine can use Bluetooth or WiFi Quick Connect has two modes for connection:

A:WiFi connection:

Open the application and the connection steps are as follows,

First, click "Add Device" shown in Figure 1, then select "Small Appliances", and then click "Robot Vacuum (WiFi)" shown in Figure 2. Next, connect to your network, enter your password, and click "Next" as shown in Figure 3.

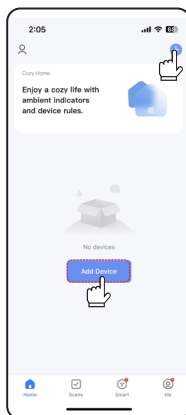 
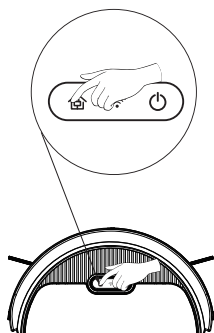 


Figure 1

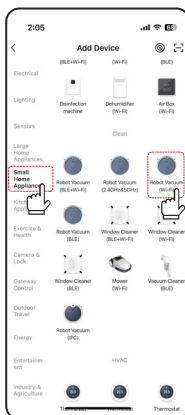 


Figure 2

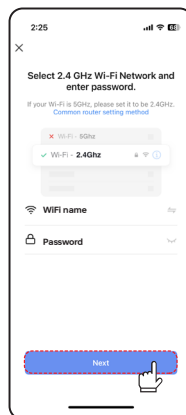 


Figure 3

Next, go to Figure 4, click "Confirm indicator light flashes", then click "WiFi Quick Connect" shown in Figure 5, and wait for the WiFi connection as shown in Figure 6. When the WiFi connection is successful, please click "Finish" shown in Figure 7, and the application connection is completed.

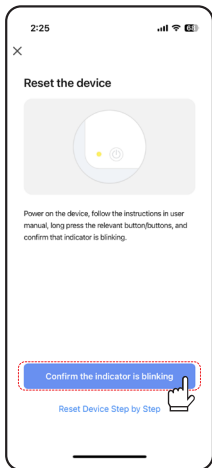 


Figure 4

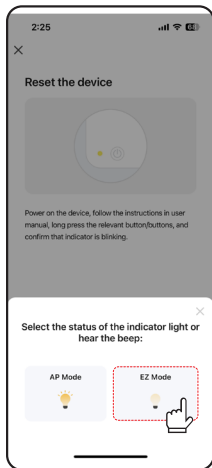 


Figure 5

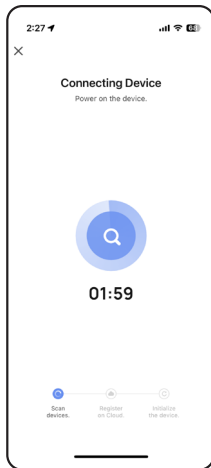 


Figure 6

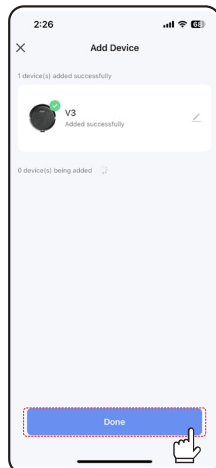 


Figure 7

B:Bluetooth distribution network:

Open the application and the connection steps are as follows:

First, click "Add Device" shown in Figure 1, then select "Small Appliances", and then click "Sweeping Robot (Bluetooth)" shown in Figure 2. Check "Confirm indicator light flashes" in Figure 3 and click Next to configure the network, as shown in Figure 4. Select the appropriate WiFi and enter the password, click Next, and wait for the machine to connect successfully (Figure 5 and Figure 6)

Note: When the mobile phone's Bluetooth is turned off, Bluetooth connection is not supported.

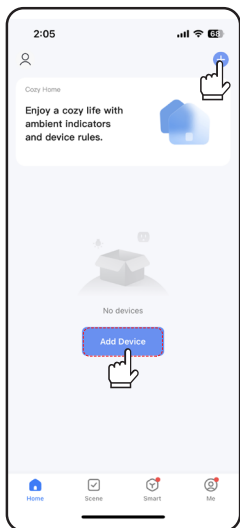 


Figure 1

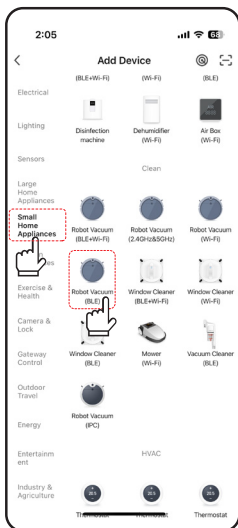 


Figure 2

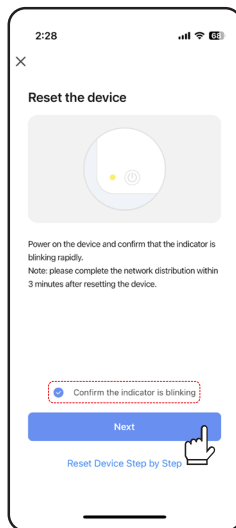 


Figure 3

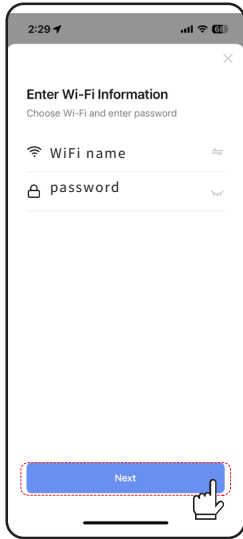 


Figure 4

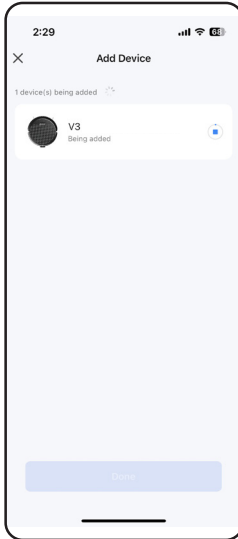 


Figure 5


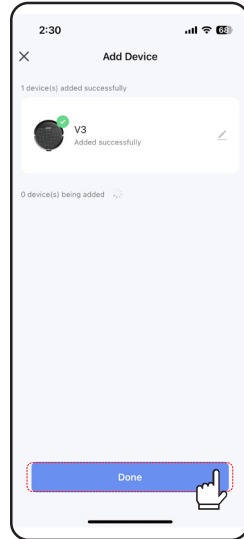 


Figure 6

 Remote control

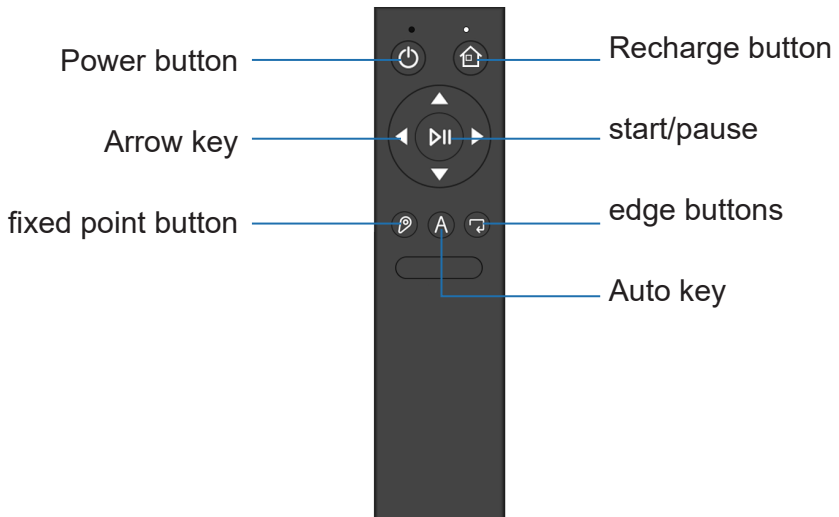

4.2 App Control Operation

Tips: App transmission distance depends on your WiFi signal

1.ON/OFF

To start robot or to stop the robot

2.Automatic cleaning

When press auto button, the robot will start automatic cleaning.

3. Edge cleaning

When press Edge button, the robot will start edge cleaning/wall following cleaning.

4. Spot cleaning

When press spot button, the robot will start spot cleaning

5.Manual

When press manual button, the robot can be operated manually

6.Map

When press map button, we can see robot's movement.

7. Charge

When press charge button, the robot will stop working and go back to recharging station automatically.

8.Schedule

To set different time as cleaning schedule.

9.More

To find more options of robot as below:

>suction level control

>mopping level control

>find robot

>cleaning time

 
Note: cleaning time setting only works to the automatic cleaningwhen choose once:

·when finished automatic cleaning, robot will back to recharging station.

·when choose twice: robot will keep working until it is in low battery and then back to recharging station .


5.Use

Please take out the foam strip and clean the area around the robot.

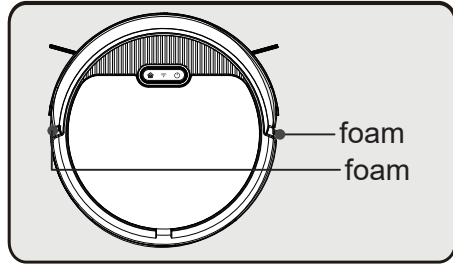


5.1 Ground for use

 Scope of application products are applicable to the following ground environment:


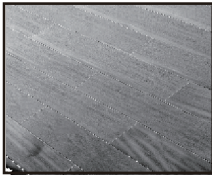


wood

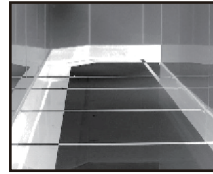 

marble

  
5.2 Inapplicable scope

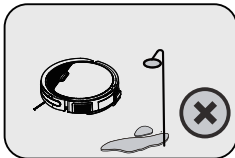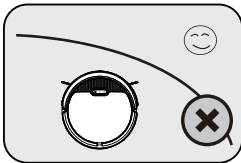

- Do not use in extremely hot (+60°C or higher) or extremely cold (-5°C or lower) environments.
- For indoor use only.
- Not for use in unprotected suspension environments.
- Do not use in humid or flammable environments, explosive or corrosive environments.
- Do not use robot to vacuum unburned cigarettes or matches.
- Do not use robot to vacuum toner and toner used in laser printers and photocopiers.
- Do not use robot to vacuum sharp objects such as glass plates, pins etc.

5.3 Working state

 1.Power on/off

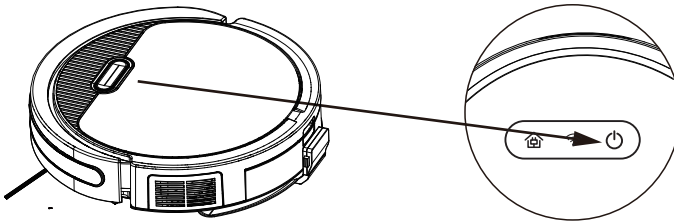


2.Standby

The machine is in standby mode and both LEDs are on at the same time.

State change:

 1. A. If the machine connected WiFi/app already, it will automatically shutdown after 5 mins without any operation of machine.
B. If the machine haven't connect WiFi/app, it will automatically shutdown after 30 mins without any operation of machine.
2. Short press the auto button once, the buzzer will sound once, and the automatic cleaning mode will be entered after a delay of 3S.
3. Press the "spot cleaning" button for a short time, the buzzer will sound and enter the spot cleaning cleaning mode.
4. Press and hold the auto button for 3 seconds, the buzzer will sound and the machine will shut down.
5. Plug in the charger and the buzzer will sound and enter charging mode.

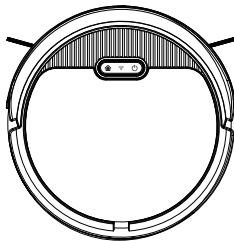


3. Automatic cleaning

The machine is in the automatic cleaning state, and the automatic cleaning LED lights up.

State change:

 1. Press the automatic or spot button on the machine, the buzzer will sound and enter the standby mode.
2. Press the spot button, buzzer sounds 3 times, and enters the automatic spotcleaning mode.
3. The fault is detected, the error mode is entered, and the machine alarms.
4. When the charger is plugged in, the buzzer will sound and enter the charging mode.

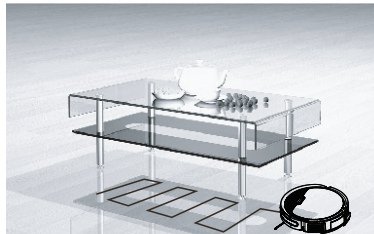

Auto cleaning route

4. Spot cleaning

 
In spot cleaning, LED light will be on .

Spot cleaning mode is suitable for cleaning a small dirty area at home.

The machine cleans this area in a bow shape, stops after the cleaning, and enters the automatic recharging mode.


State change:

1. Press the automatic or spot buttons on the machine, with the buzzer sounds, it enters the standby mode.
2. When the battery power is low, buzzer will sound 3 times, then the machine will enter automatic recharge mode.
3. If it detects the fault, it will enter the wrong mode and the machine will alarm.

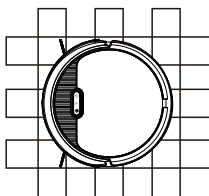


5. Edging mode

 Robot will start cleaning along the wall.

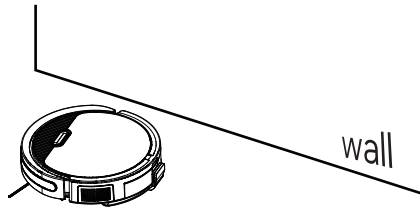

6. Mopping mode

 Fill the water tank with water, place it at the rear of the machine, install a mop and mop plate to access the mopping function.

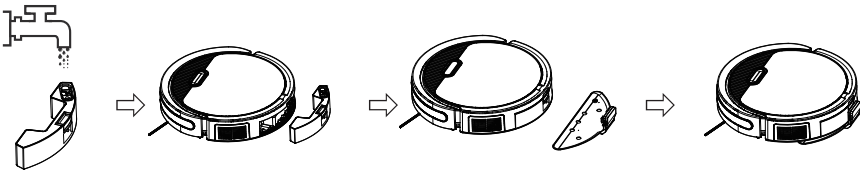

7. Charging mode

Connect the adapter to the charging dock, making sure that the robot is properly placed on the dock.

You'll hear a beep or voice prompt to confirm that the charging has started.

The power indicator light will blink while charging, and will stay on once fully charged.

Once fully charged, connecting the adapter won't cause the power indicator light to blink.

 
If you press the "Auto" button while charging, you'll hear a beep or a voice prompt, and the robot will stop charging to start automatic cleaning.

Note: When in charging, robot can not be turned off.


6. Mop Install Manual



- 1: Position the robot with its back facing upwards.
- 2: Tear apart the Velcro strip.

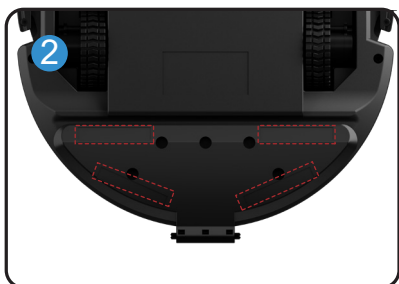

 - 1: Ensure that the designated area is free from any water or dust.
- 2: Attach two Velcro strips onto the back of the robot, aligning them as shown in the accompanying picture.

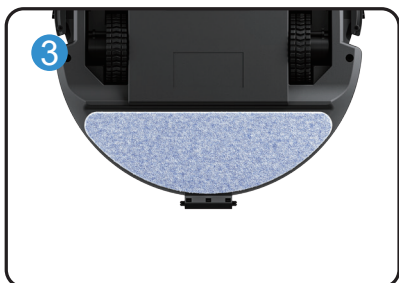

- 1: Attach the mop to the Velcro.
- 2: The mop can be reused after washing it.

 


- 1: Do not over-wet the mop to prevent water stains.

Note: Before mopping, please wet the mop.


7. Charging Operation

7.1 Put docking station in right place

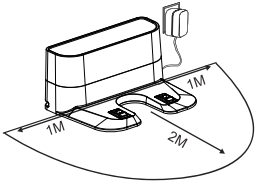

In order to help the machine to find the docking station in time, it is recommended to place docking station smoothly on the side of the wall, and place any obstacles around the base within the area in front of 2 meters, and the left and right are within 1 meter.

 7.2 Automatic charging

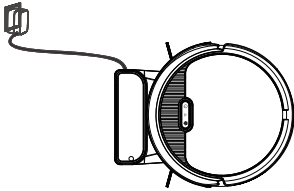

1. When the machine's battery is low, it will automatically start searching for its charging base and move closer to the charging base for automatic charging. When charging for the first time, the machine will charge for 6 hours.
2. During daily use, place the machine on the recharging base and ensure that the recharging base is powered on.
3. If the machine will not be used for a long time, please fully charge the machine, then turn off the machine and store it in a dry and ventilated place.

8. Maintenance

8.1 Recommended frequency


Accessories	Cleaning frequency	Replacement time
Dustbox+Water Tank	Once a week	Replace when damaged
HEPA Filter	Once every 3 weeks	Every 6 months
Side Brushes	Once a month	Every 3-6 months
Ground sensor	Once a month	No replacement required
Charging electrode	Once a month	No replacement required
Universal Wheel	Once a month	No replacement required

Tips:

Switch off and disconnect the adapter before cleaning and maintenance.
The replacement interval for accessories depends on actual use.


8.2 Clean the Dustbox

 Remove the dustbox and then remove the filter on the back of the dustbox.

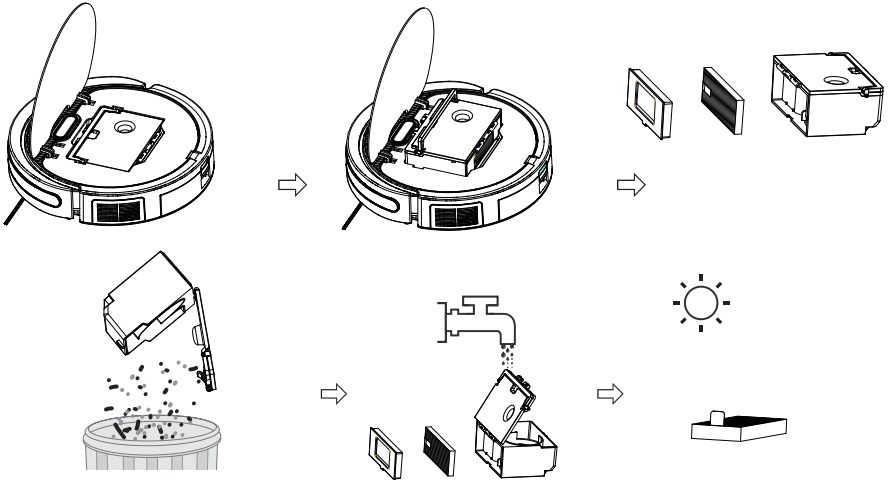


8.3 Clean side brushes

 - Turn the main unit over, unplug the side brushes, clean the side brushes and put them back in.

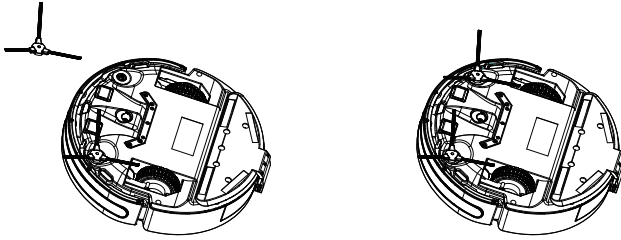



8.5 Clean mop

 Take off the mop from robot, wash it and dry it.

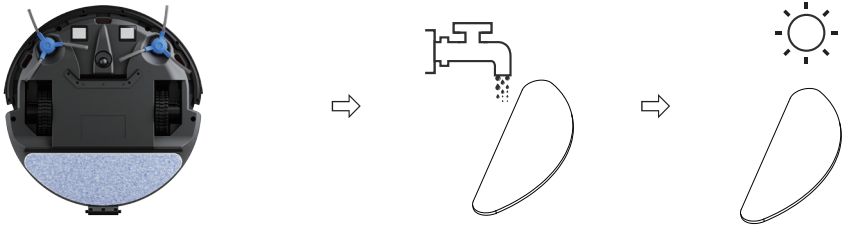

8.6 Clean the ground sensor and charging electrocode

  Wipe the sensor and the charging electrocode with a soft cloth.

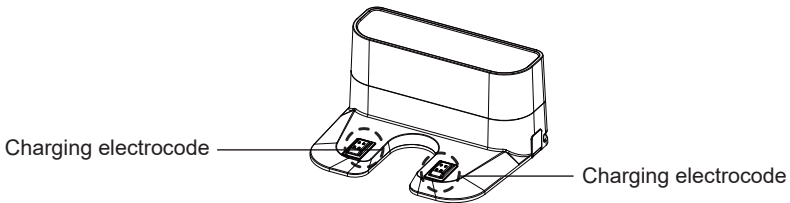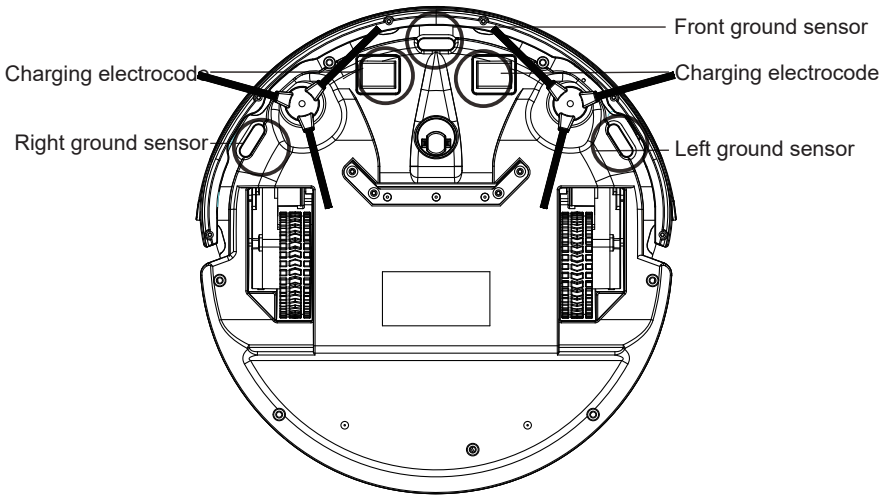

Tips:

- Please disconnect the power supply when cleaning the charging pole piece.

9. Common Errors

Under the fault state, the machine will stop working. Automatic LED, LED light of fixed time will flash at the same time, the buzzer will make an alarm. The alarm instructions are as follows.

Fail mode	Failure reminding	Troubleshooting
Left ground sensor fail	LED flash 1 times	Please put the machine on the flat ground and wipe the left ground sensor
Front ground sensor fail	LED flash 2 times	Please place the machine on a flat surface and wipe the front ground sensor
Right ground sensor fail	LED flash 3 times	Please put the machine on the flat ground and wipe the right ground sensor
Right collision sensor fail	LED flash 4 times	Check the right part of front cover stuck or not
Left collision sensor fail	LED flash 5 times	Check the left part of front cover stuck or not
Left wheel stuck	ED flash 6 times	Check if the left wheel is wrapped or stuck
Right wheel stuck	ED flash 7 times	Check if the right wheel is wrapped or stuck
Left wheel fail	LED flash 8 times	Left wheel abnormal, please check the wiring
Right wheel fail	LED flash 9 times	Right wheel abnormal, please check the wiring
Suction fan fail	LED flash 10 times	Dust-absorbing motor abnormal, please check the dust-absorbing motor
Side brushes fail	LED flash 11 times	Check whether the left and right side brush has been twined
Robot stuck	LED flash 13 times	The robot is trapped, please move the robot to a new position and start again
Solenoid valve abnormality	LED flash 14 times	The solenoid valve is abnormal, please check the wiring; whether the water tank is installed properly
Dustbox not installed	LED flash 15 times	Put the Dustbox back

Tips:

If you can't rule out the corresponding faults by referring to the above methods, please contact our customer service in time.

10. Problem and solution

Q1: Left/right bumper stuck

A: Click the left and right bumper to check if with clicks sound, and check if they can spring back smoothly.

Q2: Spin around

A: Check the left and right wheels to confirm if they are stuck or not. (e.g. papers, hairs...)

Q3: Wheels stuck

A: Turn the wheels manually to clean out the matters

Q4: Work about half an hour only, then the robot back to docking station

A: Charge the machine by its original adapter, and fully charge it, charge time 3-4 hours.

Q5: No suction

A: 1. Check if there is something blocked on suction port.

2. Check if something stuck in the dustbox.

3. Check if the HEPA is covered with a lot of dust, then please wash it, use it after it is dry.

4. Robot is out of power, please charge it then check.

11.FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

***RF warning for Mobile device:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.