PS: 重点字体已标注红色,印刷出来也需是红色。 尺寸:40mm×175mm

## 双模式智能眼镜

(M10-1 使用说明)

- 1.长按电源键25开机
- 2.按电源键3次下一曲
- 3.按电源键2次上一曲
- 4.按电源键2秒模式切换 (普通模式/语音模式)

### •声明

首先对您使用本公司的产品表示感谢 在使用之前请先详细阅读此说明书, 正确使用此产品。为了更好的服务 本用户手册的内容可能变更。因为 产品的性能和功能而发生的变更将 不做另行通知。

### •产品简介

多功能智能眼镜采用蓝牙芯片,兼容 主流品牌手机和平板电脑等蓝牙设备 支持aptX音频解码技术, 达到CD级高 品质音质,持久续航,左右双喇叭,开放 式定向发音,无障碍接收外界声音,可 时刻获取周围环境信息,安全、智能、 健康、便捷。

多功能智能眼镜,本产品是具有立体声 音响功能的蓝牙眼镜,操作简便, 美观实用,便于携带。

**Dual Mode** 

**Smart Glasses** 

(M10-1 Instruction Manual)

1.Long press the power button for 2S to boot

2.Press the power button 3 times to the next song.

3. Press the power button twice to the previous song

4. Press the power button for 2S to switch modes

(Normal mode / Voice mode)

### •包装清单

智能眼镜、智能眼镜充电线、 使用说明书、眼镜清洁布

### 按键功能概述 产品参数

籍架材质:TR90/五金 镜片材质: PC

镜片规格:透明渐变、墨镜、

老花镜片等(多种选择)

蓝牙协议: V5.3 充电时间:1.5小时

使用时间:3小时以上 待机时间:180小时(蓝牙连接状态) 电池容量:120mAh

声 道:双喇叭、立体声 充电电压和电流:DC5V/1A 最大充电电流达150mAh

温馨提示:长期不使用时,每2个月 对该产品至少充电一次。

### 开关机与配对

### 1、开机与配对

3分钟白动关机。

打开手机等蓝牙设备,长按电源键2秒, 眼镜语音提示【开机】,蓝灯闪3下转 红蓝灯交替;与蓝牙设备连接成功后, 指示灯熄灭。

手机进行蓝牙连接请参考倒数第二页示意图)

2、关机: ①长按电源键5秒,语音提示【关机】, 红灯闪3下即与手机断开连接。 ②自动关机:无配对或无设备连接时

### 电量提示

、低电提示:内置电池电压低于3.4V 后出现低电报警,每120S报警一次, 红灯5s闪一次,3.1V自动关机。 2、充电中:红灯长亮。

### 按键模式功能操作

### 1、接打电话

感谢你对我公司产品的信任, 启用双模式将大幅提升耗电量, 但可享受语音操控的便捷,启用 双模式纯语音款可以解放双手AI 智能唤醒(噪音大于68分贝时会 误操作)

● 开机/关机/下一曲/上一曲/

语音助手/导航/拍照功能

3 LED指示灯

4 麦克风

5 扬声器

6 磁吸充电口

•温馨提示

播放/暂停/接电话/挂断电话/

请在电量充足时使用,以优化 您的体验。若出现低电报警请及时 给该产品充电使用。

**Key Function Overview** 

1 Power on / Off / Next song /

Previous song / Play / Pause /

Navigation / Photo function

3 LED Indicator

4 Microphones

6 Magnetic charging port

Warm Prompt

Thank you for your trust in our products

enabling dual-mode will significantly

enjoy the convenience of voice control,

free your hands Al intelligent wake-up

(noise greater than 68 decibels will be

enabling dual-mode pure voice models ca

Please use it when the power is sufficient

to optimize your experience. If there is a

low battery alarm, please charge the

product in time to use it.

Speakers

Pick up / Hang up / Voice assistant

3、充电完成:红灯熄灭

• 接听电话: 单按电源键接听电话: 挂断电话:单按电源键挂断电话;

• 拒绝来电:长按2秒电源键拒绝来电 取消呼叫:单按电源键取消电话呼叫

### 2、欣赏音乐

• 精准选歌:连按4次电源键唤醒语音 助手后说,播放音乐(如上海滩),即可 调用并播放手机里面的歌曲

### 随机放歌:连按4次电源键唤醒语音 助手后说,播放音乐,即可调用并随机 播放手机里面的歌曲

- •播放下一曲:连按3次电源键
- 播放上一曲:连按2次电源键: 暂停播放:单按电源键。
- 3、播放音乐与拨打电话之间切换: • 当在听音乐过程中需要拨打电话时,先
- 单按电源键将音乐暂停,然后连按4次 电源键唤醒语音助手后即可拨打电话。 4. 导航:
- 开启导航:先暂停音乐,连按4次 电源键唤醒语音功能,然后进行语音
- 操作,帮我导航到\*\*地方; • 关闭导航:连按4次电源键唤醒语音 助手后说,退出导航。

### 5. 拍昭功能 打开相机状态下,单按电源键即可拍照

6、超距离回连: • 耳机超出蓝牙范围, 耳机断开, 回到 连接范围自动回连, 当超过180秒没有

回到连接范围内自动关机。 7. 来电报号

### • 来电状态下自动播报当前来电号码。

## 信息以确保正确和安全使用。

### 2.使用未经原制造商认可的电源,充电器 语音模式功能操作

温馨提示、语音临醒开启后全有误触为正常 现象,当前音量过大时语音识别会有概率 唤醒失败可多说几次命令词唤醒。

模式切换顺序说明: 开机默认普通模式-语音模式,2个模式可按顺序重复切换。

、模式切换:开机/连接设备状态时 长按电源键2秒进行模式切换 (普通模式/语音模式);

2、唤醒语音助手:无通话状态下连按 4次电源键可唤醒语音助手; (语音助手昵称: "小杰小杰/小杰同学"

、播放音乐:"播放音乐",语音识别 4、暂停播放:"停止播放",语音识别: 5、播放上一曲:"上一首",语音识别;

6、播放下一曲:"下一首",语音识别; 、音量加:"增大音量",语音识别; 8、音量减:"减小音量",语音识别;

10、拒接来电:"挂断电话",语音识别

连接方法,不要随意连接不配套的设备。 9、接听电话:"接听电话",语音识别;

# 使用警告

1.使用本产品前请仔细阅读说明书 并保留本说明书 2.首次使用,请先将本产品充满电。

3.如果产品长期(超过两周)不充电, 严禁使用设备. 使用前请对其充电。

### 警告

产品使用提示

- 1.请勿以任何理由拆除或维修改装本产 品,否则可能会导致起火,电子击穿甚
- 至彻底损坏本产品。
- 2.请勿将设备置于温度过低或过高 (0℃以下或45℃以上)环境下。
- 3.请勿将产品接触腐蚀性液体及浸泡在 液体里。
- 4.不能将眼镜放在阳光下长时间曝晒 否则容易变形、老化、折断。

5.请勿将充电线磁吸端靠近金属物体 防止磁吸金属物体后引起的短路危险。

### 重要安全信息

1.在使用本产品前,请先阅读所有安全

或电池,可能引发火灾,爆炸或其他危险。 3.请使用本制造商认可且与此型号设备 配套的配件。

4.请在温度0℃~35℃范围内使用本产品 并在温度-20℃-45℃范围内存放设备及 其配件。 当环境温度讨高或讨低时,可能 会引发设备故障。

5.若设备使用不可拆卸的内置电池,请勿 自行更换电池,以免损坏电池或设备,电池 只能由授权服务中心更换。

6.如充电完毕,请断开充电器与本设备的 连接,并从电源插座上拔掉充电器。连续 充电时间请勿超过12小时。

7.请保持设备干燥。 8.若设备或其他任何部件不能正常工作。 请勿自行维修产品。 9.连接其他设备时,请参考使用说明书的

为避免听力受损,请勿长时间使用高音量。

Voice mode

arm tips:Voice wake-up will have a false touch

fter the opening of the normal phenom

an be repeated in order to switch.)

rrent volume is too high when the voice

cognition will have the probability of wake-up

ilure can be said a few times to wake up the

efault normal mode - voice mode, the 2 modes

1) Mode switching: Long press the power

ng on/connecting the device

Wake up the voice assistant: No call

ate press the power button 4 times to

Play music:"Play music",voice rec

Pause playback: "Stop playback",

Play the previous song: "Previous"

Play the next song:"The next song"

Volume up:"Increase the volume".

Volume down: "Reduce the volume".

Reject the call: "Hang up the phone".

Answer the phone: "Answer the phone"

oice assistant nickname: "Xiaojie Xiaojie

utton for 2 seconds to switch modes

lormal mode/Voice mode) when

ake up the voice assistant

aojie students").

### 请遵循相关法律法规,不要在以下环境

• 如加油站、油库、化学仓库附近等 存储有易燃易爆物或化学品的环境,

- 请勿在医院手术室、急诊室、深切治疗 部等场所使用此设备; 为避免干扰医疗 仪器工作,使用此设备时请远离心脏起 搏器、助听器、植入耳蜗等医用设备,
- 请保持此设备和起捕器之间超过15厘米 的距离. 若要在个人医疗设备附近使用此设备。
- 请咨询医师和设备制造商。 • 请遵守有关驾车时使用此设备的所有 安全警告和规定。
- 雷雨天气时,为避免雷击事故,请勿 在室外使用。 充电时,请勿边充电边通话。 请勿在浴室等高湿度的地方对产品
- 进行充电,否则会导致触电,人身伤害 起火和充电器损坏. • 请遵守在任何环境里明确禁止使用的

### 相关法律规定。

- 产品保修凭证 产品保修期内出现非人为损坏的性能故障
- 可以享受下列三包服务 • 自收货之日起7日内,产品出现非人为 损坏的性能故障,用户可选择退回货款或者 更换同型号同规格的产品。
- 自收货之日起15日内,产品出现非人为 损坏的性能故障,用户可选择更换同型号
- 自收货之日起一年内,产品出现非人为 损坏的性能故障,用户可寄商家维修。
- 属于下列情况不在"三包"服务范围之内: 未经授权的维修, 误用, 碰撞, 疏忽, 滥用、讲液、事故、改动或撕毁、涂改 产品标贴、封条。
- 超过"三包"服务有效期的。
- 因火灾、水灾、雷击等不可抗力造成 的损坏。

### 因人为原因导致的产品性能故障。 未按产品说明书要求使用而造成损坏的。

Safety information

Before using this product, please read all

afety information to ensure correct and

. Using a power supply, charger or battery

ot approved by the original manufacturer

ay cause fire, explosion or other hazards

Please use the accessories approved by

ne manufacturer and matched with this

.Use accessories approved by this

manufacturer and compatible with this model.Please use the device within the

mperature range of 0°C-35°C,and store

nperature range of -20°C - 55°C.When

he ambient temperature is too high or too

nternal battery,do not replace the battery ourself to avoid damaging the battery or

6.If charging is complete .disconnect the

harger from the power outlet.Do not cha

8. If the equipment or any other parts do not

. When connecting other devices, please

struction manual, and do not connect

refer to the connection method in the

charger from the device the unplug the

vice.The battery can only be replaced by

ow,it may cause equipment failure.

5. If the device uses a non-removable

n authorized service center.

. Please keep the device dry.

nore than 12 hours.

roduct by yourself

e device and its accessories within the

odel of equipment.

 
# 藍牙 已开启

蓝牙连接示意图


① 进入设置



② 选择蓝牙选项



确保蓝牙开关处于 ON状态 搜索设备名: U10-1 点击蓝牙名进入连接

 

# Bluetooth connection

保修卡

尊敬的用户,本保修卡是您将来申请保修

的凭证,请您配合销售商填写并妥善保管

联系电话

诵讯地址

电子邮箱

邮政编码

产品名称

产品型号

产品条码

销售商 联系电话

信息 邮政编码

备注

销售日期

 
发票号码

信息

# Bluetooth Turned

① Go to settings





search for th
click the B
]   "
< 5
Blue
Blue
<u>U1</u>
Oth
The bl

charging.

· During thunderstorms, do not use it

accidents

Do not charge the product in a place with nigh humidity such as a bathroom, or it lay cause electric shock, personal injury, fire and damage to the charger. Please comply with the relevant legal provisions that are expressly prohibited in

### Warranty certificate

ouring the product warranty period, non uman-damaged performance failures can enjoy the following three-guarantee service

the product has a performance failure that not artificially damaged, the user can choose to return the payment or replace he product with the same model and specification.

Within 15 days from the date of receipt, the user can choose to replace the product with the same model and specification if the product has a performance failure that is not artificially damaged. Within one year from the date of receipt of the product, if the product has a performance failure that is not artificially

### Warranty card

User Information	User name	
	Contact number	
	Mail address	
	E-mail address	
	Postal code	
Products Information	Product name	
	Product model	
	Product bar code	
Sellers Information	Name	
	Address	
	Contact number	
	Postal code	
	Sale date	
	Invoice number	
Note		

amaged, the user can send it to the

# ear users, this warranty card is the proof

# (3) Make sure the Bluetooth switch is ON.

ne device name: **U10-1** Bluetooth name to enter



is successful

# Disclaimer

First of all,thank you for using out products! Please read this manual before using and use this product correctly.For the better service changes due to the performance and functionality of the product will be revised without notice. Open-ear smart audio glasses. This product is a Bluetooth speaker withstereo function, easy to operate stylish and practical, easy too carry.

### Product Introduction

Multifunctional smart glasses use Bluetooth chips, compatible with mainstream brand mobile phones and tablets and other Bluetooth devices, support aptX audio decoding technology, achieve CD-level high-quality sound quality, long-lasting battery life, left and right double speakers, open directional pronunciation, and barrier-free reception of external sounds. The surrounding environment information can be obtained at all times, which is safe, ntelligent, healthy and convenient

### Packing List

Audio glasses, Glasses charging cable, Instruction manual, Glasses cleaning cloth.

### **Product Parameters**

rame Material: TR90/Metals ens Material: PC

ens Color: Transparent gradient. nalasses, Presbyopic lenses tc. (a variety of options)

Standby Time: 180H(Bluetooth

he maximum charging current

Bluetooth Protocol: V5.3 Charging Time: 1.5H Use Time: 3H

Battery Capacity: 120mAh Sound Channel: Double speakers Charging Voltage And Current: DC5V/1A

### s 150mAh

Warm Prompt When not in use for a long time, charge the battery at least once every 2 months.

# Switch machine / Pairings

Open the cell phone and other bluetooth seconds, the glasses voice prompts Power on], the blue light flashes 3 to red and blue lights alternately; and bluetooth levices connected to the success of the

lights go out. refer to the diagram on the last page fo ne Bluetooth connection of the cell phone.) Turn off: Long press the power button

or 5 seconds, the voice prompts shutdown1, the red light flashes 3 times Automatic shutdown: No pairing or no

automatically shut down

### **Battery level indication**

Low battery tip: Low battery alarm ccurs after the built-in battery voltage is wer than 3.4V, alarm every 120S, red light shes once in 5s. and 3.1V automatically uts down the machine 2) Charging in progress: The red light is Complete charging: Red light off.

### Keystroke mode

1) Receiving calls

Answer a call: Single press the power - Hanging up a call: Single press the button to hang up a call. Rejecting a call: Long press the power or 2 seconds to reject the call.

## - Canceling a call: Single press the power

2 Enjoy music. Precise song selection : Press the ower button 4 times to wake up the voice sistant and then say, play music

e.g. Shanghai Tang), you can call and Randomly play a song: Press the power voice assistant and say, play music, you an call and randomly play the songs

- Play the next song: Press the power Play the previous song: Press the

# - Pause playback: Single press the

3 Switch between playing music When you need to make a call while stening to music, first press the power outton to pause the music, and then ress the power button 4 times to wake

### up the voice assistant to make a call. 4 Navigation.

Turn on the navigation: First pause the nusic, press the power button 4 times to ake up the voice function, and then do he voice operation, help me navigate

### ssistant and then say, exit navigation Photo Function

wer button to take a picture

When the camera is turned on, press the

· Close navigation: Press the power

Super distance connect back dset is out of Bluetooth ne headset is disconnected, back to the onnection range automatically back to onnect, when more than 180 seconds did not return to the connection range utomatically shut dowr

proadcast the current caller number

broadcasting.

### Tips for use **Use of Warnings**

sing this product and keep this manual 2. For the first time, please fully charge this eriod of time (more than two weeks) char

### .Do not dismantle or repair this product or any reason, as this may result in fire.

elow 0°C or above 45°C). uids or immerse them in liquids.  $\widehat{\mathcal{I}}$  Incoming call number

amage to the product. Do not place the device in an envir

roken and broken. . Do not place the magnetic end of the harging cable close to metal objects to vent the risk of short circuit caused by agnetically attracting metal objects

rating rooms, emergency rooms erfering with the work of medical onic breakdown or even comple quipment, please keep away from makers, hearing aids, cochlear

> To use this device near personal medical ment, consult your physician and evice manufacturer. regarding the use of this device while

# suitable devices at will.

ulations and do not use headphones in e following environments. Such as gas stations, oil depots, chemical arehouses and other environments where mable and explosive substances or nemicals are stored. Use of the device is

ease follow the relevant laws and

Do not use this device in hospital ensive care units, etc.; in order to avoid mplants and other medical equipment hen using this device, please keep this More than 15 cm between the device and

## nerchant for repair.

of your future warranty application, plea cooperate with the seller to fill out and keep it in a safe place.

User Information	number	
	Mail address	
	E-mail address	
	Postal code	
Products Information	Product name	
	Product model	
	Product bar code	
Sellers Information	Name	
	Address	
	Contact number	
	Postal code	
	Sale date	
	Invoice number	

where the temperature is too low or too high 3.Do not contact the product with corrosive 4.Do not expose the glasses to the sun for a

### Warning

ng time,otherwise it will be easily

Follow all safety warnings and regulation

### **FCC Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- •Reorient or relocate the receiving antenna.
- •Increase the separation between the equipment and receiver.
- •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- •Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.