

Dual Mode Smart Glasses

(U10-1 Instruction Manual)

1. Long press the power button for 2S to boot.
2. Press the power button 3 times to the next song.
3. Press the power button twice to the previous song.
4. Press the power button for 2S to switch modes (Normal mode / Voice mode).

Disclaimer

First of all, thank you for using our products! Please read this manual before using and use this product correctly. For the better service, changes due to the performance and functionality of the product will be revised without notice. Open-ear smart audio glasses. This product is a Bluetooth speaker with stereo function, easy to operate, stylish and practical, easy to carry.


Product Introduction

Multifunctional smart glasses use Bluetooth chips, compatible with mainstream brand mobile phones and tablets and other Bluetooth devices, support aptX audio decoding technology, achieve CD-level high-quality sound quality, long-lasting battery life, left and right double speakers, open directional pronunciation, and barrier-free reception of external sounds. The surrounding environment information can be obtained at all times, which is safe, intelligent, healthy and convenient.

Packing List

Audio glasses, Glasses charging cable, Instruction manual, Glasses cleaning cloth.

Key Function Overview

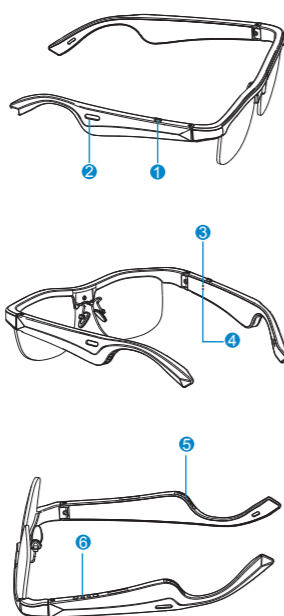

1. Power on / Off / Next song / Previous song / Play / Pause / Pick up / Hang up / Voice assistant / Navigation / Photo function
2. Back sound outlet
3. LED Indicator
4. Microphones
5. Speakers
6. Magnetic charging port

Warm Prompt

Thank you for your trust in our products, enabling dual-mode will significantly increase power consumption, but you can enjoy the convenience of voice control, enabling dual-mode pure voice models can free your hands. AI intelligent wake-up (noise greater than 68 decibels will be misused).

Please use it when the power is sufficient to optimize your experience. If there is a low battery alarm, please charge the product in time to use it.

Product Parameters

Frame Material: TR90/Metals
Lens Material: PC
Lens Color: Transparent gradient, Sunglasses, Presbyopic lenses, etc. (a variety of options)
Bluetooth Protocol: V5.3
Charging Time: 1.5H
Use Time: 3H
Standby Time: 180H (Bluetooth connection)
Battery Capacity: 120mAh
Sound Channel: Double speakers, Stereo sound
Charging Voltage And Current: DC5V/1A
The maximum charging current is 150mAh

Warm Prompt

When not in use for a long time, charge the battery at least once every 2 months.

Switch machine / Pairings

1. Open the cell phone and other bluetooth devices, long press the power button for 2 seconds, the glasses voice prompts [Power on], the blue light flashes 3 to red and blue lights alternately, and bluetooth devices connected to the success of the lights go out.
(Please refer to the diagram on the last page for the Bluetooth connection of the cell phone.)
2. Turn off: Long press the power button for 5 seconds, the voice prompts [shutdown], the red light flashes 3 times that is disconnected from the phone.
3. Automatic shutdown: No pairing or no device connection for 3 minutes automatically shut down.

Battery level indication

1. Low battery tip: Low battery alarm occurs after the built-in battery voltage is lower than 3.4V, alarm every 120S, red light flashes once in 5s, and 3.1V automatically shuts down the machine.
2. Charging in progress: The red light is on for a long time.
3. Complete charging: Red light off.

Keystroke mode

1. Receiving calls
- Answer a call: Single press the power button to answer a call.
- Hanging up a call: Single press the power button to hang up a call.
- Rejecting a call: Long press the power button for 2 seconds to reject the call.
- Canceling a call: Single press the power button to cancel the phone call.
2. Enjoy music.
- Precise song selection: Press the power button 4 times to wake up the voice assistant and then say, play music (e.g. Shanghai Tang), you can call and play the songs inside the phone.
- Randomly play a song: Press the power button 4 times in a row to wake up the voice assistant and say, play music, you can call and randomly play the songs inside the phone.
- Play the next song: Press the power button 3 times in a row.
- Play the previous song: Press the power button 2 times in a row.
- Pause playback: Single press the power button.

3. Switch between playing music and making a call.
- When you need to make a call while listening to music, first press the power button to pause the music, and then press the power button 4 times to wake up the voice assistant to make a call.
4. Navigation.
- Turn on the navigation: First pause the music, press the power button 4 times to wake up the voice function, and then do the voice operation, help me navigate to ** place.
- Close navigation: Press the power button 4 times to wake up the voice assistant and then say, exit navigation.

5. Photo Function.
- When the camera is turned on, press the power button to take a picture.
6. Super distance connect back
- The headset is out of Bluetooth range, the headset is disconnected, back to the connection range automatically back to connect, when more than 180 seconds did not return to the connection range automatically shut down.
7. Incoming call number broadcasting.
- Incoming call state automatically broadcast the current caller number.

Voice mode

Warm tips: Voice wake-up will have a false touch after the opening of the normal phenomenon, the current volume is too high when the voice recognition will have the probability of wake-up failure can be said a few times to wake up the command word.
(Mode switching order description: power on default normal mode - voice mode, the 2 modes can be repeated in order to switch.)

1. Mode switching: Long press the power button for 2 seconds to switch modes (Normal mode/Voice mode) when powering on/connecting the device.
2. Wake up the voice assistant: No call state press the power button 4 times to wake up the voice assistant (Voice assistant nickname: "Xiaojie Xiaojie / Xiaojie students").
3. Play music: "Play music", voice recognition.
4. Pause playback: "Stop playback", voice recognition.
5. Play the previous song: "Previous", voice recognition.
6. Play the next song: "The next song", voice recognition.
7. Volume up: "Increase the volume", voice recognition.
8. Volume down: "Reduce the volume", voice recognition.
9. Answer the phone: "Answer the phone", voice recognition.
10. Reject the call: "Hang up the phone", voice recognition.

Tips for use

1. Please read the instructions carefully before using this product and keep this manual.
2. For the first time, please fully charge this glasses.
3. If the glasses does not charge for a long period of time (more than two weeks), charge it before use.

Warning

1. Do not dismantle or repair this product for any reason, as this may result in fire. Electronic breakdown or even complete damage to the product.
2. Do not place the device in an environment where the temperature is too low or too high (below 0°C or above 45°C).
3. Do not contact the product with corrosive liquids or immerse them in liquids.
4. Do not expose the glasses to the sun for a long time, otherwise it will be easily deformed, broken and broken.
5. Do not place the magnetic end of the charging cable close to metal objects to prevent the risk of short circuit caused by magnetically attracting metal objects.

Safety information

1. Before using this product, please read all safety information to ensure correct and safe use.
2. Using a power supply, charger or battery not approved by the original manufacturer may cause fire, explosion or other hazards.
3. Please use the accessories approved by the manufacturer and matched with this model of equipment.
4. Use accessories approved by this manufacturer and compatible with this model. Please use the device within the temperature range of 0°C - 35°C, and store the device and its accessories within the temperature range of -20°C - 55°C. When the ambient temperature is too high or too low, it may cause equipment failure.
5. If the device uses a non-removable internal battery, do not replace the battery yourself to avoid damaging the battery or device. The battery can only be replaced by an authorized service center.
6. If charging is complete, disconnect the charger from the device, unplug the charger from the power outlet. Do not charge more than 12 hours.
7. Please keep the device dry.
8. If the equipment or any other parts do not work properly, please do not repair the product by yourself.
9. When connecting other devices, please refer to the connection method in the instruction manual, and do not connect unsuitable devices at will.

Use of Warnings

- Please follow the relevant laws and regulations and do not use headphones in the following environments.
- Such as gas stations, oil depots, chemical warehouses and other environments where flammable and explosive substances or chemicals are stored. Use of the device is strictly prohibited.
 - Do not use this device in hospital operating rooms, emergency rooms, intensive care units, etc.; in order to avoid interfering with the work of medical equipment, please keep away from pacemakers, hearing aids, cochlear implants and other medical equipment when using this device, please keep this More than 15 cm between the device and the pacemaker.
 - To use this device near personal medical equipment, consult your physician and device manufacturer.
 - Follow all safety warnings and regulations regarding the use of this device while driving.

- During thunderstorms, do not use it outdoors in order to avoid lightning accidents.
- When charging, do not make a call while charging.
- Do not charge the product in a place with high humidity such as a bathroom, or it may cause electric shock, personal injury, fire and damage to the charger.
- Please comply with the relevant legal provisions that are expressly prohibited in any environment.

Warranty certificate

During the product warranty period, non-human-damaged performance failures can enjoy the following three-guarantee services:


- Within 7 days from the date of receipt, if the product has a performance failure that is not artificially damaged, the user can choose to return the payment or replace the product with the same model and specification.
- Within 15 days from the date of receipt, the user can choose to replace the product with the same model and specification if the product has a performance failure that is not artificially damaged.
- Within one year from the date of receipt of the product, if the product has a performance failure that is not artificially damaged, the user can send it to the merchant for repair.

Warranty card


Dear users, this warranty card is the proof of your future warranty application, please cooperate with the seller to fill out and keep it in a safe place.

| | | |
|----------------------|------------------|--|
| User Information | User name | |
| | Contact number | |
| | Mail address | |
| | E-mail address | |
| | Postal code | |
| Products Information | Product name | |
| | Product model | |
| | Product bar code | |
| Sellers Information | Name | |
| | Address | |
| | Contact number | |
| | Postal code | |
| | Sale date | |
| Invoice number | | |
| Note | | |


Bluetooth connection schematic

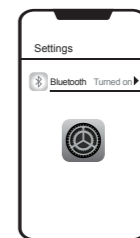


Go to settings

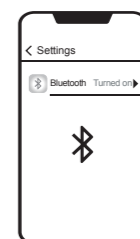

Select the Bluetooth option

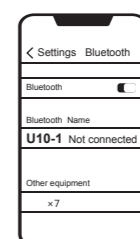

Make sure the Bluetooth switch is ON, search for the device name: U10-1, click the Bluetooth name to enter the connection.

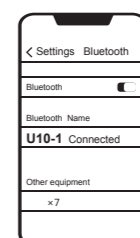

The bluetooth connection is successful.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.