
User manual

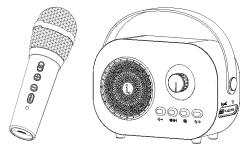


Welcome

Thank you for choosing to purchase this karaoke microphone. Which


industry adVanced technologyWith strong compatibility you can easily enjoy mobile song practice and KTV anytime andanywhere just by linking the audio playback deviceWish you a pleasant use!

Function

This karaoke microphone speaker setadopts advanced 1-wire communication technology, mobile phone karaoke Bluetooth connection, wireless accompaniment, and is fully compatible with current mainstream mobile phones. Whether you are a karaoke fan or an K fan you can eniOy the pleasure of karaoke with energy conservation and ease.

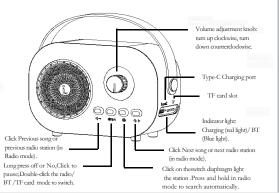

Instructions for microphone functions

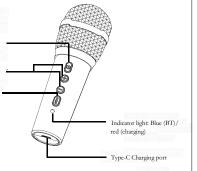

Function

1. Power button:

2. Volume adjustment key:

+ Click to turn up the volume.

- Click the microphone to turn

3. Voice key: Mode pre

switch: microphone mode/

Male to female/female to

male/Warcraft tone/child

eliminate the original sour

tone: Double click to

Long press release.

down the volume.

Long press off or No

Support Bluetooth connecton to play music/support TF card to play music/karaoke sound reinforcement function/built-n reverberation sound effect function/headphone output function.

Accessories







Type-c cable



Instructions



Accessories Loudspeaker bo xType-c cable

Microphone nstructions

Precautions for using speaker microphone

Switch on / off-

When the machine is turned off, the product starts automatically with the Chang An On/Oft key. When the TF is not inserted when the card is used it will enter the Bluetooth mode by default and the voice prompt will be Bluetooth mode";Long pressThe ON/OFF key turns off the m

Bluetooth connectivity-

Open your phone's Bluetooth settings, search for the device

then make a pairing connectionAfter the connection s succe -ssful, there will be a prompt tone and the blue Light will alw avs be on.

Mobile Playback-

After the Bluetooth connection is successful open the mobile mu -sic player and download your favorite songs or the accompaniment can be played.

and the volume can also be adjusted to the appropriate level on the mobile phone

Tf card play-

Insert the TF card into the device and the device will automatically pla v the music in the TF card.

Sound adjustment-

The volume of microphone and accompaniment can be adjusted through the buttons on the device control panel.

Charge-

Connect the standard charging line to the charger for chargin g.The red light iS always on when charging, and t is full off.

Attention

1.Please disconnect the charger and turn it off before cleaning the machine. 2. Non professionals are not allowed to disassemble the equipment by them selves to avoid machine failure and loss of warranty rights.

- 3.Please do not place the equipment in the direct sunlight to avoid prematur e aging of electronic parts.
- 4. Avaid using in places with flying dust or dirty environment (dust s easy tocau se equipment failure
- 5.Do not place the equipment in an excessvely cold or overheated environment, which may cause the equipment to fail to operate normally 6.t is recommended that the ambient temperature of the equipment used should not exceed-10C-40C. Which is relatively moderate 10%-95%
- 7. Please do not put any objects into the equipment to avoid short circuit or circuit damage.Please do not spill any liquid on the product.
- 8. Avaid friction and collision between the machine and hard objects to avod sc ratching, falling off or other hardware damage 9. The product shall not be exposed to the sun fire or similar overheating
- 10.It is forbidden to dsassemble impact, squeeze or put the product into fire. If the battery has serious failure. Do not continue to use.
- 11. This manual contains important information please reserve it.

1. Press and hold the speaker power on key to start the machine and the voice prompt "Bluetooth mode" will flash at the same time. Connect the success blue light is always on

- 2.Turn on the mobile phone Bluetoath and scan, search for the device, and hen pair and connect, and you can hear it after connecting The devce sends a
- successful connection tone.
- 3. After the microphone is turned on it will automatically pair the speakers When the microphone is not paired the blue light will flash and the Bluetoothight will flashalways bright
- 4. Bluetooth connection name: C30 Pro.

Note: After the device is connected to the mobile phone once. Bluetooth has a memory function, and it will automatically connect when the phone is turned on. To disconnect disconnect Bluetooth through the phone settings If you listen to music only you can turn the microphone volumeadjust to the

Sing K audio & microphone features

Intelligent anti squealing-Sing loudly without howling within 10cm.

High radio sensitivity-

It is easy to sing with a 5-10cm microphonele. microphone is loud and has good sound quality

Low latency-

he delay is less than 40ms.

Al functions-

5 kindsound effects: One click to cancel the orginal sound; Flexible adjustment of accompaniment reverberation and microphone volume.

avative and subject to change without notice

Information

(common with mobile phone charger)

Charging duration:about 2.5 hours

Product name: Hand, help karaoke sperker Product model:C30 Pro Note: The company's products are constantly innovative

and subject to change without notice Nate: The company's products are constantly inn

Speaker

Bluetooth version:5.3

Horn diameter:57mm

Working voltage:3.7V

Frequency range:20Hz-20kHz

Charging duration: 2-3 hours

Microphone

Frequency range:20Hz-20kHz

Power adapter:DC5V 1A

Working voltage:3.7V

Reverberation:echo sound effect

reverberation Power adapter:DC5V≤1A

Pickup:back pole condenser microphone

(common with mobile phone charger)

Horn power:5W

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.