







CHATMASTER

ChatMaster CUBE

User Manual

contents

 English	P01-P09
 한국어	P10-P18
 日本語	P19-P27
 中文	P28-P36

Chatmaster User Guide

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF exposure statement:

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance between 20cm the radiator your body.

APP Download


Download the app and search for "Chat Master Speaker" (note the space) on the App Store.

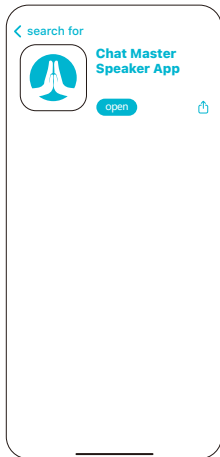


Account Registration


Email Account Registration

 Register an account with your email, sign in with your new account, and then log in.

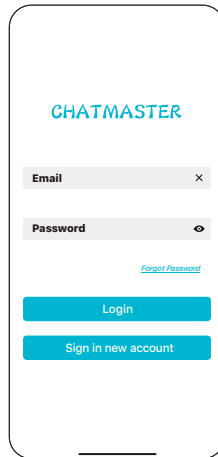


Device Network Setup

 The device's blue light flashes when powered on. Wait for about twenty seconds, and the yellow light will start circling, indicating it's in pairing mode. If the yellow light doesn't start circling, press and hold the circular button for six seconds until the yellow rotating light appears, then release the button .

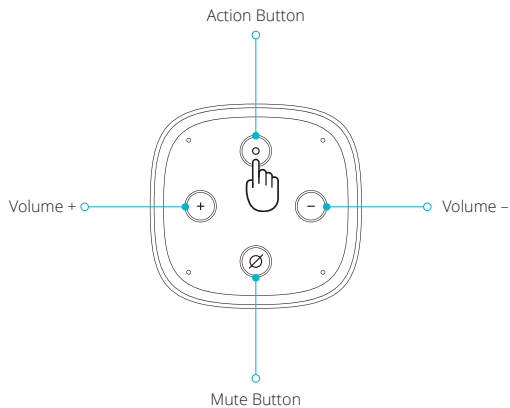


Device Addition

 Add the device and make sure your phone's Bluetooth is turned on.

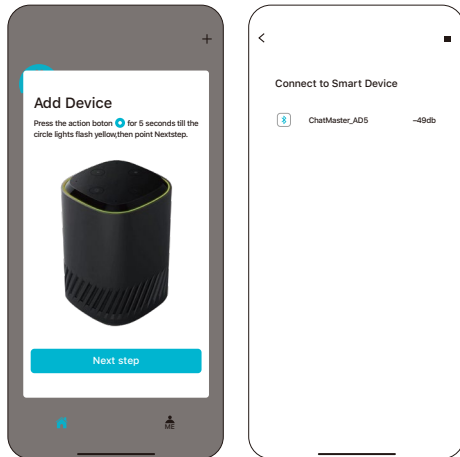


Select Wi-Fi

 and enter the password.

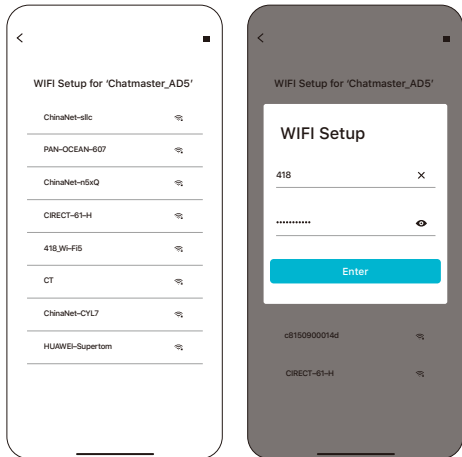


Successfully added the device

 the yellow light is off, and you can summon Alexa to use the ChatGPT conversation feature.

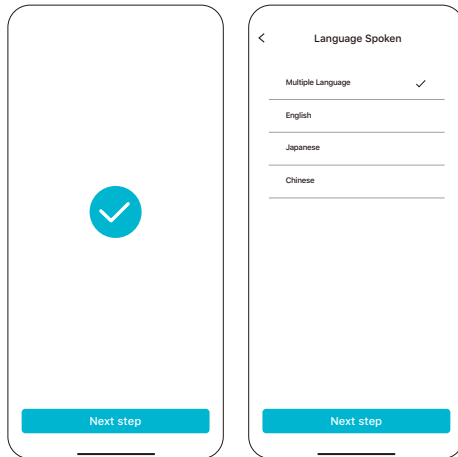

Alexa Settings

 To continue activating Amazon Alexa functionality with your Amazon ID, click 'Login with Amazon.' If you don't have an Amazon ID, you can skip Alexa activation without affecting ChatGPT functionality.

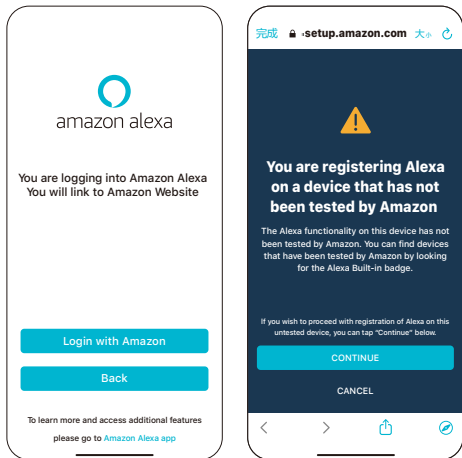

Instructions

"After successful pairing, the lights go off. Wake the device with 'Alexa,' and the green light comes on with a 'ding' sound, quickly initiating the conversation. Ask, 'How many cats are in Disney movies?' After hearing the 'ding' sound, the yellow-green light blinks for about 3 seconds, and the speaker starts playing the response. During the response, you can interrupt with 'Alexa' again and ask another question."


Short press the Action button to switch to Amazon AI or ChatGPT.

Button Functions:		Indicator Light Instructions	
Volume Up	Network Setup/Switch Button	Orange light cycling	Network Setup Status
Volume Down	Mute/Microphone Off	Blue light illuminates in a circle	Alexa Wake-Up/Normal Startup
		Blue and White Light Cycling	WiFi is connecting
		Red light stays on continuously	Network Disconnection/MUTE
		Green light illuminates in a circle	ChatGPT waiting for questions state

Chatmaster 사용자 가이드

앱 다운로드“

 
앱을 다운로드하고 "Chat Master Speaker" (공백 주의)를 App Store에서 검색하십시오.

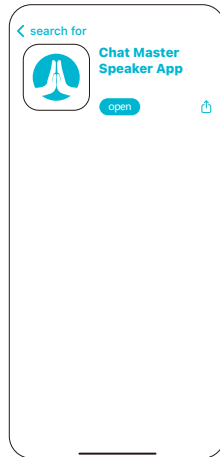

계정 등록


이메일 계정 등록

 이메일로 계정을 등록하고, 새 계정으로 로그인한 다음 로그인하세요.

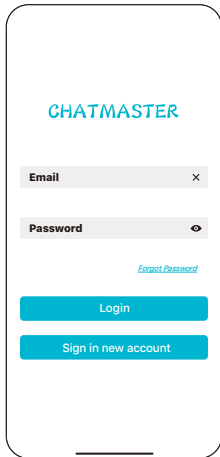


장치 네트워크 설정

 장치 전원을 켤 때 파란 불이 깜박입니다. 약 20초 정도 기다린 다음 노란 불이 돌아가기 시작하면 페어링 모드로 진입한 것입니다. 노란 불이 회전하지 않으면 원형 버튼을 6초 동안 누른 상태로 유지한 다음 노란 회전 불이 나타날 때까지 버튼을 놓으십시오. Ⓞ

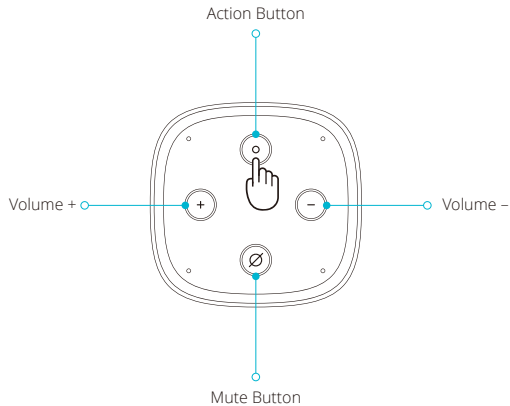


장치 추가

 장치를 추가하고 휴대폰 블루투스가 켜져 있는지 확인하십시오.

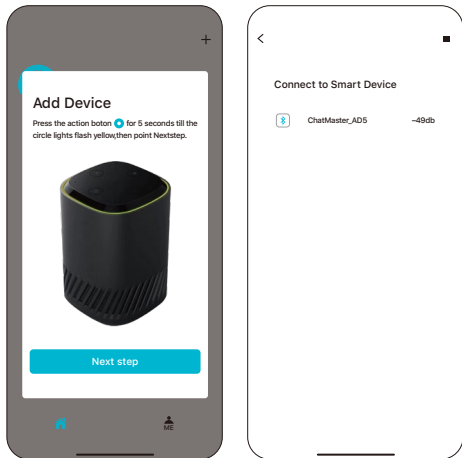


Wi-Fi를 선택하고

 비밀번호를 입력하세요.

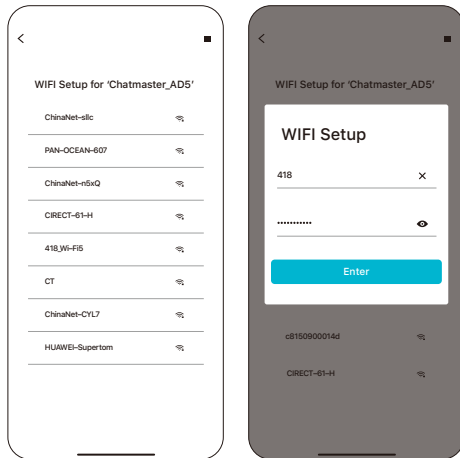


장치를 성공적으로 추가하고

 노란 불이 꺼져 있으며 Alexa를 호출하여 ChatGPT 대화 기능을 사용할 수 있습니다.

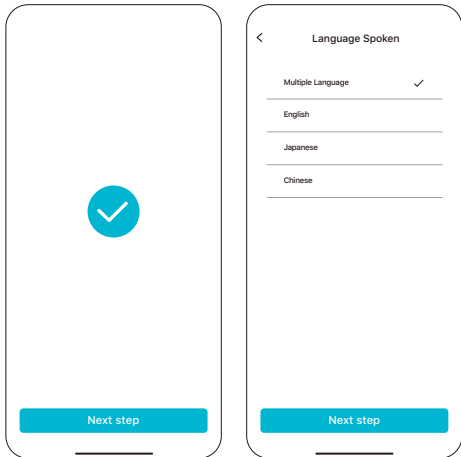


Alexa 설정

 Amazon I를 사용하여 Amazon Alexa 기능을 계속 활성화하려면 'Login with Amazon'을 클릭하십시오. Amazon ID가 없는 경우에도 ChatGPT 기능에 영향을주지 않고 Alexa 활성화를 건너 뛸 수 있습니다.

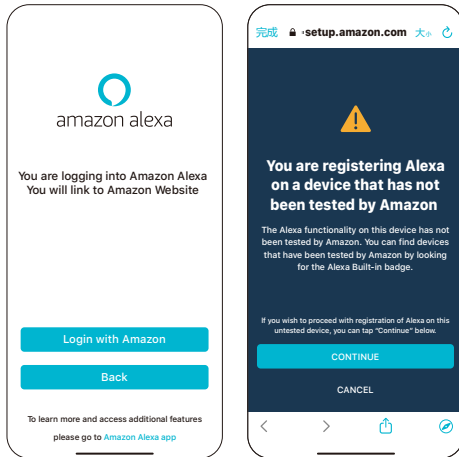

사용 방법

"성공적인 페어링 후, 불빛이 꺼집니다. '알렉사'로 장치를 깨우면 녹색 불빛이 '딩' 소리와 함께 켜져 대화가 빠르게 시작됩니다. '디즈니 영화에는 고양이가 몇 마리 있나요?' 라고 물어보세요. '딩' 소리를 듣고 나면 노란색-초록색 불빛이 약 3초 동안 깜박이며 스피커가 응답을 재생합니다. 응답을 듣는 동안 다시 '알렉사'로 인터럽트하여 다른 질문을 할 수 있습니다."

Action 버튼을 짧게 누르면  Amazon AI 또는 ChatGPT로 전환됩니다.

버튼 기능:	
 볼륨 높임	 네트워크 설정/ 스위치 버튼
 볼륨 낮춤	 음소거/마이크 끄기




The diagram shows a device with four buttons: 'Action Button' at the top, 'Mute Button' at the bottom, 'volume +' on the left, and 'volume -' on the right. Lines connect the text labels to their respective buttons.

표시등 설명	
주황색 빛이 순환됩니다	네트워크 설정 상태
파란 빛이 한 바퀴 돌아옵니다	정상 시작/아마존 Alexa 깨움
파란색 및 흰색 빛 순환	WiFi가 연결 중입니다
빨간 빛이 계속 켜져 있습니다	네트워크 연결 끊김/MUTE
초록색 빛이 한 바퀴 돌아옵니다	ChatGPT 질문 대기 상태

Chatmaster ユーザーガイド

アプリのダウンロード

 
アプリをダウンロードして、App Storeで「Chat Master Speaker」(スペースに注意)を検索してください。

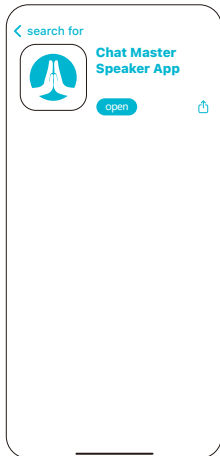

アカウント登録


メールアカウントの登録

 メールでアカウントを登録し、新しいアカウントでサインインしてからログインしてください。

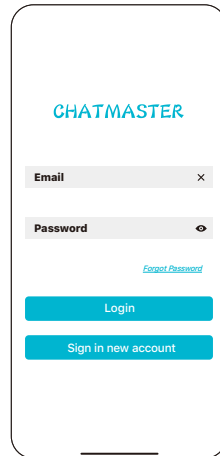


デバイスのネットワーク設定

 デバイスの電源を入れると、青いライトが点滅します。約20秒待つてから、黄色のライトが回転し始め、ペアリングモードに入ったことを示します。黄色のライトが回転しない場合、円形のボタンを6秒間押し続け、黄色の回転ライトが表示されるまでボタンを離してください。⊙

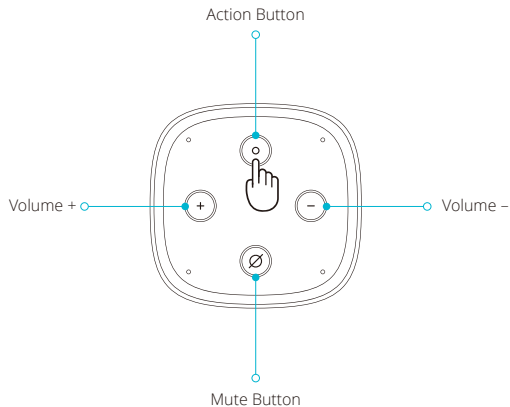


デバイスの追加

 デバイスを追加し、携帯電話のBluetoothがオンになっていることを確認してください。

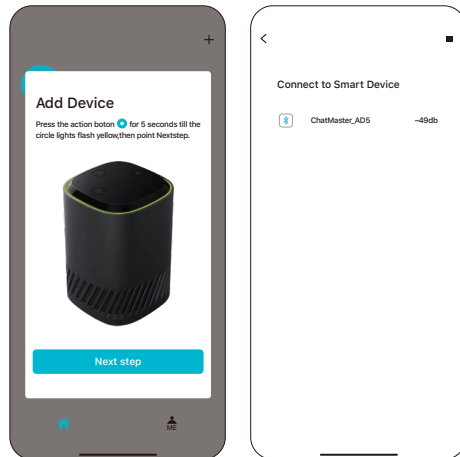


Wi-Fiを選択

 し、パスワードを入力してください。

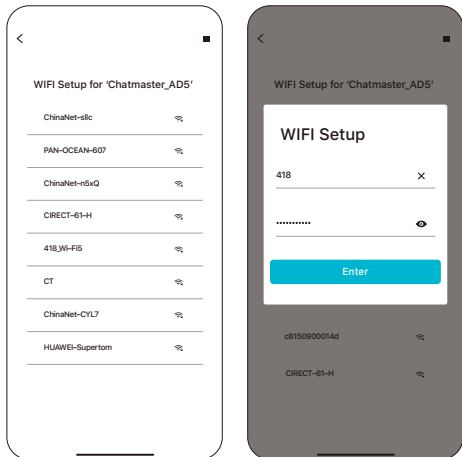


デバイスの追加に成功し

 黄色のライトが消え、Alexaを呼び出してChatGPTの会話機能を使用できます。

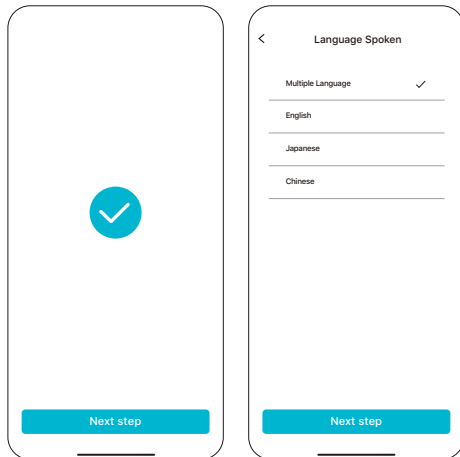

Alexa 設定

 Amazon IDを使用してAmazon Alexaの機能を続行するには、「Login with Amazon」をクリックしてください。Amazon IDがない場合でも、ChatGPTの機能に影響を与えずにAlexaのアクティベーションをスキップできます。

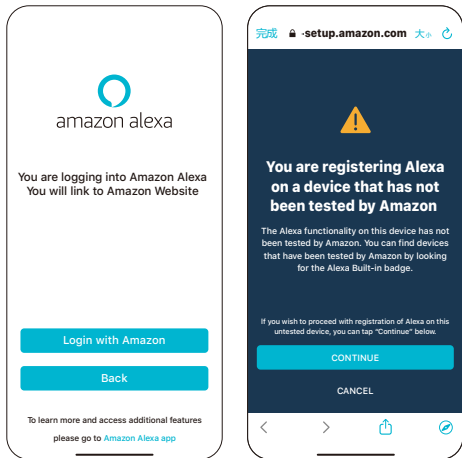

使用方法

"ペアリングが成功した後、ライトは消えます。'Alexa'でデバイスを起動すると、グリーンライトが 'ディン' という音と共に点灯し、会話がすばやく開始されます。'ディズニーの映画には何匹の猫がいますか?' と尋ねます。'ディン' の音を聞いた後、黄緑色のライトが約3秒間点滅し、スピーカーが応答を再生します。応答中に再び 'Alexa' で割り込んで別の質問をすることができます。"


Actionボタンを短押しすると、Amazon AIまたはChatGPTに切り替えることができます。

ボタンの機能:		インジケータライトの説明	
⊕ 音量を上げる	⊙ ネットワーク設定/切替ボタン	オレンジ色のライトが循環します	ネットワーク設定の状態
⊖ 音量を下げる	⊘ ミュート/マイクオフ	ブルーのライトが一瞬点灯します	正常な起動/Alexa 起動
		青と白のライトサイクリング	WiFi が接続中です
		赤いライトが一貫して点灯します	ネットワーク切断 /MUTE
		緑のライトが一瞬点灯します	ChatGPTが質問待ちの状態

Chatmaster 操作指南

APP下载

 
下载app，在商店中搜索 chat master speaker。

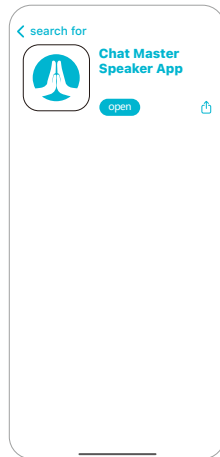

账号注册


邮箱账号注册

 使用邮箱注册帐号，登录新账户，然后进行登录。

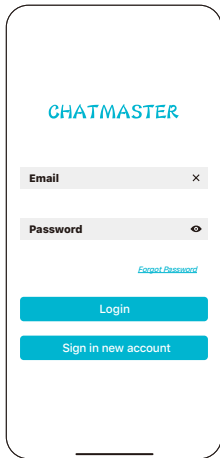


设备配网

 设备开机蓝灯闪过，二十秒黄灯转圈进入配网状态，如果没有黄灯旋转则按住 圆点 标记按钮6秒 直到出现黄色旋转灯 松开按钮。⊙

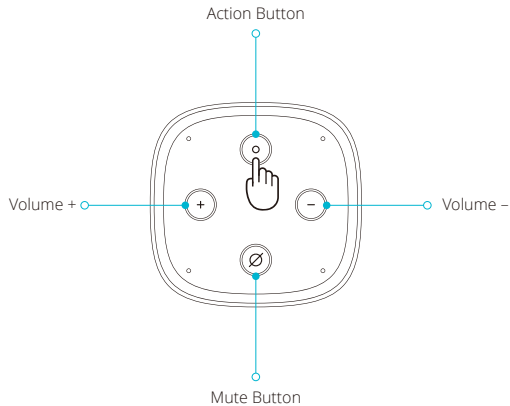


设备添加

 添加设备，确保手机蓝牙打开

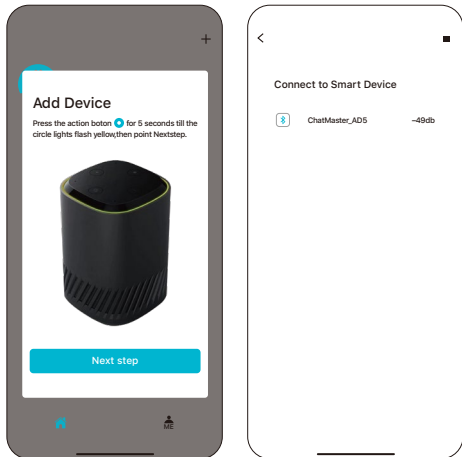


选择Wi-Fi

 输入密码

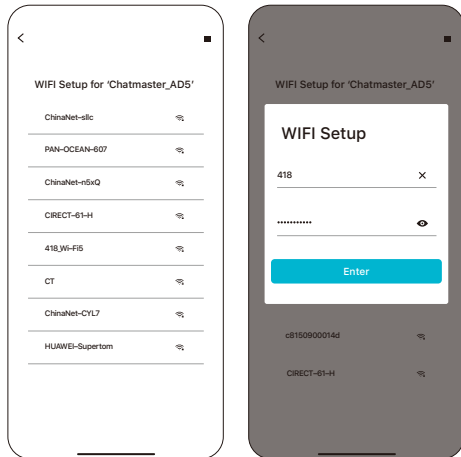


成功添加设备

 黄灯熄灭，可以呼唤Alexa 和使用ChatGPT对话功能

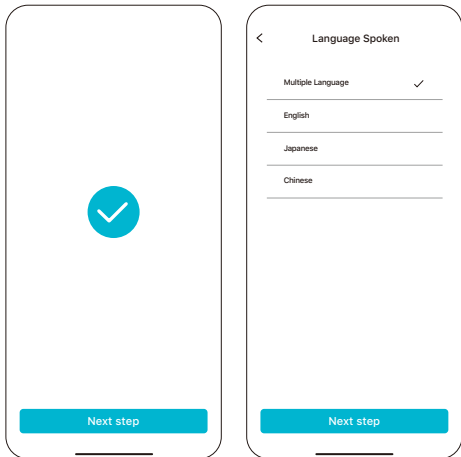

Alexa设置

 用亚马逊ID继续激活亚马逊Alexa功能，点击Login with Amazon
(如果没有亚马逊ID可以不激活Alexa 不影响ChatGPT功能)

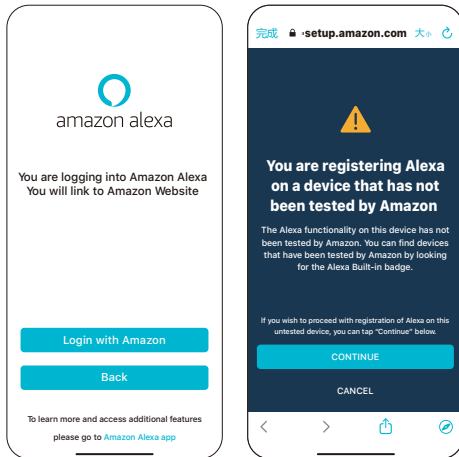


使用方法

配网成功后灯光熄灭。

用“Alexa（阿莱科撒）”唤醒设备，绿灯亮起，听到咚的一声，迅速开始问话。

问：“迪斯尼电影里面有多少只猫？”听到“咚”的一声后，黄绿灯闪烁约3秒，音箱开始播报回答。

在收听回答期间，可以再次使用“Alexa”打断，并再次发问。

短按Action按钮 ，可以切换到亚马逊AI或ChatGPT。

按键功能如下	
 音量 +	 配网/切换按钮
 音量 -	 静音/禁麦

Action Button	
	
volume +	volume -
Mute Button	

指示灯说明	
橙色灯循环	配网模式
蓝色灯亮一圈	开机提示 / Alexa正常唤醒
蓝白灯循环	WiFi正在链接
红色灯常亮	MUTE / 网络断开
绿色灯亮一圈	ChatGPT 等待问话状态



CHATMASTER