




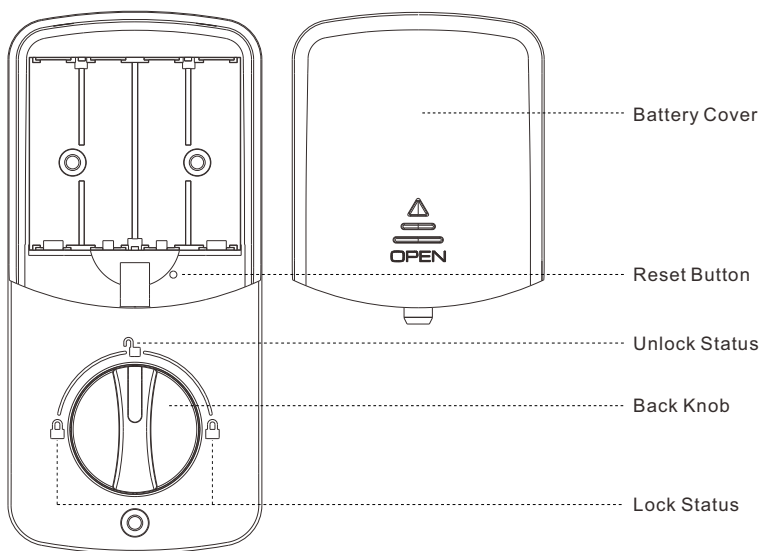


## Details

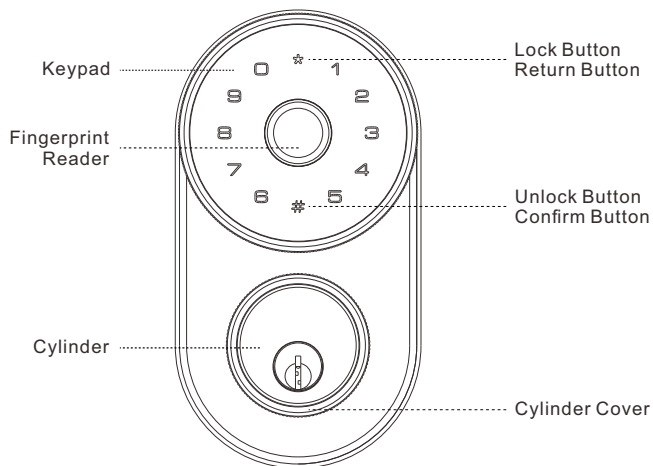


## Parts list

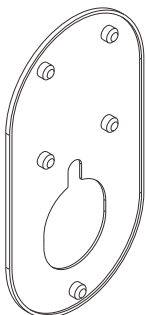

Silicone Pad x 1

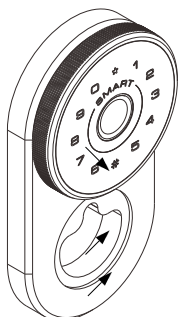

Exterior Assembly x 1

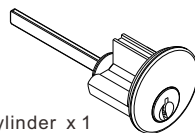


Cylinder x 1



Cylinder  
Cover x 1




Key x 2

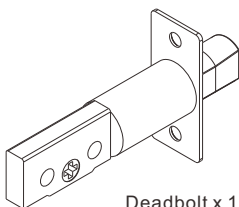


Deadbolt x 1



 
Striking  
Plate x 1




Hole Aligning  
Device x 1

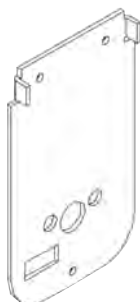

Mounting Plate x 1

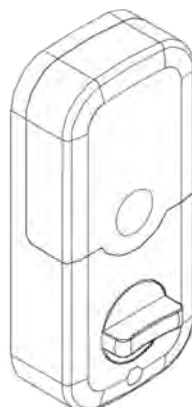

Interior Assembly x 1

 

Screw Bar x 2



Pan Head Screw x 2



Screw x 3



Self-Tapping Screw x 4



Reset-Pin x 1

## Parameters

Unlock way:  
Fingerprint/Password/Key/Tuya Bluetooth

Material:  
Aluminum profile+PC+Silicagel


Available thickness:  
35mm ~ 50mm


Power supply:  
4\*AA alkaline battery

Working voltage: 6V  
Alarm voltage : 4.8V


Code capacity:  
Fingerprint: 50 sets  
Password: 30 sets  
One-time code: 10 sets  
The first fingerprint and password are administrators

### Overall

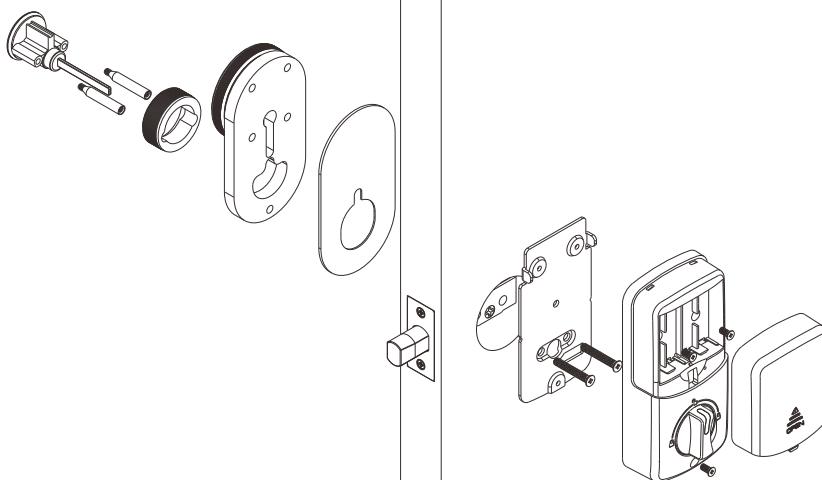


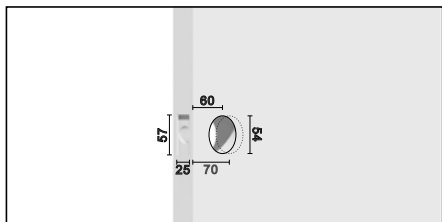


01. According to the template, hole in the door and door frame.

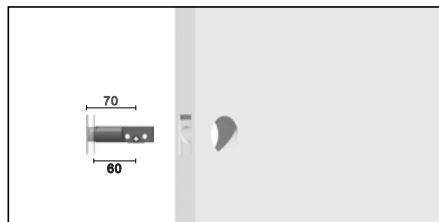


02. According to the demand, adjust the size of the deadbolt.

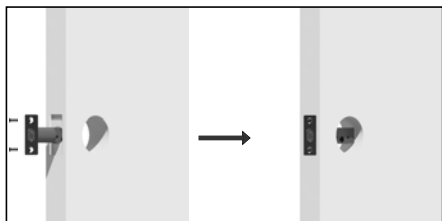

03. Put the deadbolt into the hole digged on the door. Fix it on the door with two self-tapping screws.

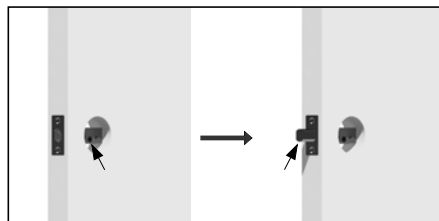


04. Turn the follower and keep the latch bolt out.

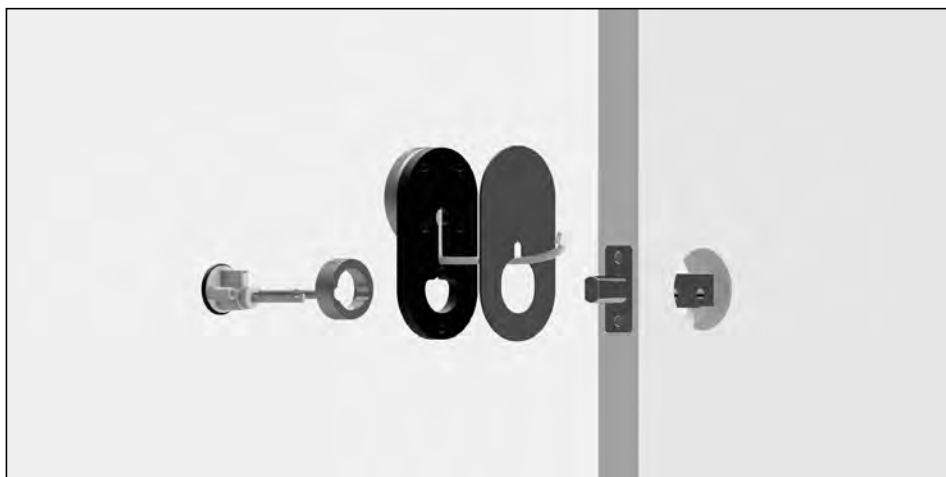

05. Assemble exterior assembly as shown.


## Installation

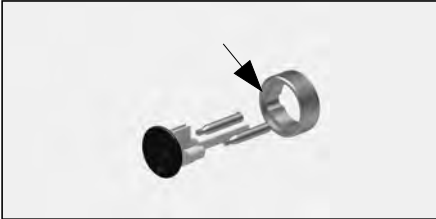


06. Install the two screws bar on the cylinder and insert the cover into the cylinder. Please pay attention to the position of the cylinder cover as shown.




07. Install the silicone pad on the front panel and place the lock cylinder and cover inside it.

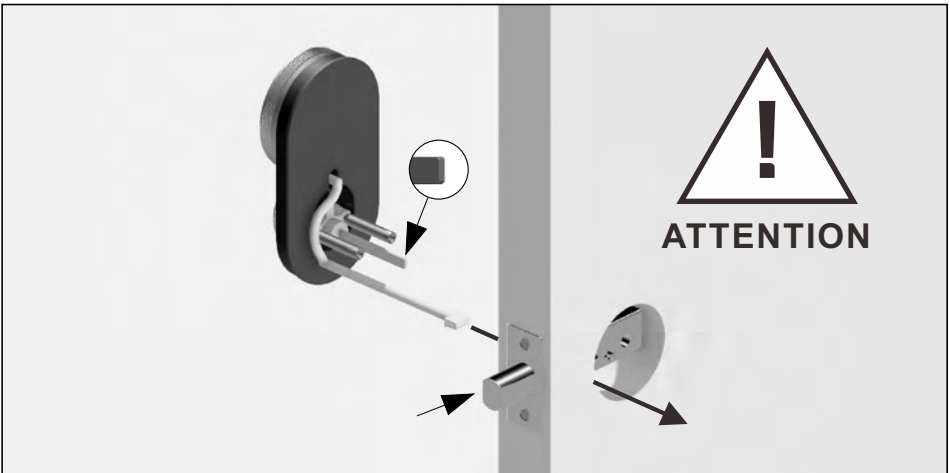


08. As shown in the picture, turn and keep the spindle in a vertical. Please make sure the latch bolt is out before installation.

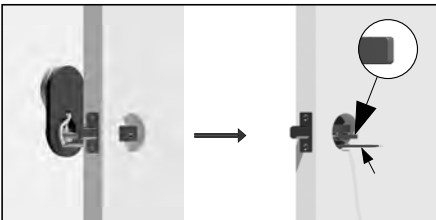


09. Insert the Exterior Assembly into the door hole. Make sure the spindle passes vertically through the latch and route the cable below the latch.

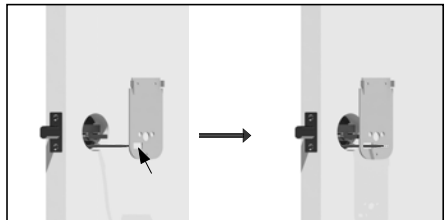

10. Wear the cable into the square hole of the mounting plate.

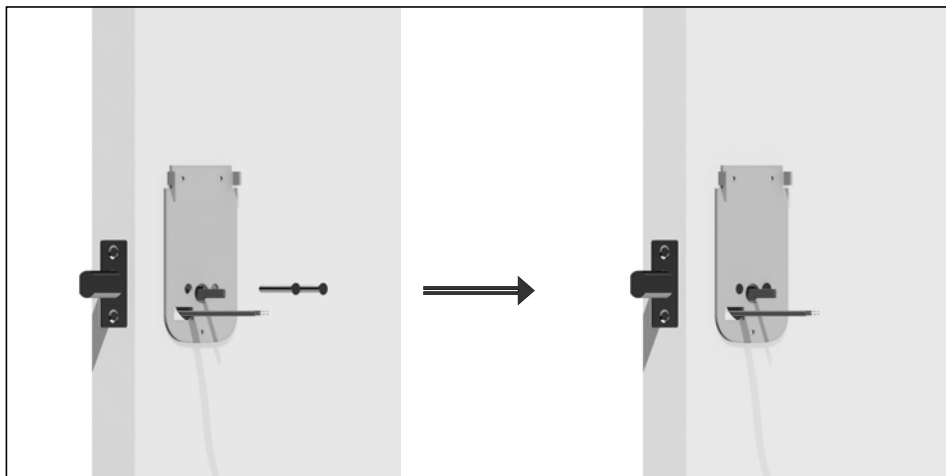


11. Fix the mounting plate on the door with two pan head screws.

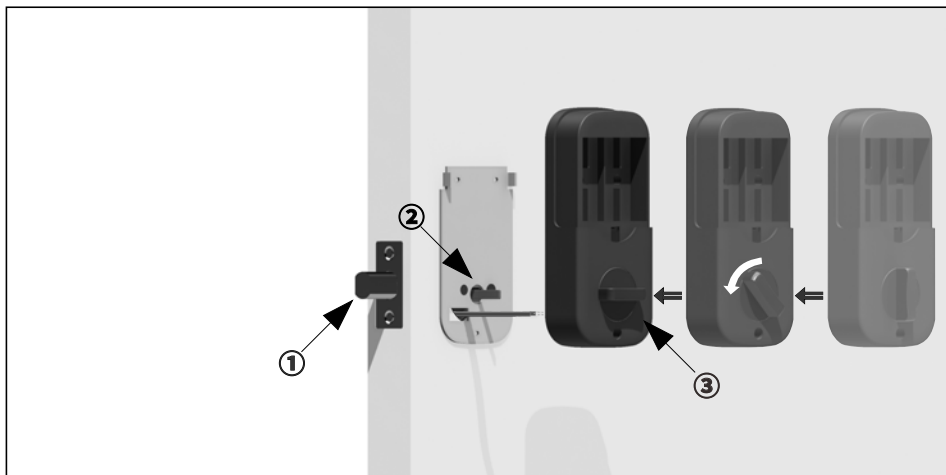


12. ①Make sure the latch bolt is extend  
 ②Make sure the lock ruler is vertical  
 ③Turn the knob left or right base on the position of the latch bolt .If the latch bolt is on the left, rotating knob to the left as shown .


## Installation

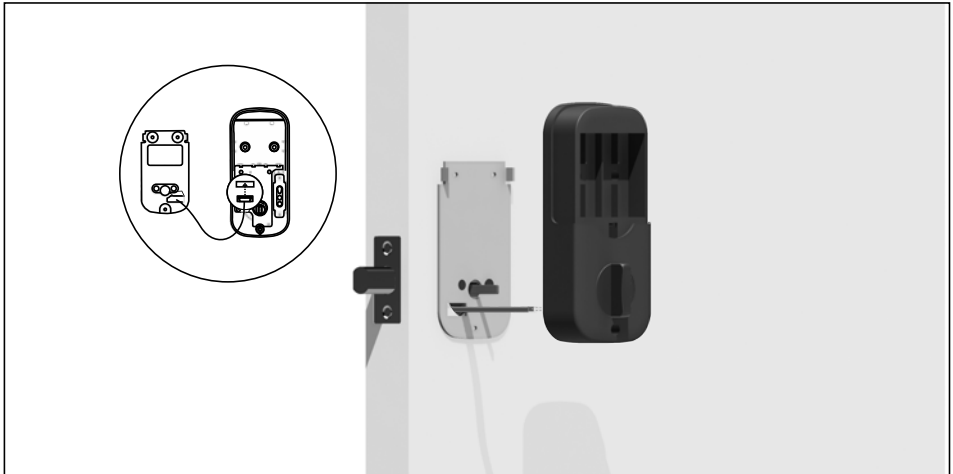


13. Connect the cable and ensure connection is tight.

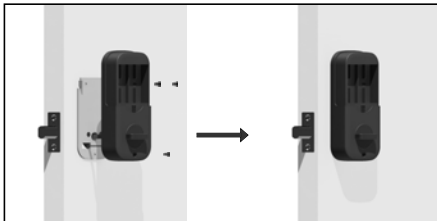

14. Fix the Interior Assembly on the mounting plate with three screws.

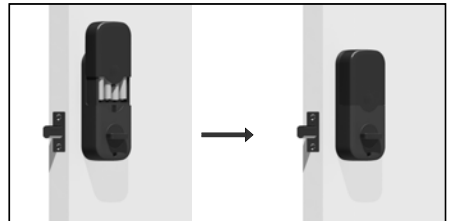

15. Install 4 pcs AA alkaline battery and the battery box.

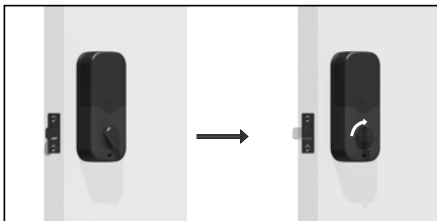

16. Turn the knob to test lock and unlock. Check the completion.



17. Twist the back knob manually to extend the lock bolt and keep it extended. Refer to the following settings to set the locking direction.



## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines. This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

**Important note:**

1. After installation is complete, please use the key and back knob to test the lock and unlock separately.  
After the test is completed, be sure to perform **A-Self check adjustment locking direction function.**
2. Factory default password: 123456. When the device does not enter user information, the administrator password is "123456" in the factory default state.
3. Requires wake by touch to use password keyboard.
4. The lock off button " \* " has both locking and return functions, while the unlock button " # " has both unlocking and confirmation functions.
5. The lock can be closed using the lock button or with any fingerprint or press and hold the " \* " key for 1 second.
6. After 10 incorrect inputs, the system locks for three minutes. The door lock cannot be operated within three minutes. When the system is locked: Red light flashes and beeps three times. You can unlock the system in advance by unplugging the battery.
7. The password length is 6-10 digits and has a virtual password function. You can enter any number before or after the correct password to unlock it. The total length of the dummy password is 40 digits.
8. It is recommended that users input the same finger multiple times to improve their fingerprint recognition rate.

**A-Self check adjustment locking direction function:**

1. Keep the door open, use the back knob to push out the lock bolt to keep the lock in locking state.  
Note: Executing in the unlocked state will cause the door lock to not work properly.
2. Make sure the door lock is locked, press " \* "+" # "+" 9 "+" # " , the device will automatically detect and adjust the unlocking direction. If the device has already entered user information, the administrator needs to be verified to perform the operation.
3. When executed successfully, the door lock will automatically unlock, and then long press "" to automatically lock, otherwise please re-execute the first and second steps.
4. When the door lock cannot be used normally, through the self check function can be adjusted to the normal state.

**B-Add user:**

1. Press " \* "+" # "+" 1 "+" # " , the green light keeps flashing to prompt the administrator to authenticate. (The administrator password is "123456" in the factory default state). After successful verification, User fingerprint or password information can be entered. It takes 5 times to enter your fingerprint. If entering a password, enter the 6-10 digit password and press "#", then enter the same password again and press "#". When the input is successful, the fingerprint head will light up blue and make a long beep. After the input is completed, the green light will continue flashing, prompting you to continue entering the next set of user information. You can press "" to return to the menu. It will automatically exit menu and turn off the light after time out.
2. Fingerprints can be entered into 50 groups, and passwords can be entered into 30 groups. By default, the first fingerprint and password are administrators.

## Setup

### **C-APP Bluetooth pairing:**

1. Press "\*"+"#"+"2"+"#", the green light keeps flashing to prompt the administrator to authenticate (The administrator password is "123456" in the factory default state). After successful verification, the green light keeps flashing and the Bluetooth pairing state will be activated and last for 1 minute.
2. Open the APP, the product icon will automatically pop up for users to add. For detailed operation, please refer to **"APP SETUP"**

### **D-Add temporary password:**

1. Press "\*"+"#"+"3"+"#", the green light keeps flashing to prompt the administrator to authenticate (Unable to add temporary password under factory default settings). After successful verification, enter 6 to 10 digits of the password and press "#". Then enter the same password again and press "#". When the input is successful, the fingerprint head will light up blue and make a long beep. After the input is completed, the green light will continue flashing, prompting you to continue entering the next set of temporary password.
2. A total of 10 sets of temporary passwords can be entered.
3. The temporary password will expire after being used once.

### **E-Delete users:**

Press "\*"+"#"+"4"+"#", the green light keeps flashing to prompt the administrator to authenticate. After successful verification, then automatically turn off the light and exit the menu, the information of all registered ordinary users will be cleared, but the information of administrators will be kept.

### **F-Vacation mode:**

1. Press "\*"+"#"+"5"+"#", the green light keeps flashing to prompt the administrator to authenticate. After successful verification, then automatically turn off the light and exit the menu, the system switches to vacation mode.
2. In vacation mode, only administrators can unlock it, and regular users cannot unlock it. When regular users unlock it, the device will light up red and then alarm.
3. Release vacation mode: Repeat the above action.

### **G-Mute mode:**

1. Press "\*"+"#"+"6"+"#", the green light keeps flashing to prompt the administrator to authenticate. After successful verification, then automatically turn off the light and exit the menu, the system switches to mute mode.
2. Release mute mode: Repeat the above action.

### **H-Delayed automatic locking function:**

1. Press "\*"+"#"+"8"+"#", the green light keeps flashing to prompt the administrator to authenticate. After successful verification, enter a number within 5-30 and press the "#" key. The blue light will stay on for one second and make a long beep, then automatically turn off the light and exit the menu. Set delay automatic locking successfully.

2. Repeat the above action, enter number "0" and press the "#" key to cancel delayed automatic locking.
3. The number "5-30" represents 5 to 30 seconds, which can automatically lock according to the selected time.



### **I-Factory reset function:**

#### Method 1:

Press the "\*"+"#"+"0"+"#", the green light keeps flashing to prompt the administrator to authenticate. When the verification is successful, will hear a prompt sound, and then the device will restart, indicating that the reset is successful.

#### Method 2:

Open the battery compartment cover and insert the needle of the screw package into the hole below the Reset. Press and hold the Factory reset key for 5 seconds. When hear the beep that reset successful.

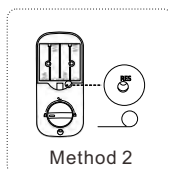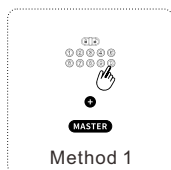

### **J-About Low Battery Alarm:**

When the battery voltage is lower than 4.8V, the device will illuminate a red light alarm. Please replace the battery in a timely manner.

### Menu table


1	Add user: "*"+"#"+"1"+"#"	Default Settings	123456
2	Add Bluetooth pairing: "*"+"#"+"2"+"#"	Default Settings	No
3	Add a one-time code: "*"+"#"+"3"+"#"	Default Settings	No
4	Delete user code: "*"+"#"+"4"+"#"	Default Settings	\
5	Vacation mode: "*"+"#"+"5"+"#"	Default Settings	Off
6	Silent mode: "*"+"#"+"6"+"#"	Default Settings	Off
7	Null	Default Settings	\
8	Delayed auto-lock: "*"+"#"+"8"+"#"	Default Settings	Off
9	Self-test Function: "*"+"#"+"9"+"#"	Default Settings	\
0	Restore to factory default settings	Default Settings	Above

### **1-App Installation:**

- A. Download and install the "Smart Life" app from the mobile app store than register and log in.
- B. Search the "Smart Life" app through your browser, download and install it than register and log in.
- C. Scan the QR code on the right to download the "Smart Life" app than register and log in.

### **2-Connect the lock with the "Smart Life" App:**


- A. Turn on your mobile bluetooth and positioning.
- B. Wake up the lock and press " \* "+" # "+" 2 "+" # ", the green light keeps flashing to prompt the administrator to authenticate (The administrator password is " 123456 " in the factory default state). After successful verification, the green light keeps flashing and the Bluetooth pairing state will be activated and last for 1 minute.
- C. Open the smart life app, the device will automatically jump out, the device name is "Deadbolt Lock", click "Add" to add the device, after the download is completed, click "Next" to modify the device name, and then click "Done" can be.

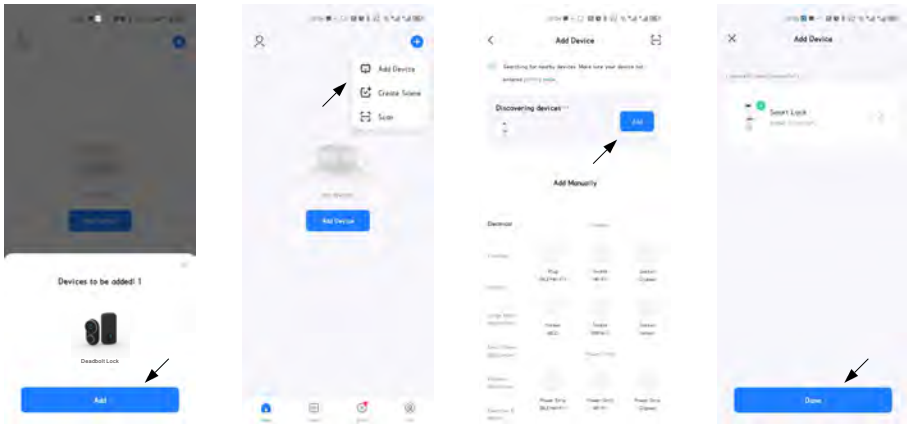


### **3-Member management**

#### **A. Family members:**


Click "Member Management" under the unlocking interface to enter the member management interface, then click "+" in the upper right corner, click "Add Now" to add family members. Then enter the family member's name and Smart Life app account number, then click "Save" and your family member will receive your invitation message.

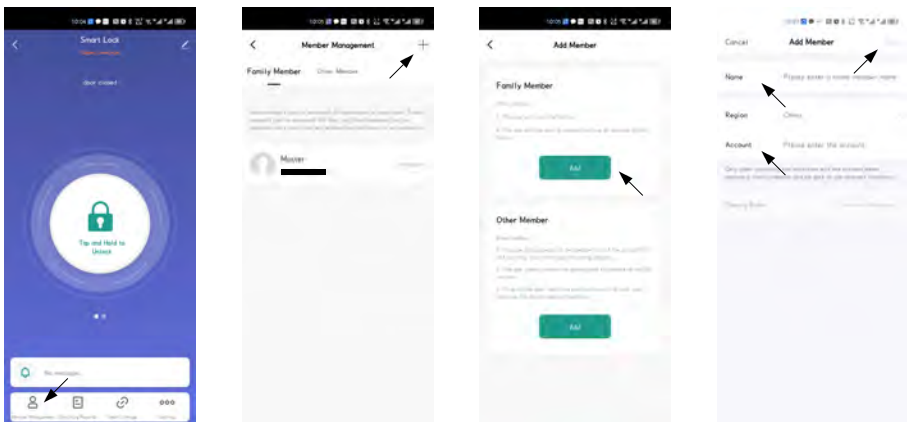

Delete family members: My → Family Management → "Name of the family you created" → click the name of the family member you want to delete, and then click Remove Member.

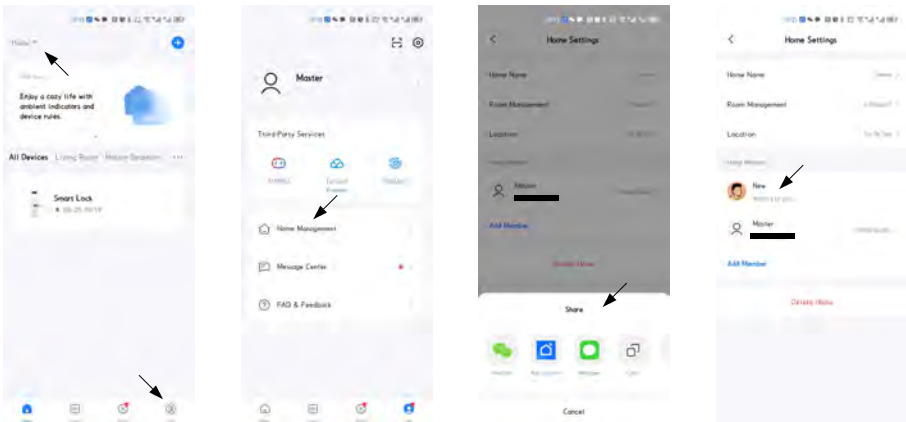

- B. Other members (this applies to limited-time users: such as rental houses, homestays, hotels, etc.) Click "Member Management" under the unlocking interface to enter the member management interface, then click "+" in the upper right corner, click "Add Now" to add other members. Then enter the member's "nickname" and set the unlock "Permission Settings" and "Expiration Date" and then click "Save". (The effective date must be set.) For other ways to delete a member, see Delete a family member. If the battery is replaced or the lock end is powered off, other member users cannot unlock the lock, and the administrator must connect the APP to refresh before the operation can be resumed.



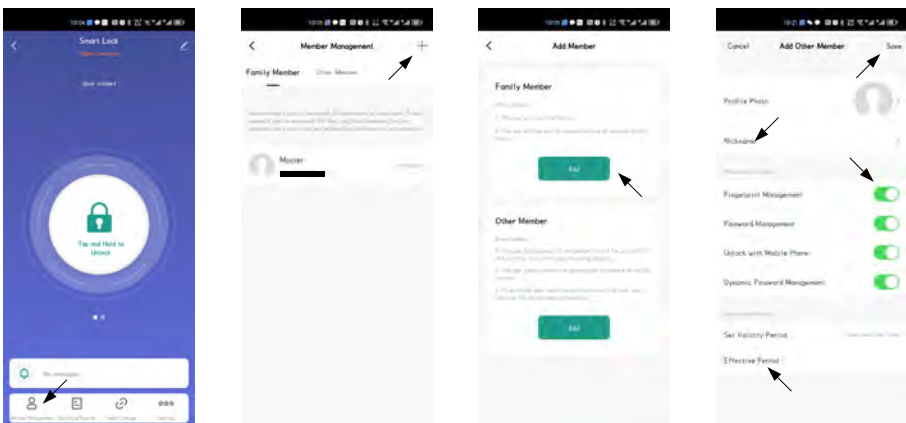


#### 4-Enter user information

Click "Settings" under the unlock page to enter the settings page

##### A. Enter fingerprint users:

Select "Fingerprint Management", click "Add Fingerprint", select the user you added earlier (family members/other users), then click "Start Collection" and enter the fingerprint on the lock as prompted (to ensure the integrity of the fingerprint entry, the location of each fingerprint entry should be different). After the entry is complete, enter the user's name and click "Finish". Only after entering the administrator fingerprint (at least one), other users' fingerprints can be entered (otherwise, the operation failed) will be prompted), and the first fingerprint of the administrator cannot be deleted; The fingerprints under the administrator have administrator attributes (such as verifying the administrator Fingerprint when restoring to the factory).

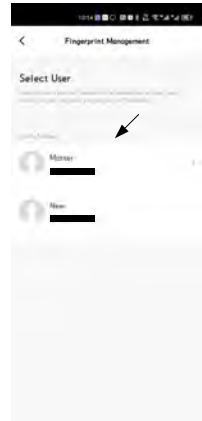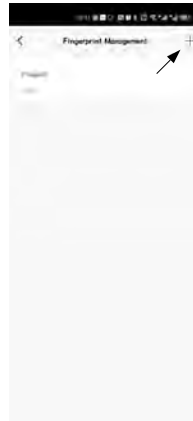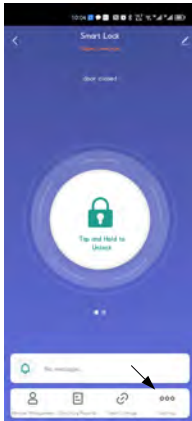

##### B. Enter password users:

Select "Password Management", click "Add Password", select the user you added earlier (family members/other users), enter the 6-digit password you need to set (it can also be randomly generated), enter the password user name, and click "Save"




### C. Temporary password management:

Temporary password management has one-time passwords (can only be used once during the validity period) and periodic passwords (can be used multiple times during the validity period). Select "Temporary Password Management", click "One-Time Password", only the administrator has this permission, enter the 6-digit password that needs to be set (can also be randomly generated), enter the password name, set the effective time and expiration time, and then click "Save".




Select "Temporary Password Management", click "Periodic Password", only the administrator has this permission, enter the 6-digit password that needs to be set (can also be randomly generated), enter the password name, set the effective time and expiration time, open the "Repeat" option to select the password cycle, click "Save".

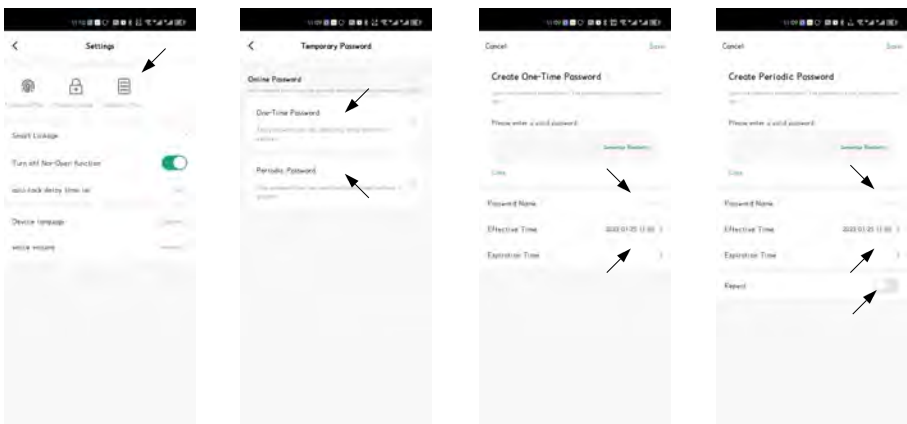



#### D-Generate dynamic password:

Swipe left on the lock opening page to the next page, click "Get Dynamic Password", send the dynamic password to the guest, and enter the dynamic password on the lock to unlock the lock. (Dynamic password age: 5 minutes).

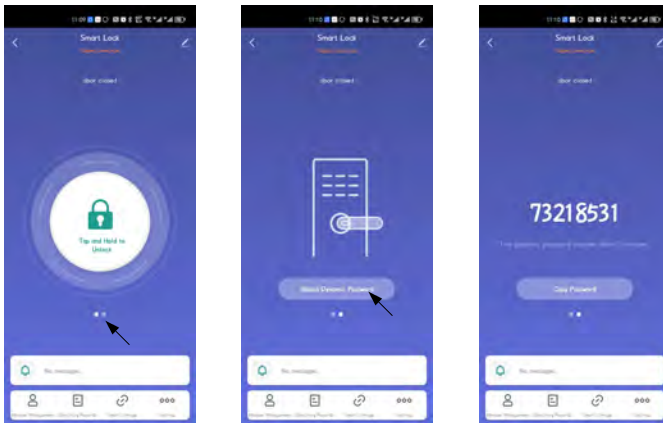

#### E-Restore factory settings on the smart life app:

(Only the administrator app can operate)

Click the edit button in the upper right corner of the unlock page, then click "Remove Device", select "Unbind and Clarify Data", and click "OK".

The lock will issue a voice prompt of "Factory reset successful"

