



Important Safety Instructions

WARNING: To reduce the risk of electric shock, do not dismantle the product and do not expose the product to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

1. Read the user manual before use. Keep all instructions for future reference
2. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
3. This product is intended for indoor household use only.
4. To protect against electric shock: do not immerse unit, plug or cord in water or spray with liquids; do not place unit on windowsills or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the unit.
5. Do not use this product in the immediate vicinity of water such as bathtubs, washbaths, swimming pools etc., where the likelihood of immersion or splashing occur.
6. Keep the unit away from heat sources like radiators, heat registers, stoves or other products that produce heat. No open flame sources like candles should be placed on the unit.
7. Use only with attachments/accessories specified by the manufacturer. Use of attachments/accessories not recommended can be hazardous.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. This product is not a toy/Children should be supervised to ensure that they do not play with the appliance.
10. Do not cover the unit during use. Do not impede ventilation by covering ventilation openings with cloths, curtains or similar items.
11. Do not operate the product with a damaged cord or plug or if the product malfunctions, or is dropped or damaged in any manner.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
13. For safety reasons, do not remove any covers or attempt to access the inside of the product.
14. Do not clean the unit with any harsh chemicals as this might damage the finish. Wipe clean with a dry cloth.
15. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
16. Do not expose the batteries to excessive heat, direct sunlight, fire or similar.
17. Do not throw used batteries in your household rubbish. Dispose of it responsibly according to local regulations.

Remote Control Description

Using the remote control:

1. **POWER** Press this button to power on or power off.
2. **◀▶** Under Bluetooth and USB mode, press this button to play the previous song.
3. **▶▶** Under Bluetooth and USB mode, press this button to play the next song.
4. **-** press VOL- to decrease volume.
5. **0-9 100+**
6. **MODE** Press this button to switch modes to Bluetooth, USB, AUX-in, HD-in (ARC-in) and Optical-in.
7. **EQ** Equalizer
8. **+** Press VOL+ to increase the volume
9. **⏸** When playing music, press this button to pause it, and press again to play.
10. **↺** Return

Front/Back panels

FRONT

1. **MODE** Power On/Off (long press) Mode (USB, TF, AUX, FM Radio) (short press)
2. **VOL-** Volume down (long press) / Previous (short press)
3. **VOL+** Volume up (long press) / Next (short press)
4. **⏸** Pause/Play In bluetooth mode, long press to disconnect. Double-click, while in bluetooth mode, when there next to another duplicate soundbar to establish true wireless functionality. Double click in clock mode to alternate between 12HR and 24HR clock. U disk/TF: long press to loop single/all loops In clock mode, short press to adjust time, long press to save time Press and hold for 10-15 seconds to restore factory settings
5. **TF (Micro SD Card)** Port for TF keys (32 GB maximum)
6. **USB Flash Drive** Port for USB keys (32 GB maximum)
7. **AUX Port** Audio input
8. **DC 5V** (Charging Port)

Quick Start Guide

In your phone's Bluetooth settings select "LIFESTYLE ADVANCED SOUNDBAR" to pair

Bluetooth Mode:

1. On the Soundbar, press the 'MODE' button repeatedly until Bluetooth Mode is selected. The display will say 'BL'.
2. On your Bluetooth-enabled device, power on Bluetooth to search for the device. Select 'LIFESTYLE ADVANCED SOUNDBAR'. The display will blink, indicating that it is waiting to pair. Once pairing is successful, the display will stop flashing and display 'BL'.
3. Now you can play music from your Bluetooth-enabled device on the sound bar. Press the ◀▶ or ▶▶ button on the remote control to play the previous or next song.

Aux Input

If using the Aux cable, connect the Speaker to the audio equipment, select 'AU' by using the Mode key on the remote control or the Power/Mode key on the side panel of the soundbar. 'AU' will be displayed accompanied by 'AUX' voice prompt.

CLOCK

1. When the soundbar is on, short press the "MODE" button to switch to the clock mode. Short press ◀▶ to adjust the time, Long press ▶▶ to save the time. Double click ◀▶ to switch between 12HR & 24HR option.
2. After the Soundbar is initially paired with your smartphone, a permission request will pop up requesting permission to read text messages. After clicking allow, the time on the soundbar will automatically sync with the time on your smartphone.

FM Radio

Plug in the AUX Cable as an antenna before searching for radio channels. Press the mode button ⏸ you are prompted to FM. Short press the play button to mute, and long press the play button to automatically search for radio channels.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation.

Connection schematic

RECOMMENDED PLACEMENT

Soundbar: Under the TV (if wall-mounted) in front of the TV

Speaker Specification

Soundbar Rated Power	10W+10W (20W Total)
Input Voltage	5V = 1A
Power consumption	20W
Battery	3.7V 2400mAh
Input signal source	Optical, AUX, USB, TF, Bluetooth
Dimensions for sound bar	24" x 2.4" x 2.4"
ACCESSORIES:	Remote control, AUX Cable, Type-C Cable

140 × 210mm