

INSTRUCTION MANUAL


Charging Instructions:

Ourput voltage: DC3.7V

- This wireless speaker has a built - in rechargeable battery.
- To recharge, plug the Micro USB end of the USB cable into the charging port. Plug the other end into a USB port on your computer or other device made for USB charging.
- It takes 2-3 hours to fully charge the speaker.
- Once the speaker is fully charged the red LED will change to green color.
- When the battery charge has depleted, the speaker will turn OFF automatically.
- It is recommended to fully charge the speaker before its first use.

Wireless Connection Instructions:

- Turn on the wireless speaker using the ON/OFF button.
- Perform the audio pairing procedure your device uses (refer to your device's instructions if necessary). The speaker will show as "WS Boom Box" on your device.
- The wireless speaker will stay paired to your device until the speaker is turned off.

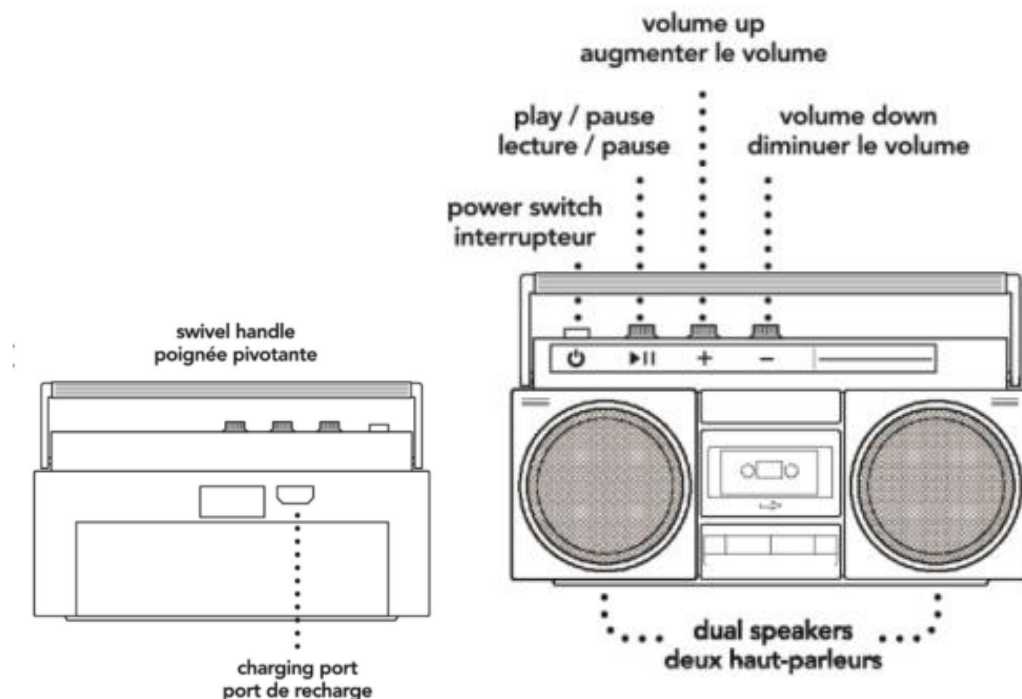

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.