




M13S Pro/Max
Portable Wireless Speaker

Product accessories



Instructions for use

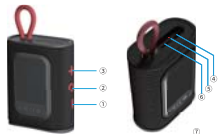

- 1. Volume + / Next track
 - 2. Power / Sleep / Alarm / Head call / Report / Music playback
 - 3. Volume - / Previous song
 - 4. Type-C Charging port
 - 5. Charging indicator
 - 6. TF card slot
- Power on:** In the off state, long press the **Power** key for 3 seconds to start the machine. The **LED** indicator will flash red three times with current tone.
- Power off:** In the power on state, long press the **Power** key for 3 seconds to shut down, and the blue LED indicator will flash red three times.
- Bluetooth pairing:** Long press the **Bluetooth** key for 3 seconds to start pairing. The LED indicator will flash blue three times.
- Answer the call:** When the phone is in call, press the **Power** key to answer the call.
- End the call:** Long press the **Power** key for 3 seconds to end the call.

Reject the call: When the phone is in call, long press the **Power** key for 3 seconds to reject the call.

Play/Pause: In the off state, press the **Power** key to switch the music between pause and play.

Low voltage: When the battery voltage of the speaker is low, the speaker will play a low voltage alarm. The alarm volume is high and the tone is continuous.

Charging: Plug in the Type-C charging cable to the charging port and the red LED indicator will start flashing.

Fully charged: The charging indicator light is green.

Volume: Use the speaker keys to increase the volume. At the maximum volume, there is a current tone.

Volume: Use the speaker keys to decrease the volume. At the minimum volume, there is a current tone.

Next song: Long press the **Volume -** key for 2 seconds.

TF card mode: Press the **Power** key and the speaker will switch to the TF card mode. Press the **Volume -** key to switch to TF card mode or **Volume +** key to switch to USB mode.

Music switching of Bluetooth:

After connecting the Bluetooth of the mobile phone: Click **Key** three times to switch between different modes.

1. In the off state, long press the **Power** key for 3 seconds to start the machine. The **LED** indicator will flash red three times with current tone.

2. In the power on state, long press the **Power** key for 3 seconds to shut down, and the blue LED indicator will flash red three times.

3. In the power on state, long press the **Power** key for 3 seconds to start pairing. The LED indicator will flash blue three times.

4. In the power on state, long press the **Power** key for 3 seconds to reject the call.

5. In the power on state, long press the **Power** key for 3 seconds to answer the call.

6. In the power on state, long press the **Power** key for 3 seconds to end the call.

The current Bluetooth mode is always on when pairing.

1. In the power on state, long press the **Power** key for 3 seconds to start pairing. The LED indicator will flash blue three times.

2. In the power on state, long press the **Power** key for 3 seconds to reject the call.

3. In the power on state, long press the **Power** key for 3 seconds to answer the call.

4. In the power on state, long press the **Power** key for 3 seconds to end the call.

5. In the power on state, long press the **Power** key for 3 seconds to start pairing. The LED indicator will flash blue three times.

6. In the power on state, long press the **Power** key for 3 seconds to reject the call.

7. In the power on state, long press the **Power** key for 3 seconds to answer the call.

8. In the power on state, long press the **Power** key for 3 seconds to end the call.

Specifications

Name:	Portable Wireless Speaker
Model:	M13S Pro/Max
Speaker Specification:	40-5W
Version:	V3.3
Connection range:	200m
Rated Input:	5V 2251A
Battery capacity:	1800mAh
Shell Material:	ABS plastic/mesh
Product Size:	100*77*42mm
Product Weight:	222g

Frequently Asked Questions and Matters

- Unable to turn on speaker:**
Check if the speaker has no power, if there is no power, please charge it first.
- Unable to connect with device:**
Check if the speaker is connected to the third device, if so, disconnect it first.
Connect, if you still can't connect, reboot and try again.
- Precautions:**
- Keep out of reach of children
 - Do not hit the speaker
 - Do not charge for too long, so as not to damage the battery

Precautions

- Please fully charge the product before using it for the first time.
 - Do not dismantle or repair or modify this product for any reason, otherwise it may cause fire, electronic breakdown or even completely damage the product.
 - If charging is completed, please disconnect the charger from the device, and unplugging the charger do not exceed 12 hours.
 - Please do not dispose of the old battery in the old household garbage. Improper disposal of the battery may damage the battery. In case of fire or explosion, please dispose of this product, battery and other accessories in accordance with local regulations.
 - The battery must not be disassembled, impacted, squeezed or thrown into fire. If it is severely swollen, do not continue to use it.
 - Do not repair this product yourself.
 - If consumers use a power adapter to charge, they should purchase a matching power adapter to obtain CCC certification and meet the standard power adapter.
 - Batteries must not be exposed to excessive heat.
- Note: Unsolicited applicator.

Warranty Service

Please read the following terms carefully to protect your rights. You are required to have the best after-sales service.

1. Free return/exchange conditions

- The appearance/function does not meet your expectations within 30 days from the date of purchase.
- Any quality problems of the products within 12 months from the date of purchase. In the above cases, please email Sanag Customer Service Team and we will provide a solution within 24 hours.

2. How to contact us?

- ①: Please click the store name on the product page, then click "Ask a question" button to contact us.
- ②: (Account Service) - (Order History) - (Contact Seller)
- ③: sanag@idid.com

3. After-sales service cannot be provided even under the warranty period under the following conditions:

- ① Damage caused by personal reasons:
- Product failure due to self-administration or repair
- ② Product failure by force majeure (fire, flood, earthquake and so on)

Inspectors

This product has been tested by our company's quality control department and its performance parameters are in compliance with technical standards.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable mode without restriction.