




Intelligent Music Boxing Target User Manual

Matters needing attention

1. Please fix this product on a sturdy and reliable wall. When striking, please strike within the striking area. It is strictly prohibited to hit the corners to avoid hand injury or equipment damage
2. This product is suitable for adult use. Children should be guided to use it under adult supervision.
3. Beginners should not use excessive force to avoid hand injuries. During exercise, first pay attention to safety and strictly prohibit leg or knee strikes.
4. If the device cannot be turned on or there is an abnormality, please check if the battery is too low. It should be charged in a timely manner, and the charging time should not exceed 8 hours. If it is not used for a long time, it is recommended to charge it once every 1-2 months.
5. This product is not waterproof. When wiping boxing targets, use a dry cloth and do not get wet.
6. Please keep the instruction manual properly for emergency use.

Product Introduction

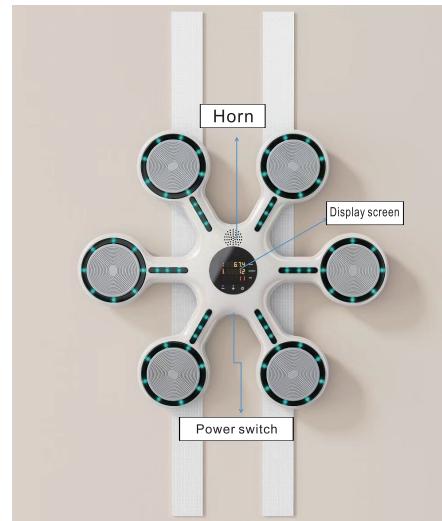

Instructions for use

1. Turn on the power switch to automatically turn on the machine. Long press to turn on the machine
2. After connecting Bluetooth, long press (+) to increase the volume and single click the next track, and long press (-) to decrease the volume and single click the previous track of the music
3. After the device is turned on, the lights light up and music plays. You can start hitting with the light, hitting correctly 20 times in a row for 3 seconds, reducing the time by 0.5 seconds. Automatic shifting and so on. The fastest speed for 6th gear is 0.5 seconds per time!

Installation instructions

Installation method 1:

1. Peel off the EVA patch on one side and stick it on the back of the product within 7 circles, finding the appropriate position according to the size of the product
2. Tear open the other side and stick it on a smooth wall surface
*Due to the strong adhesion of EVA, be careful not to stick it on wallpaper or painted walls to avoid damaging them

Installation method 2:

1. Peel off the EVA sticker on one side and stick it inside the 7 circles on the back of the product, then tear off the EVA back sticker, and then peel off the 4 circular Velcro stickers and stick them on the 4 opposite EVA stickers (as shown in the picture)



2. Align the long Velcro with the circular Velcro on the back of the product (as shown in the above picture)

Troubleshooting

Number	Fault phenomenon	Cause analysis	Exclusion method
1	No light or sound	The product is not turned on	Check if the power button is turned on
2	No light or sound	Battery depleted	Please charge
3	Flashing lights	Low battery level	Please charge
4	Internal collision sound of equipment	Emitted by internal activity force structure	Normal phenomenon

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.